

This manual should be considered a permanent part of the motorcycle and should remain with the motorcycle when resold or otherwise transferred to a new owner or operator. The manual contains important safety information and instructions which should be read carefully before operating the motorcycle.

FOREWORD

Motorcycling is one of the most exhilarating sports and to ensure your riding enjoyment, you should become thoroughly familiar with the information presented in this Owner's Manual before riding the motorcycle.

The proper care and maintenance that your motorcycle requires is outlined in this manual. By following these instructions explicitly you will ensure a long trouble free operating life for your motorcycle. Your authorized Suzuki dealer has experienced technicians that are trained to provide your machine with the best possible service with the right tools and equipment.

All information, illustrations and specifications contained in this manual are based on the latest product information available at the time of publication. Due to improvements or other changes, there may be some discrepancies between information in this manual and your motorcycle. Suzuki reserves the right to make changes at any time.

Please note that this manual applies to all specifications or all respective destinations and explains all equipment. Therefore, your model may have different standard features than shown in this manual.

SUZUKI MOTOR CORPORATION

IMPORTANT

BREAK-IN (RUNNING-IN) INFORMATION FOR YOUR MOTORCYCLE

The first 1600 km (1000 miles) are the most important in the life of your motorcycle. Proper break-in operation during this time will help ensure maximum life and performance from your new motorcycle. Suzuki parts are manufactured of high quality materials, and machined parts are finished to close tolerances. Proper break-in operation allows the machined surfaces to polish each other and mate smoothly.

Motorcycle reliability and performance depend on special care and restraint exercised during the break-in period. It is especially important that you avoid operating the engine in a manner which could expose the engine parts to excessive heat.

Please refer to the BREAK-IN (RUNNING-IN) section for specific break-in recommendations.

**▲ WARNING / ▲ CAUTION / NOTICE /
NOTE**

Please read this manual and follow its instructions carefully. To emphasize special information, the symbol ▲ and the words **WARNING**, **CAUTION**, **NOTICE** and **NOTE** have special meanings. Pay particular attention to messages highlighted by these signal words:

▲ WARNING

Indicates a potential hazard that could result in death or serious injury.

▲ CAUTION

Indicates a potential hazard that could result in minor or moderate injury.

NOTICE

Indicates a potential hazard that could result in vehicle or equipment damage.

NOTE: Indicates special information to make maintenance easier or instructions clearer.



TABLE OF CONTENTS

SAFETY INFORMATION	1
CONTROLS, EQUIPMENT AND ADJUSTMENTS	2
INSPECTION AND MAINTENANCE	3
TROUBLESHOOTING	4
STORAGE PROCEDURE AND MOTORCYCLE CLEANING	5
CONSUMER INFORMATION	6
SPECIFICATIONS	
INDEX	

SAFETY INFORMATION

SAFETY GUIDELINES	1-2
RIDING PRECAUTIONS	1-13
ABOUT THE BRAKES	1-18
FUEL GUIDELINES	1-22
ACCESSORY USE AND MOTORCYCLE LOADING	1-25
MODIFICATION	1-30

SAFETY INFORMATION

SAFETY GUIDELINES

MOST ACCIDENTS CAN BE AVOIDED

Please follow the basic precautions described in this chapter regarding daily use, and ensure that you ride carefully.

To prevent crashes, always pay the utmost attention when riding.

- Motorcycle crashes sometimes occur because other drivers do not notice you. Please be careful of the following when riding.
 - Be aware that crashes often occur when a car traveling towards a motorcycle turns left in front of the motorcycle.
 - Do not ride in other drivers' blind spots.
- Do not turn the handlebars swiftly or ride with one hand, as this may cause skidding or falls.

- To minimize injuries caused by falls or crashes, wear protective equipment such as helmets and gloves. For information on appropriate equipment and clothing, see "PROTECTIVE APPAREL" on page 1-4.
- When riding, grip the handlebars with both hands and place your feet on the footrests. Passengers should grip the rider's body firmly with both hands, or hold onto the seat strap or grab bar, as equipped, and place their feet on the rear footrests.
- Read and follow all the labels on the motorcycle. Make sure you understand all of the labels. Do not remove any labels from the motorcycle.
- The accessories you use with your motorcycle and the manner in which you load your gear onto the bike might create hazards. Aerodynamics, handling, balance, and cornering clearance can suffer, and the suspension and tires can be overloaded. Read the "ACCESSORY USE AND MOTORCYCLE LOADING" section on page 1-25.

Routine checks and periodic inspections

To prevent crashes or breakdowns, be sure to carry out routine checks and periodic inspections.

If the motorcycle makes an unusual sound, smells, or leaks fluid, have it inspected by a Suzuki dealer. For information on routine checks and periodic inspections, see "INSPECTION AND MAINTENANCE" on page 3-2.

WARNING

Riding at excessive speeds increases your chances of losing control of the motorcycle, which can result in a crash.

Always ride at a speed that is proper for the terrain, visibility and operating conditions, and your skills and experience.

WARNING


If you remove even one hand or foot from the motorcycle, you can reduce your ability to control the motorcycle. This could cause you to lose your balance and fall off the motorcycle. If you remove a foot from a footrest, your foot or leg may come in contact with the rear wheel. This could injure you or cause a crash.

Always keep both hands on the handlebars and both feet on the footrests of your motorcycle during operation.

PROTECTIVE APPAREL

Description

Both rider and passenger should be sure to wear helmets, as well as clothing and protective equipment that affords a high level of protection. Refer to the following when obtaining this equipment.

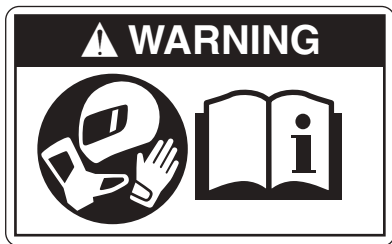

To reduce the risk of injury:

- **Wear a helmet, eye protection, and protective clothing.**
- **Read owner's manual carefully.**

Helmet

- Be sure to wear a helmet and tighten the strap firmly. Choose a helmet that fits your head snugly but does not exert excessive pressure.
- Be sure to wear a helmet shield or goggles. These items protect the field of view from the wind, and also protect the eyes against airborne insects, dust, and small stones thrown up by vehicles driving ahead of you.

WARNING

If you don't wear a helmet, you have an increased risk of death or severe injury in a crash. If you wear a helmet that doesn't fit properly or is not securely strapped on, the helmet may not provide the protection for which it was designed.

The rider and passenger should be sure to wear a helmet that fits properly and is securely strapped on.

Riding gear

- Wear protective equipment and clothing that affords a high level of protection. Wear bright, eye-catching long-sleeved uppers and full-length trousers that expose a minimum of skin. This will reduce the impact of unexpected events on the body. Loose, fancy clothing can be uncomfortable and unsafe when riding your motorcycle. Choose good quality motorcycle riding apparel when riding your motorcycle.
- Be sure to wear gloves. Gloves made of friction-resistant leather are suitable.
- Wear footwear that is easy to operate the motorcycle in, and which covers your ankles.
- When necessary, wear jackets and trousers fitted with protectors.

WARNING

If the person in the rear seat wears a long jacket or coat, they may obscure the tail light or turn signal light. This is dangerous as following vehicles may not be aware of you.

People riding in the rear seat should avoid wearing long jackets or coats if possible. If wearing such garments, place the tails of the garment under the buttocks so that they do not obscure the tail light or turn signal light.

Gear of a passenger

A passenger needs the same protection that you do, including a helmet and proper clothing. The passenger should not wear long shoe laces or loose pants that could get caught in the wheel or the chain.

SPECIAL SITUATIONS REQUIRE SPECIAL CARE

Windy day

When riding in a strong crosswind, which can occur at the entrance to a tunnel, on a bridge, or when passing or being passed by large trucks, the motorcycle may be blown by the crosswind.

Control your speed, and grip the handlebars firmly when riding.

WARNING

Sudden side winds, which can occur when being passed by larger vehicles, at tunnel exits or in hilly areas, can cause you to lose control of the motorcycle.

Reduce your speed and be alert to the possibility of sudden side winds.

Rainy day, Snowy day

- When the road surface is wet, loose, or rough, you should brake with care. Braking distances increase on a rainy day. Stay off the painted surface marks, man-hole covers, and greasy-appearing areas, as they can be especially slippery. Use extra caution at railway crossings and on metal gratings and bridges. When it starts to rain, any oil or grease on the road rises to the surface of the water. Pull over and wait a few minutes until this oil film is washed away before riding. Whenever in doubt about road conditions, slow down!

- Slow down before entering corners. In these situations, the traction available between your tires and the road surface is limited. When you're leaned over in a corner, avoid braking. Straighten up before braking.

NOTE: After the motorcycle has been washed or when it has traveled through puddles, the brakes may grip poorly. If the brakes grip poorly, travel at low speed while paying sufficient attention to the front and rear of the motorcycle, operating the brakes lightly until they grip firmly.

WARNING

Over braking when traction is limited will cause your tires to skid, possibly resulting in loss of directional control or causing you and your motorcycle to fall over.

Brake carefully when traction is limited.

Flooded road

Do not ride your motorcycle on flooded roads.

If you do ride your motorcycle on a flooded road, go slowly checking braking operation. After riding on a flooded road, ask your Suzuki dealer to check for the following:

- Braking efficiency
- Wet connectors, wiring and water in the battery box
- Poor lubrication for bearings etc.
- Level and appearance of gear oil (if oil is whitish, there is water into the oil and an oil change is required)

NOTICE

Riding the motorcycle on a flooded road can cause the engine to stop running, and can cause failure of electric parts, drive belt slipping and engine damage.

Do not ride your motorcycle on flooded roads.

KNOW YOUR LIMITS

Always ride within the boundaries of your own skills. Knowing these limits and staying within them will help you avoid crashes.

A major cause of crashes involving only a motorcycle (and no other vehicles) is going too fast through a turn. Before entering a turn, select an appropriately low cornering speed and appropriate cornering angle.

Even on straight roads, ride at a speed that is appropriate for the traffic, visibility and road conditions, your motorcycle, and your experience.

Riding a motorcycle safely requires that your mental and physical skills are fully part of the experience. You should not attempt to operate a motor vehicle, especially one with two wheels, if you are tired or under the influence of alcohol or other drugs. Alcohol, illegal drugs, and even some prescription and over-the-counter drugs can cause drowsiness, loss of coordination, loss of balance, and especially the loss of good judgment. If you are tired or under the influence of alcohol or other drugs, **PLEASE DO NOT RIDE** your motorcycle.

PRACTICE AWAY FROM TRAFFIC

Your riding skill and your mechanical knowledge form the foundation for safe riding practices. We suggest that you practice riding your motorcycle in a non-traffic situation until you are thoroughly familiar with your machine and its controls.

CARRYING A PASSENGER

This motorcycle has a capacity of two people. Do not attempt to ride while carrying more than one passenger. Attempting to do so is very dangerous.

How to carry a passenger

Carrying a passenger, when done correctly, is a great way to share the joy of motorcycling. You will have to alter your riding style somewhat since the extra weight of a passenger will affect handling and braking.

You may also need to adjust tire pressures and suspension; please refer to the Tire Pressure and Loading section and the Suspension section for more details.

- **TIRE PRESSURE AND LOADING:**
(👉 3-71)
- **SUSPENSION ADJUSTMENT:**
(👉 2-119)
- **LOADING LIMIT:** (👉 1-27)

Before you invite someone to be a passenger on your motorcycle, you need to be thoroughly familiar with motorcycle operation.

Ensure that passengers understand the following before they ride with you.

- The passenger should always hold onto your waist or hips, or onto the seat strap or grab bar, as equipped.
- Ask your passenger not to make any sudden movements. When you lean going around a corner, the passenger should lean with you.
- The passenger should always keep his or her feet on the footrests, even when you are stopped at a light. To help prevent burn injuries, warn your passenger not to contact the muffler when mounting or dismounting your motorcycle.

ABOUT CARBON MONOXIDE

To prevent carbon monoxide poisoning, start the engine in a well-ventilated location.

Contained in exhaust gas, carbon monoxide is a colorless odorless gas, and thus is not noticed easily.

WARNING

Exhaust gas contains carbon monoxide, a dangerous gas that is difficult to detect because it is colorless and odorless. Breathing carbon monoxide can cause death or severe injury.

Never start the engine or let it run indoors or where there is little or no ventilation.

BE STREET SMART

Always heed speed limits, local laws, and the basic rules of the road. Set a good example for others by demonstrating a courteous attitude and a responsible riding style.

CONCLUSION

To avoid crashes, caution and judgment appropriate to the environment is required. In addition to the state of the traffic, the road, and the weather, the state of the motorcycle also changes. Additionally, the movement of other vehicles is difficult to predict, so always be attentive.

Circumstances beyond your control could lead to a crash. You need to prepare for the unexpected by wearing a helmet and other protective gear, and learning emergency braking and swerving techniques to minimize the damage to you and your machine.

RIDING PRECAUTIONS

BREAK-IN

Description

The first 1600 km (1000 miles) is the most important in the life of your motorcycle.

Proper operation during this break-in period will help assure maximum life and performance from your new motorcycle.

During the break-in period, avoid needless idling, sudden acceleration or deceleration, abrupt steering changes, or sudden braking.

The following guidelines explain proper break-in procedures.

Maximum Engine Speed Recommendation

The table below shows the maximum engine speed recommendation during the break-in period.

Initial	800 km (500 miles)	Below 5500 r/min
Up to	1600 km (1000 miles)	Below 8500 r/min
Over	1600 km (1000 miles)	Below Red zone

Vary the engine speed

Vary the engine speed during the break-in period. This allows the parts to “load” (aiding the mating process) and then “unload” (allowing the parts to cool). Although it is essential to place some stress on the engine components during break-in, you must be careful not to load the engine too much.

Breaking in the new tires

New tires need proper break-in to assure maximum performance, just as the engine does. Wear- in the tread surface by gradually increasing your cornering lean angles over the first 160 km (100 miles) before attempting maximum performance. Avoid hard acceleration, hard cornering, and hard braking for the first 160 km (100 miles).

WARNING

Failure to perform break-in of the tires could cause tire slip and loss of control.

Use extra care when riding on new tires. Perform proper break-in of the tires as described in this section and avoid hard acceleration, hard cornering, and hard braking for the first 160 km (100 miles).

Observe Your Initial and Most Critical Service

The initial service (break-in maintenance) is the most important service your motorcycle will receive. During break-in operation, all of the engine components will have mated together and seated. Maintenance required as part of the initial service includes correction of all adjustments, tightening of all fasteners and replacement of dirty oil. Timely performance of this service will help make sure you get the best service life and performance from the engine.

NOTE: The 1000 km (600 miles) service should be performed as outlined in the INSPECTION AND MAINTENANCE section of this Owner's Manual. Pay particular attention to the CAUTION and WARNING messages in that section.

ON HILLS

Riding on a slope

- When climbing steep hills, the motorcycle may begin to slow down and show lack of power. At this point you should shift to a lower gear so that the engine will again be operating in its normal power range. Shift rapidly to prevent the motorcycle from losing momentum.
- When descending a long, steep slope, use the engine compression to assist the brakes by shifting to a lower gear. Continuous brake application can overheat the brakes and reduce their effectiveness.
- Be careful not to allow the engine to overrev when descending a slope.

WARNING

If you use the brakes continuously on long downhill roads, the brakes may overheat, reducing their effectiveness.

Use engine braking on long downhill roads and avoid using the brakes continuously.

NOTICE

Holding the motorcycle stopped with throttle and clutch lever operation on inclines can damage the motorcycle's clutch.

Use the brakes when stopping the motorcycle on inclines.

PARKING

How to park

To prevent theft, be sure to lock the handlebars and remove the key when leaving the motorcycle. See "IGNITION SWITCH" on page 2-82.

- Park the motorcycle in a location where it will not interfere with traffic.
- Do not park illegally.
- Do not touch the muffler or the engine when the engine is running, or for some time after it has stopped.
- Park the motorcycle in a flat location, and turn the handlebars fully to the left. Avoid parking the motorcycle with the handlebars turned to the right.
- Park the motorcycle in a location where other people will not touch the muffler or the engine.
- When parking the motorcycle on an unstable surface such as an incline, on gravel, on an uneven surface, or on soft ground is unavoidable, be careful when leaning or moving it.

WARNING

The catalytic converter installed in the muffler heats up to a very high temperature, and may cause fires if placed in close proximity to flammable material when the motorcycle is parked.

When parking, check that there is no flammable material such as dry grass, lumber, paper, or oil in the vicinity.

CAUTION

A hot muffler can cause severe burns. The muffler will be hot enough to cause burns for some time after stopping the engine.

Park the motorcycle where pedestrians or children are not likely to touch the muffler.

NOTE:

- *If the motorcycle is to be parked on the side stand on a slight slope, the front end of the motorcycle should face “up” the incline to avoid rolling forward off the side stand. You may leave the motorcycle in 1st gear to help prevent it from rolling off the side stand. Shift to neutral before starting the engine.*
- *If an optional anti-theft lock such as a U-shape lock, brake disk lock or chain is used to avoid theft, be sure to remove the anti-theft lock before moving the motorcycle.*

WHEN PUSHING THE MOTORCYCLE

Turn OFF the ignition switch when pushing the motorcycle.

ABOUT THE BRAKES

WHAT IS ABS?

ABS is a device that controls braking during riding to prevent the wheels from locking up.

Braking is performed using the brake lever and brake pedal in the same manner as on a motorcycle without ABS.

ABS controls the brake pressure electronically. This system monitors the rotational speed of the wheels and operates to prevent wheel lock-up by reducing brake pressure when wheel lock-up is detected.

No special braking operation is required, as the ABS operates continuously except at low speeds below 8 km/h (5 mph) and when the battery has run down. The brake lever and brake pedal vibrate gently when the ABS activates to prevent wheel lock-up when the brakes are applied. This is not an abnormality. Continue to apply the brakes.

The braking distance with ABS may be longer than that of a motorcycle without ABS depending on misjudgment, incorrect operation, and road surface and weather conditions. Do not become overly reliant on the ABS.

Changing the tire size affects the rotational speed of the wheels, so the ABS may not function properly. Be sure to use tires of the specified size. Refer to "TIRES" on page 3-68.

WARNING

Failure to use good judgment with ABS can be hazardous. ABS cannot make up for bad road conditions, bad judgement, or improper operation of the brakes.

Remember that ABS will not compensate for poor judgment, incorrect braking techniques, or the need to slow down over bad roads or in poor weather conditions. Use good judgment and do not ride faster than conditions will safely allow.

NOTE: In some situations, a motorcycle with ABS may require a longer stopping distance to stop on loose or uneven surfaces than an equivalent motorcycle without ABS. Furthermore, as with a motorcycle without ABS, the slipperier the surface, the longer the braking distance.

HOW TO USE THE BRAKE SYSTEM

1. Twist the throttle grip away from yourself to close the throttle completely.
2. Apply the front and rear brakes evenly and at the same time.
3. Downshift through the gears as road speed decreases.
4. Select neutral with the clutch lever squeezed toward the grip (disengaged position) when the motorcycle is almost completely stopped.

WARNING

Sudden braking or sudden downshifts can impair riding stability and cause side-slips and tumbles.

Avoid unnecessary sudden braking and sudden downshifts. Extreme caution is required when riding on slippery or poorly maintained roads while tilting the motorcycle to the side.

WARNING

Inexperienced riders tend to underuse the front brake. This can cause excessive stopping distance and lead to a crash. Using only the front or rear brake can cause skidding and loss of control.

Apply both brakes evenly and at the same time.

WARNING

Hard braking on wet, loose, rough, or other slippery surfaces can cause wheel skid and loss of control.

Brake lightly and with care on slippery or irregular surfaces.

WARNING

Following another vehicle too closely can lead to a collision. As vehicle speeds increase, stopping distance increases progressively.

Always maintain a safe stopping distance between you and the vehicle in front of you.

WARNING

Hard braking while turning may cause wheel skid, loss of control and/or capsize.

Brake before you begin to turn.

WARNING

Braking while turning the motorcycle can be hazardous, whether or not your motorcycle is equipped with ABS. ABS can not control wheel side-slips that occur when you brake hard while turning and the side-slips could cause loss of control.

Slow down sufficiently in a straight line before you begin to turn and avoid other than slight braking while turning.

FUEL GUIDELINES

Use premium unleaded gasoline with an octane rating of 95 or higher (Research method). Using unleaded premium gasoline extends the lifespan of spark plugs and exhaust system parts.

(Canada)

Your motorcycle requires premium unleaded gasoline with a minimum pump octane rating of 90 ((R+M)/2 method). In some areas, the only fuels that are available are oxygenated fuels.

Fuel used: Unleaded premium gasoline

**Fuel tank capacity: 19.0 L
(5.0/4.2 US/Imp. gal)**

NOTE:

- *The engine of this model is designed to use premium unleaded gasoline.*
- *If the engine develops some trouble like lack of acceleration or insufficient power, the cause may be the fuel. In such case, try changing to a different gas station. If the situation is not improved by changing, consult your Suzuki dealer.*

**Oxygenated fuel recommendation
(Canada, UK, EU)**

Oxygenated fuels which meet the minimum octane requirement and the requirements described below may be used in your motorcycle without jeopardizing the New Vehicle Limited Warranty or the Emission Control System Warranty.

NOTE: Oxygenated fuels are fuels which contain oxygen-carrying additives such as alcohol.

Gasoline / Ethanol blends

Blends of unleaded gasoline and ethanol (grain alcohol), also known as “GASOHOL”, are commercially available in some areas. Blends of this type may be used in your motorcycle if they are no more than 10% ethanol. Make sure this gasoline-ethanol blend has octane ratings no lower than those recommended for gasoline.

Use the recommended gasoline which conforms to the following labels. (UK, EU)



NOTE:

- *To help minimize air pollution, Suzuki recommends that you use oxygenated fuels.*
- *Be sure that any oxygenated fuel you use has recommended octane ratings.*
- *If you are not satisfied with the drivability of your motorcycle when you are using an oxygenated fuel, or if engine pinging is experienced, substitute another brand as there are differences between brands.*

NOTICE

Spilled gasoline containing alcohol can damage the painted surfaces of your motorcycle.

Be careful not to spill any fuel when filling the fuel tank. Wipe spilled gasoline up immediately.

NOTICE

Do not use leaded gasoline.

Use of leaded gasoline causes the catalytic converter to malfunction.

ACCESSORY USE AND MOTORCYCLE LOADING

ACCESSORIES

How to choose

The addition of unsuitable accessories can lead to unsafe operating conditions. It is not possible for Suzuki to test each accessory on the market or combinations of all the available accessories; however, your dealer can assist you in selecting quality accessories and installing them correctly. Use extreme caution when selecting and installing the accessories on your motorcycle and consult your Suzuki dealer if you have any questions.

Additionally, when attaching accessories, ensure that they are within the load capacity. For information on the load capacity, see "LOADING" on page 1-27.

WARNING

Improper installation of accessories or modification of the motorcycle may cause changes in handling which could lead to a crash.

Never use improper accessories, and make sure that any accessories that are used are properly installed. All parts and accessories added to the motorcycle should be genuine Suzuki parts designed for use on this motorcycle. Install and use them according to their instructions. If you have any questions, contact your Suzuki dealer.

Accessory installation guidelines

- Install aerodynamic-affecting accessories, such as a fairing, windshield, backrests, saddlebags, and travel trunks, as low as possible, and as close to the motorcycle and as near the center of gravity as is feasible. Check that the mounting brackets and other attachment hardware are rigidly mounted.
- Inspect for proper ground clearance and bank angle. Inspect that the accessory does not interfere with the operation of the suspension, steering or other control operations.
- Accessories fitted to the handlebars or the front fork area can create serious stability problems. This extra weight will cause the motorcycle to be less responsive to your steering control. The weight may also cause oscillations in the front end and lead to instability problems. Accessories added to the handlebars or front fork of the machine should be as light as possible and kept to a minimum.

- Do not pull a trailer or sidecar. This motorcycle is not designed to pull a trailer or sidecar.
- Some accessories may make it difficult to achieve the correct riding position, or cause usability to deteriorate. Check that you can attain the correct riding position.
- Select only electrical accessories which do not exceed the motorcycle's electrical system capacity. Severe overloads may damage the wiring harness or create hazardous situations. Use genuine Suzuki accessories.

LOADING

Loading limit

- Loading the motorcycle will make the handling and safety characteristics of the motorcycle different than when it is not loaded.
- Never exceed the G.V.W.R. (Gross Vehicle Weight Rating) of this motorcycle. The G.V.W.R. is the maximum combined weight of the machine, accessories, payload, rider and passenger. When selecting your accessories, keep in mind the weight of the rider as well as the weight of the accessories. The additional weight of the accessories may not only create an unsafe riding condition but may also affect the riding stability.

G.V.W.R.: 400 kg (880 lbs)
at the tire pressure (cold)

Front: 250 kPa (2.50 kgf/cm², 36 psi)

Rear: 290 kPa (2.90 kgf/cm², 42 psi)

WARNING

Overloading or improper loading can cause loss of motorcycle control and a crash.

Follow loading limits and loading guidelines in this manual.

Loading guidelines

This motorcycle is primarily intended to carry small items when you are not riding with a passenger. Follow the loading guidelines below:

- When loading luggage onto the rear seat, fix it firmly in place with rubber straps, etc. Do not overload with luggage.
- Balance the load between the left and right side of the motorcycle and fasten it securely.
- Keep cargo weight low and as close to the center of the motorcycle as possible.
- Adjust suspension setting as necessary.
- Do not attach large or heavy items to the handlebars, front forks or rear fender.

- Do not attach luggage compartments, load boxes, or other items that protrude from the tail end outside the body of the motorcycle.
- Check that both tires are properly inflated to the specified tire pressure for your loading conditions. Refer to "TIRE PRESSURE AND LOADING" on page 3-71.
- Improperly loading your motorcycle can reduce your ability to balance and steer the motorcycle. Ride more slowly when carrying luggage or with accessories attached.

WARNING

If luggage touches a hot muffler or engine, it may cause the luggage or motorcycle to catch fire.

When loading luggage on the motorcycle, do not allow it to touch hot parts.

WARNING

Placing objects in the space behind the fairing can interfere with steering and can cause loss of control.

Do not carry any objects in the space behind the fairing.

MODIFICATION

Do not make improper modifications.

Modifications related to the structure or functioning of this motorcycle may impair its maneuverability, increase exhaust noise, or even reduce the life of the vehicle. In addition to offend against the law, such modifications may be a nuisance to others.

The frame of this motorcycle is made of an aluminum alloy. Therefore, never make any modifications such as drilling or welding to the frame as it weakens the frame significantly. This could result in an unsafe vehicle operating condition and subsequent crash. Suzuki will not be responsible in any way for personal injury or damage to the motorcycle caused by frame modifications. Bolt-on-accessories that do not modify the frame in any way may be installed, provided that you do not exceed the loading limit described in this section.

Modifications to the motorcycle are not covered by warranty.

- This motorcycle complies with emission regulations. It is equipped with a catalytic converter that cleans exhaust gases. Altering the muffler may make this motorcycle non-compliant with emission regulations. Consult a Suzuki dealer when replacing the muffler.
- Mufflers are engraved with a “Suzuki” mark to indicate that they are genuine Suzuki parts.
- Do not self-tune the engine or remove parts. Consult a Suzuki dealer regarding engine tuning.
- We recommend that you use genuine Suzuki parts and specified / recommended oils and lubricants for your motorcycle. Genuine parts are thoroughly inspected and are made to be suitable for Suzuki motorcycles.
- Comply with loading limits when attaching luggage or accessories to the motorcycle.

WARNING

Modification to an aluminum alloy frame, such as drilling or welding, weakens the frame. This could result in an unsafe operating condition and may lead to a crash.

Never make any modifications to the frame.





CONTROLS, EQUIPMENT AND ADJUSTMENTS


NAMES OF PARTS AND LAYOUT DIAGRAM (PICTURE INDEX)	2-2
INSTRUMENT PANEL	2-24
RIDING ASSISTANCE SYSTEM SETTINGS	2-75
IGNITION SWITCH	2-82
HANDLEBAR SWITCHES	2-89
STARTING THE ENGINE	2-94
REFUELING	2-100
SHIFTING GEARS	2-102
BRAKE LEVER	2-111
REAR BRAKE PEDAL	2-113
SEAT	2-114
SIDE STAND	2-118
SUSPENSION ADJUSTMENT	2-119

CONTROLS, EQUIPMENT AND ADJUSTMENTS

NAMES OF PARTS AND LAYOUT DIAGRAM (PICTURE INDEX)

LOCATION OF PARTS


Around the Handle GSX-S1000

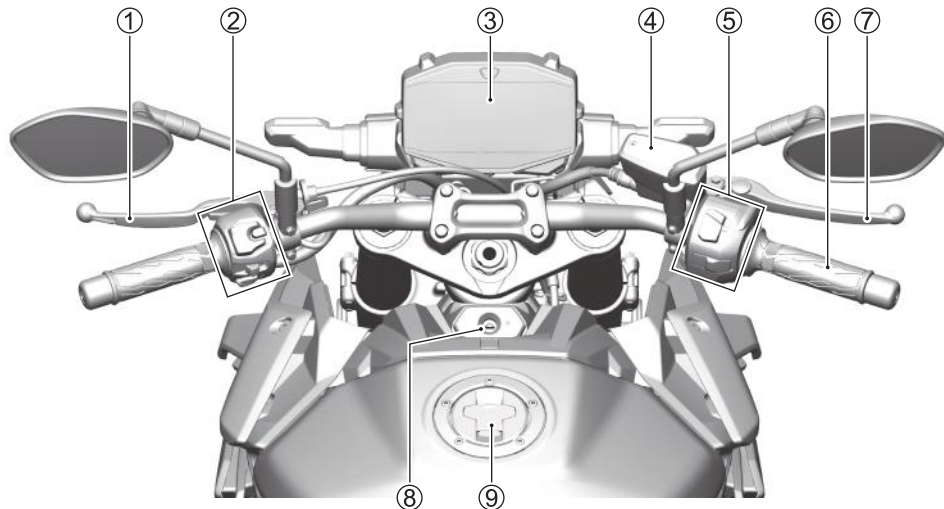

Around the Handle GSX-S1000

- ① Clutch lever
- ② Left handlebar switches ( 2-14)
- ③ Instrument panel ( 2-24)
- ④ Front brake fluid reservoir ( 3-57)
- ⑤ Right handlebar switches ( 2-14)
- ⑥ Throttle grip
- ⑦ Front brake lever ( 2-111)
- ⑧ Ignition switch ( 2-82)
- ⑨ Fuel tank cap ( 2-100)


Around the Handle GSX-S950

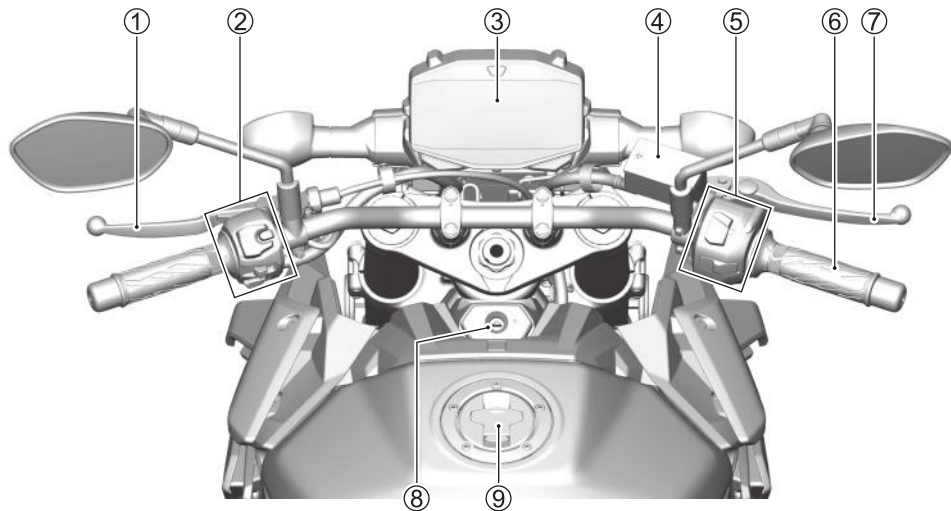

Around the Handle GSX-S950

- ① Clutch lever
- ② Left handlebar switches ( 2-14)
- ③ Instrument panel ( 2-24)
- ④ Front brake fluid reservoir ( 3-57)
- ⑤ Right handlebar switches ( 2-14)
- ⑥ Throttle grip
- ⑦ Front brake lever ( 2-111)
- ⑧ Ignition switch ( 2-82)
- ⑨ Fuel tank cap ( 2-100)


Left Side View GSX-S1000

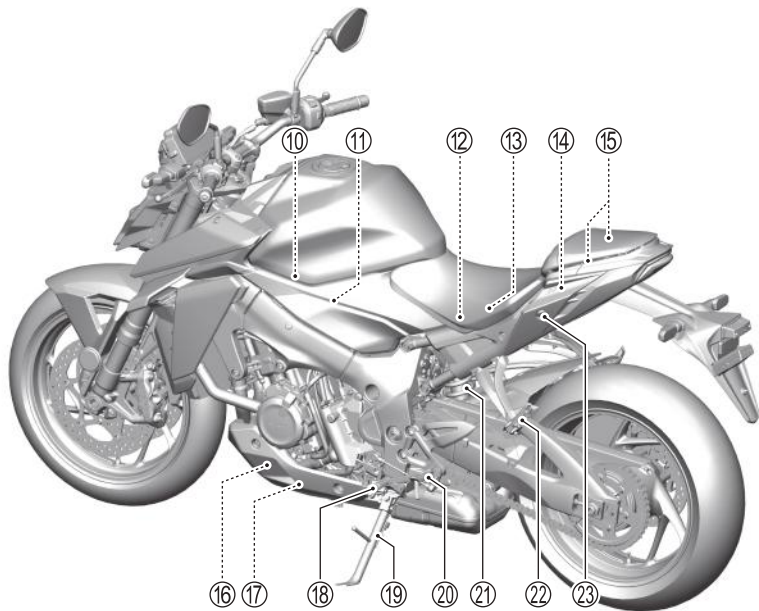

Left Side View GSX-S1000

- ⑩ Air cleaner (👉 3-25)
- ⑪ Air cleaner drain plug (👉 3-29)
- ⑫ Battery (👉 3-20)
- ⑬ Fuses (👉 3-91)
- ⑭ Tools (👉 3-13)
- ⑮ Helmet holders (👉 2-116)
- ⑯ Engine oil filter (👉 3-30)
- ⑰ Engine oil drain plug (👉 3-30)
- ⑱ Gearshift lever (👉 2-102, 3-65)
- ⑲ Side stand (👉 2-118)
- ⑳ Footrests
- ㉑ Rear suspension (👉 2-124)
- ㉒ Passenger footrests
- ㉓ Seat lock (👉 2-115)


Left Side View GSX-S950

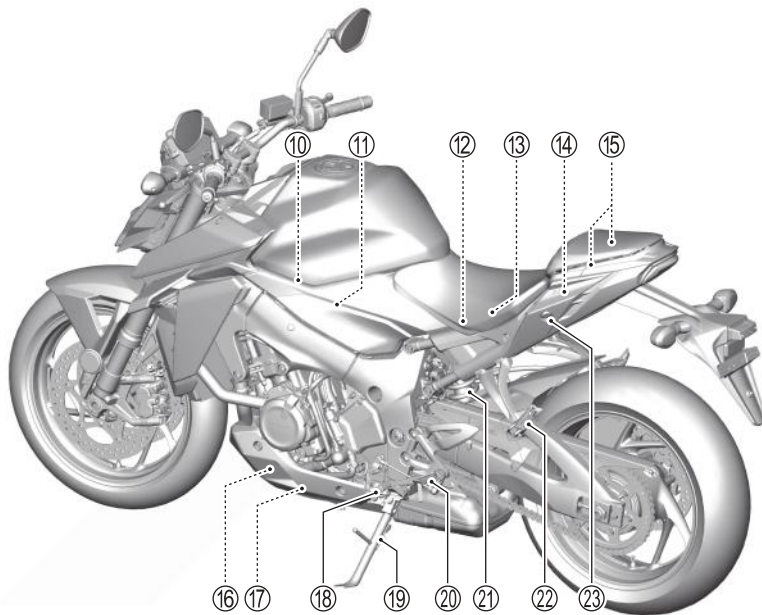

Left Side View GSX-S950

- ⑩ Air cleaner (👉 3-25)
- ⑪ Air cleaner drain plug (👉 3-29)
- ⑫ Battery (👉 3-20)
- ⑬ Fuses (👉 3-91)
- ⑭ Tools (👉 3-13)
- ⑮ Helmet holders (👉 2-116)
- ⑯ Engine oil filter (👉 3-30)
- ⑰ Engine oil drain plug (👉 3-30)
- ⑱ Gearshift lever (👉 2-102, 3-65)
- ⑲ Side stand (👉 2-118)
- ⑳ Footrests
- ㉑ Rear suspension (👉 2-124)
- ㉒ Passenger footrests
- ㉓ Seat lock (👉 2-115)


Right Side View GSX-S1000

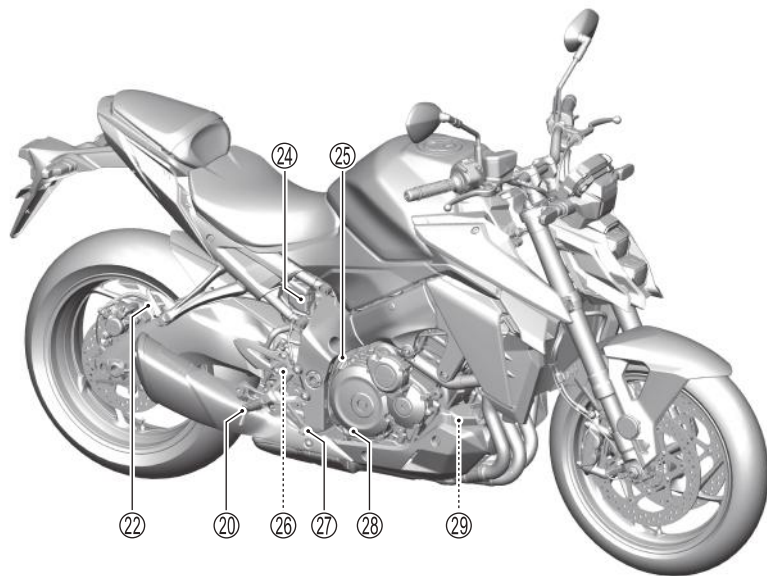

Right Side View GSX-S1000

- ②4 Rear brake fluid reservoir ( 3-57)
- ②5 Engine oil filler cap ( 3-30)
- ②6 Rear brake light switch ( 3-64)
- ②7 Rear brake pedal ( 3-63)
- ②8 Engine oil inspection window ( 3-30)
- ②9 Engine coolant reservoir ( 3-42)


Right Side View GSX-S950

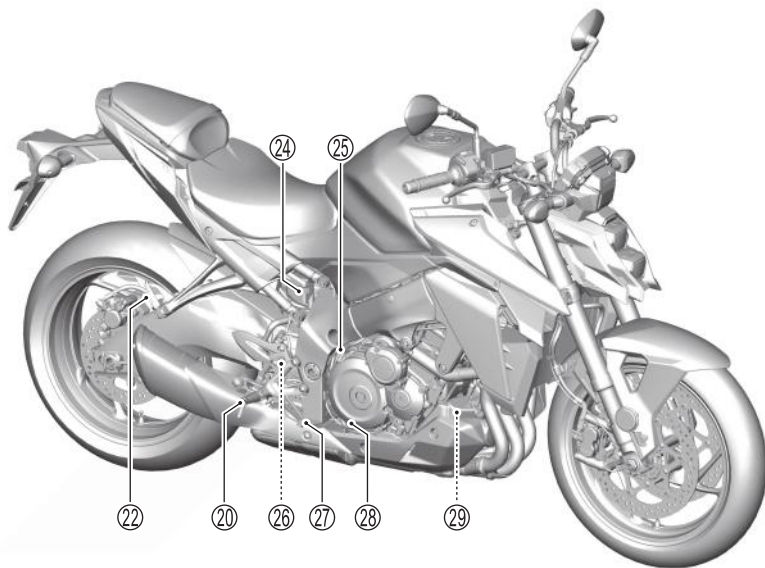


Right Side View GSX-S950

- ②④ Rear brake fluid reservoir ( 3-57)
- ②⑤ Engine oil filler cap ( 3-30)
- ②⑥ Rear brake light switch ( 3-64)
- ②⑦ Rear brake pedal ( 3-63)
- ②⑧ Engine oil inspection window ( 3-30)
- ②⑨ Engine coolant reservoir ( 3-42)

HANDLEBAR SWITCHES

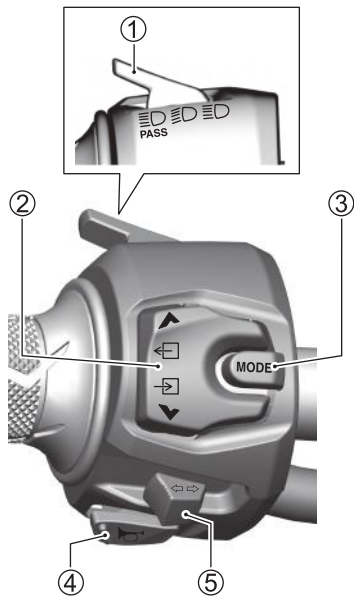

LEFT HANDLEBAR

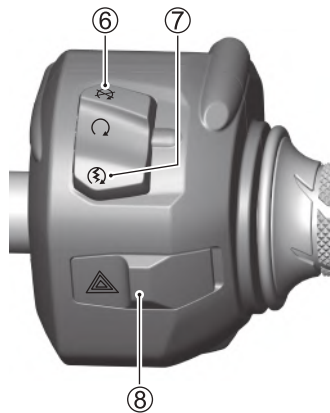

RIGHT HANDLEBAR


LEFT HANDLEBAR

- ① Dimmer switch / Headlight flasher switch / Lap time counter switch ( 2-89)
- ② SELECT switch ( 2-20, 2-22)
- ③ MODE switch ( 2-90)
- ④ Horn switch ( 2-90)
- ⑤ Turn signal light switch ( 2-91)

RIGHT HANDLEBAR


- ⑥ Engine stop switch ( 2-92)
- ⑦ Electric starter switch ( 2-92))
- ⑧ Hazard warning switch ( 2-93)

WARNING AND INDICATOR LIGHTS

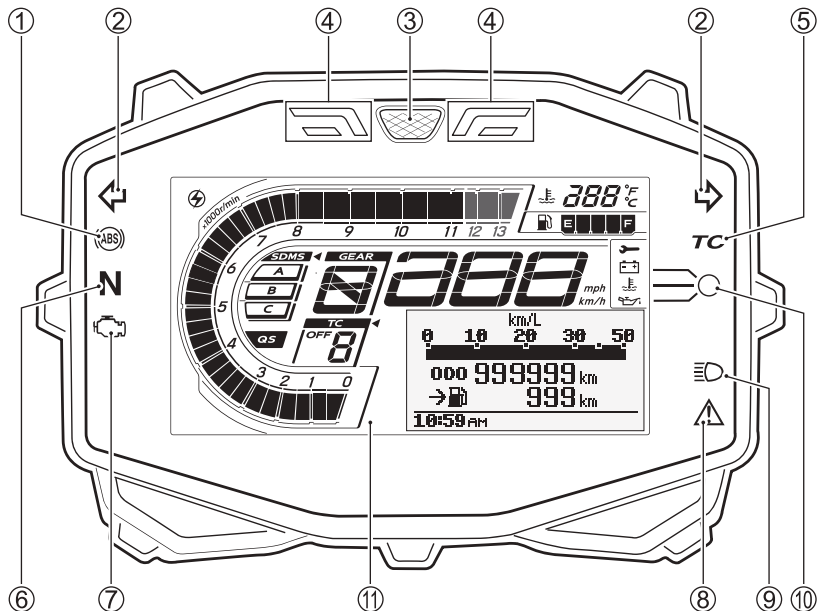


- ① ABS indicator light (👉 2-32)
- ② Turn signal indicator light (👉 2-25)
- ③ Engine rpm indicator light (MAIN) (👉 2-25)
- ④ Engine rpm indicator light (SUB) (👉 2-25)
- ⑤ Traction control indicator light (👉 2-26)
- ⑥ Neutral indicator light (👉 2-27)
- ⑦ Malfunction indicator light (👉 2-28)
- ⑧ Master warning indicator light (👉 2-29)
- ⑨ Hi beam indicator light (👉 2-29)
- ⑩ Oil pressure / engine coolant temperature
/ battery charge malfunction warning indicator light (👉 2-30)
- ⑪ LCD(👉 2-18)

LCD

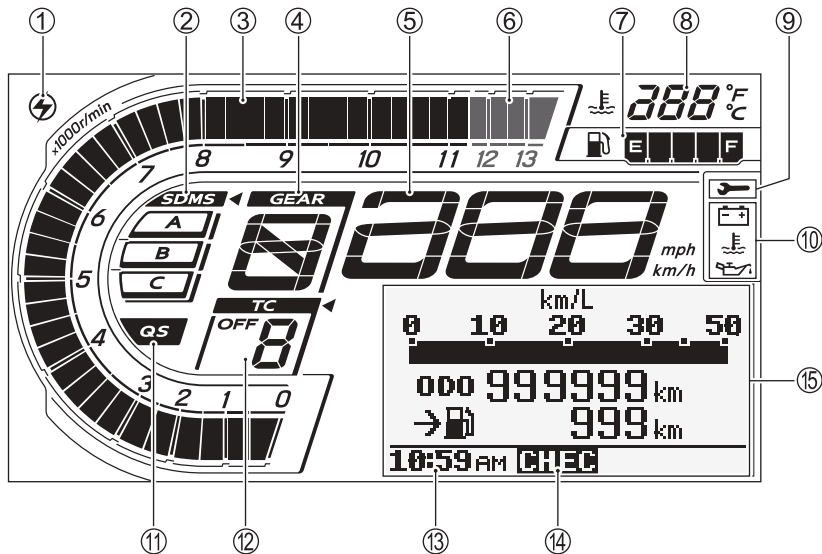


- ① Engine rpm indicator (👉 2-60)
- ② Suzuki drive mode selector indicator (SDMS) (GSX-S1000) (👉 2-75)
- ③ Tachometer (👉 2-34)
- ④ Gear position indicator (👉 2-36)
- ⑤ Speedometer (👉 2-34)
- ⑥ Red zone (👉 2-34)
- ⑦ Fuel level indicator (👉 2-37)
- ⑧ Engine coolant temperature indicator (👉 2-35)
- ⑨ Service reminder indicator (👉 2-38)
- ⑩ Oil pressure / engine coolant temperature
/ battery charge malfunction warning indicator symbol (👉 2-30)
- ⑪ Quick Shift indicator (GSX-S1000) (👉 2-68)
- ⑫ Traction control system indicator (👉 2-78)
- ⑬ Clock (👉 2-40)
- ⑭ Diagnosis display (👉 2-40)
- ⑮ Multifunction display (👉 2-38)

MULTIFUNCTION DISPLAY ROAD mode

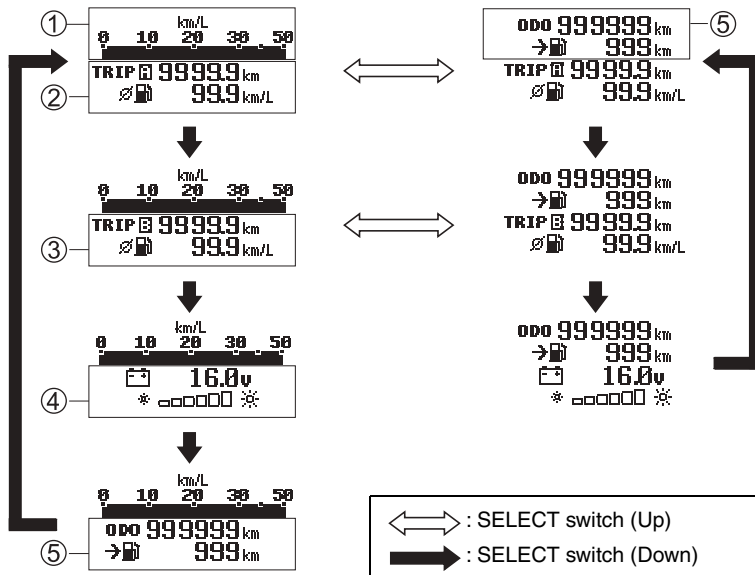


Operate the SELECT switch (Up or Down) to set each item in the multifunction display.

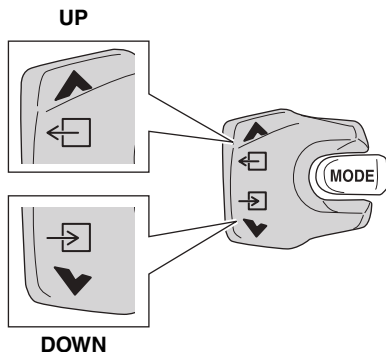


- ① Instantaneous fuel consumption meter (👉 2-41)
- ② Trip meter A / average fuel consumption meter A (👉 2-43)
- ③ Trip meter B / average fuel consumption meter B (👉 2-43)
- ④ Voltmeter / instrument panel light brightness (👉 2-45)
- ⑤ Odometer / driving range meter (👉 2-42)



Setting mode

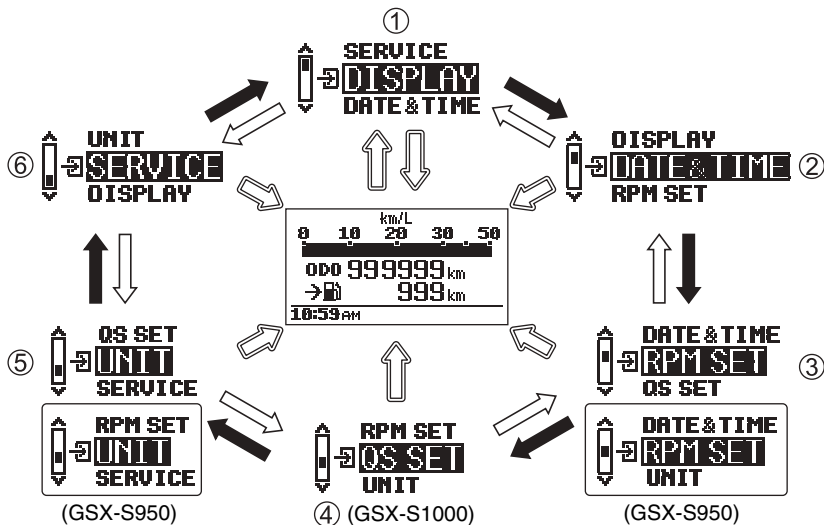


Operate the SELECT switch (Up or Down) to set each item in the multifunction display.

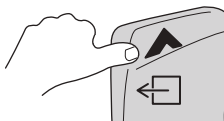

UP

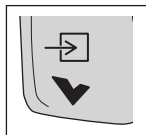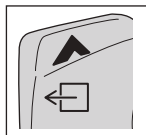

DOWN

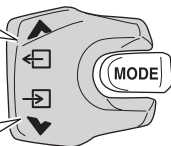

① **DISPLAY**

Set 2 modes (ROAD, LAP TIME) for normal display contents.

(☞ 2-46)

② **DATE & TIME**

Set the date and time.

(☞ 2-57)

③ **RPM SET**

Set the engine rpm indicator light.

(☞ 2-60)

④ **QS SET (GSX-S1000)**

Set the Quick Shift.

(☞ 2-68)

⑤ **UNIT**

Set the units.

(☞ 2-70)

⑥ **SERVICE**

Set the service interval notification.

(☞ 2-72)


INSTRUMENT PANEL

INITIAL METER DISPLAY

When you turn the ignition switch to ON, the meter will act as follows.

- All LCD ① segments appear and then show the normal display.
- The following indicator lights come on for 3 seconds.
 - Malfunction indicator light ②
 - Master warning indicator light ③
 - Engine rpm indicator light (MAIN) ④
 - Engine rpm indicator light (SUB) ⑤
- The following indicator lights come on.
 - Oil pressure / engine coolant temperature / battery charge malfunction warning indicator light ⑥
 - ABS indicator light ⑦
 - Traction control indicator light ⑧

NOTE: Refer to the explanation of each indicator in this section for the turn-off condition.

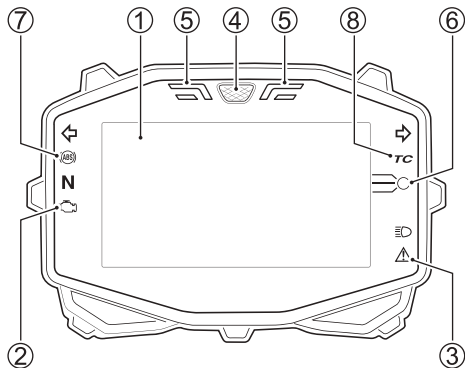


TURN SIGNAL INDICATOR LIGHT “↔”

Operate the right or left turn signal switch to make the turn signal indicator blink.

NOTE: If a turn signal light is not operating properly due to bulb filament (GSX-S950) or circuit failure, the indicator light blinks more quickly to notify the rider of a problem.

ENGINE RPM INDICATOR LIGHT (MAIN), (SUB)

When engine speed reaches the set value, the engine rpm indicator light (MAIN) ①, (SUB) ② come on or blink to indicate when to upshift. Methods of lighting and engine speed settings can be changed in the engine rpm indicator light setting mode. For details on the engine rpm indicator, see “3. RPM SET” on page 2-60.

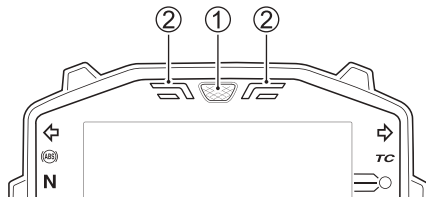

TRACTION CONTROL INDICATOR LIGHT “TC”

Traction control (TC) indicator operation differs depending on the motorcycle settings. For details, see “TRACTION CONTROL SYSTEM” on page 2-78.

The traction control indicator:

- Comes on when the ignition switch is turned ON, and turns off when the speed reaches approximately 10 km/h (6 mph) and the traction control system is operable.
- Blinks when the traction control system is operating.
- Lights constantly while the traction control system is set to OFF.

If the traction control (TC) indicator comes on other than when the ignition switch is turned ON, park the motorcycle in a safe place and turn the ignition switch off. Wait for a short time, start the engine, and then check whether the traction control indicator “TC” and malfunction indicator come on when the motorcycle is traveling at 10 km/h (6 mph) or faster.

- The motorcycle is functioning correctly if the traction control (TC) indicator turns off when the motorcycle is traveling at 10 km/h (6 mph) or faster.
- The motorcycle is not functioning correctly if the traction control (TC) indicator does not turn off when the motorcycle is traveling at 10 km/h (6 mph) or faster. If the light does not go off, consult your Suzuki dealer.

WARNING

When the traction control system malfunctions, the traction control (TC) indicator and malfunction indicator come on at the same time. The traction control system does not operate in these circumstances.

When these indicators come on at the same time, set the traction control system to OFF, and consult your Suzuki dealer.

NEUTRAL INDICATOR LIGHT “N”

The green indicator light will come on when the transmission is in neutral. The light will turn off when you shift into any gear other than neutral.

MALFUNCTION INDICATOR LIGHT “”

When the ignition switch is turned ON, the malfunction Indicator light comes on for 3 seconds as a lamp check, and then turns off.

- (UK, EU)

When there is a malfunction in an emission control device or engine electrical device or the misfire is detected, the malfunction indicator light comes on or blinks.

If the malfunction indicator light comes on or blinks, “FI” appears on the multifunction display at the same time.

- (Except for UK, EU)

When there is a malfunction in an emission control device or engine electrical device, the malfunction indicator light comes on.

If the malfunction indicator light comes on, “FI” appears on the multifunction display at the same time.

For details, see “DIAGNOSIS DISPLAY” on page 2-40.

NOTICE

Continuing to run the engine with malfunction indicator light coming on or blinking may affect the emission device or drivability.

When the light blinks while the engine is running, stop the motorcycle in a safe place immediately in order to avoid damaging the catalytic converter. (UK, EU)
If you ride the motorcycle under this situation, ride at slow speed without opening the throttle largely and then have your motorcycle inspected immediately by your Suzuki dealer.

NOTE: If the malfunction indicator light is lit or blinking, consult your Suzuki dealer immediately.

MASTER WARNING INDICATOR LIGHT

“”

When the ignition switch is turned ON, the master warning indicator light comes on for 3 seconds as a lamp check, and then turns off.

When an issue related to the following occurs, the master warning indicator light comes on:

- Engine - related failure
- Handlebar switches failure
- Motorcycle falls over

For details, see “DIAGNOSIS DISPLAY” on page 2-40.

NOTE: If the master warning indicator light is lit or blinking, consult your Suzuki dealer immediately.

HI BEAM INDICATOR LIGHT “”

This blue indicator light will be lit when the headlight high beam is turned on.


OIL PRESSURE / ENGINE COOLANT TEMPERATURE / BATTERY CHARGE MALFUNCTION WARNING INDICATOR LIGHT

When the ignition switch is turned on, the oil pressure / engine coolant temperature / battery charge malfunction warning indicator light ① comes on, and normally, will turn off when the engine starts.

The individual indicators come on when the following malfunctions occur.

- Coolant temperature exceeds 120°C (248°F)
- Engine oil pressure drops
- Battery performance is low

The oil pressure warning indicator symbol ②, engine coolant temperature warning indicator symbol ③ and battery charge malfunction warning indicator symbol ④ appear in the LCD display.

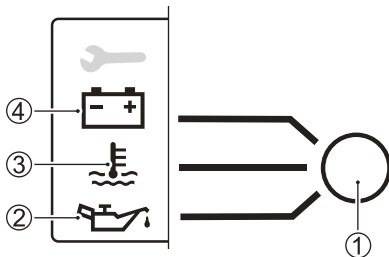

Oil Pressure Warning Indicator Symbol



When the ignition switch is turned on, the oil pressure warning indicator light comes on, and the oil pressure warning indicator symbol appears simultaneously. Normally, both the oil pressure warning indicator light, and the oil pressure warning indicator symbol turn off when the engine starts.

NOTICE

After starting the engine, opening the throttle or running the motorcycle with the oil pressure warning indicator light turned on, may adversely affect the engine.

Make sure that the oil pressure warning indicator light has turned off before operating the throttle or running the motorcycle.

NOTICE

Riding the motorcycle or running the engine when the oil pressure warning indicator light comes on, may damage the engine.

If the oil pressure warning indicator light comes on, indicating low oil pressure, stop the engine immediately. Check the oil level and add oil if necessary. If there is a proper amount of oil and the light still does not turn off, have your authorized Suzuki dealer or a qualified mechanic inspect your motorcycle.

Engine Coolant Temperature Warning Indicator Symbol “”

For details, see “ENGINE COOLANT TEMPERATURE INDICATOR” on page 2-35.

Battery Charge Malfunction Warning Indicator Symbol “”

This indicator symbol comes on when battery performance is low, prompting you to have the battery inspected or charged.

NOTE: Consult a Suzuki dealer about inspecting and charging the battery.

ABS INDICATOR LIGHT “”

- This indicator normally comes on when the ignition switch is turned “ON” and turns off after the motorcycle speed exceeds 10 km/h (6 mph).
- If there is a problem with the ABS (Anti-lock Brake System), this indicator light comes on. The ABS does not operate when the ABS indicator light is on.

WARNING

The ABS does not operate if the ABS indicator light is lit. Suddenly and overly applying the brakes when the ABS indicator light is lit may cause the wheels to lock, which may result in loss of control.

Have your motorcycle inspected by a Suzuki dealer promptly.

WARNING

Riding the motorcycle with the ABS indicator light on can be hazardous.

If the ABS indicator light blinks or comes on while riding, stop the motorcycle in a safe place and turn off the ignition switch. Wait a few minutes, turn the ignition switch “ON”, and check whether the indicator light comes on.

- **If the indicator light turns off after starting to ride, the ABS will be functioning.**
- **If it does not turn off after starting to ride, the ABS is not functioning. You should have the system checked by an authorized Suzuki dealer as soon as possible.**

NOTE:

- *If the ABS indicator light turns off after you start the motorcycle but before you begin riding, check the ABS indicator light function by turning the ignition switch off and on. If the ABS indicator light does not come on when the ignition switch is turned on, you should have the system checked by an authorized Suzuki dealer as soon as possible.*
- *The ABS indicator light can turn off if the engine is revved at high speed before you begin riding.*

SPEEDOMETER

The speedometer indicates the road speed in miles per hour or kilometers per hour.

NOTE:

- Switching between km/h and mph is done by selecting "UNIT" in the menu of the multifunction display. (☞ 2-38)
- Select km/h or mph as appropriate, to comply with traffic regulations.
- Check the speedometer display after changing the units.




TACHOMETER

The tachometer indicates the engine speed in revolutions per minute (r/min).


<Red zone>

The red zone ① indicates an engine speed range in excess of permissible engine speed. Operating the engine in the red zone will stop it from running smoothly and negatively affect engine life.

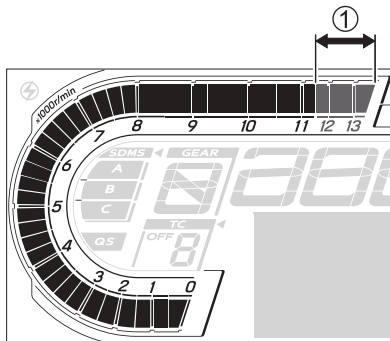

ENGINE COOLANT TEMPERATURE INDICATOR

The coolant temperature is displayed by an engine coolant temperature indicator ①, engine coolant temperature warning indicator symbol ②, and engine coolant temperature warning indicator light ③.

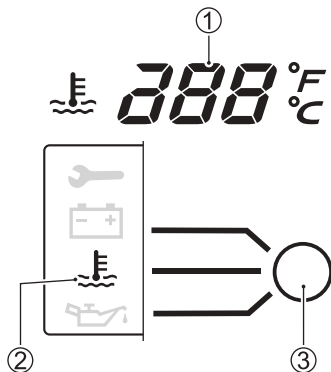

When the ignition switch is turned to the “ON” position, the display shows the opening pattern. Then the display changes to the coolant temperature. While the coolant temperature is below 20°C (68°F), the indicator ① does not indicate a number but indicates “ _ _ _ ”.

When the coolant temperature is higher than 120°C (248°F), the display temperature, indicator symbol “” ② blinks and the indicator light ③ comes on. Further, if the temperature exceeds 125°C (257°F), the indicator ① shows “HI”, the indicator symbol “” ② blinks and the indicator light ③ remains on. When the indicator light ③ comes on, stop the engine and check the coolant level after the engine cools.

NOTE: The engine coolant temperature warning indicator light may appear when idling at high temperature for an extended period.

NOTICE

Riding the motorcycle while it is overheating may cause engine damage.

If the engine coolant temperature warning indicator light turns on, shut off the engine and allow it to cool. Do not start the engine until the engine coolant temperature warning indicator light turns off.

GEAR POSITION INDICATOR

The gear position indicator displays gear position. This indicator displays “N” when the transmission is in neutral.

NOTE: When the display indicates “CHEC” in the multifunction display area, the gear position indicator does not indicate a number but indicates “–”.

 


FUEL LEVEL INDICATOR “”

The fuel level indicator shows the amount of fuel remaining in the fuel tank.

- The fuel level indicator displays all 5 segments when the fuel tank is full.
- The mark ① blinks when the fuel level drops below 4.8 L (5.0/4.2 US/Imp qt).
- The mark and segment blink when the fuel drops below 1.9 L (2.0/1.7 US/Imp qt).



Fuel tank	Approximately 1.9 L	Approximately 4.8 L	Full
Segments	Blink 		
 mark	Blink 	Blink 	

NOTICE

Using all of the gasoline in the fuel tank (running out of gasoline) will damage the catalytic converter.

Replenish gasoline before it runs out.

NOTE:

- The fuel level indicator will not indicate correctly when the motorcycle is placed on the side stand. Turn the ignition switch to the “ON” position when the motorcycle is held upright.
- If the fuel mark blinks, fill the fuel tank immediately. Also, the last segment of the fuel level indicator blinks when the fuel tank is almost empty.

SERVICE REMINDER INDICATOR “”

You can be reminded when the next service is due by setting the date and distance. When the set date or distance has been reached, the service reminder indicator “” comes on.

For details, see “6. SERVICE” on page 2-72.

NOTE: Consult your Suzuki dealer for the appropriate service reminder setting.

MULTIFUNCTION DISPLAY

The multifunction display always shows the time.

ROAD mode

In the “ROAD” mode, you can set the upper side and lower side items displayed on the screen to one of the following items.


Upper:

- Instantaneous fuel consumption meter
- Odometer / Driving range meter

Lower:

- Odometer / Driving range meter
- Trip meter A / Average fuel consumption meter A
- Trip meter B / Average fuel consumption meter B
- Voltmeter / Instrument panel light brightness

NOTE: When the odometer / driving range meter is selected on the upper side of the screen, the odometer / driving range meter cannot be selected on the lower side.

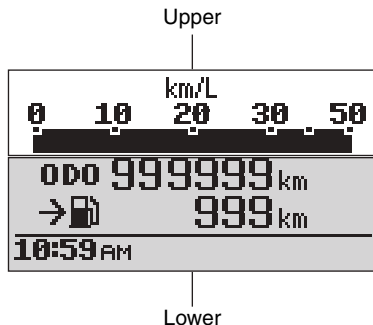

⚠ WARNING

Changing the display while riding can be hazardous. Removing a hand from the handlebars can reduce your ability to control the motorcycle.

Never change the display while riding. Change or confirm settings when the motorcycle is stopped.

CLOCK

The time is displayed using a 12-hour, AM/PM system.

 
10:59 AM

It is adjusted by selecting "DATE & TIME" in the menu of the multifunction display. (➡ 2-57)

DIAGNOSIS DISPLAY

The Diagnosis display shows the current failure information. If any of the following is displayed, immediately contact an authorized Suzuki dealer to have the motorcycle inspected.

- ① Communication between controllers failed



- ② Engine-related fault detected



- ③ Motorcycle fell over



④ Handlebar switch failed



NOTE: The engine cannot be started when “CHEC” is displayed. Inspect the below items. If the “CHEC” display does not disappear, have your motorcycle inspected by a Suzuki dealer.

- Are any fuses blown?
- Are the meter connectors connected?

INSTANTANEOUS FUEL CONSUMPTION METER

The instantaneous fuel consumption meter shows the instantaneous fuel consumption while running.



Fuel consumption is not measured while the motorcycle is parked.

The indication range for km/L is from 0 to 50, the indication range for L/100 km is from 0 to 25, and the indication range for MPG US, IMP is from 0 to 99.

NOTE: The display shows estimated values, which may not be the actual values.

ODOMETER / DRIVING RANGE METER



Odometer ①

The odometer registers the total distance that the motorcycle has been ridden. The odometer ranges from 0 to 999999.

NOTE: The odometer display locks at 999999 when the total distance exceeds 999999.

Driving range meter ②

The driving range meter displays estimated driving range (distance) based on the remaining fuel within the range from 1 to 999 km (mile). The driving range is recalculated when you refuel, but the indication may not change when only a small amount of fuel is added.

The driving range will not be recalculated when the motorcycle is placed on the side stand. Check the estimated driving range (distance) when the side stand is retracted. When the battery is disconnected, the driving range meter will be reset. When this happens, the meter indicates “— — —” until the motorcycle is ridden for a certain distance.

NOTE:

- *Estimated driving range (distance) is an estimated value. The display may differ from the actual distance traveled, so we recommend that you refuel early.*
- *The meter does not use the average fuel consumption value to calculate driving range (distance) and the calculation result may not be the same as indicated by the average fuel consumption meter.*

 
**TRIP METER / AVERAGE FUEL
CONSUMPTION METER**



Trip Meter ①

- After resetting, the distance traveled is displayed in km or miles.
- There are 2 modes, TRIP A, and TRIP B. The display range is 0.0 – 9999.9. When 9999.9 is exceeded, the display returns to 0.0.

- To reset a meter to zero, press and hold the SELECT switch (Down) for 2 seconds while the display indicates the trip meter A or B, you want to reset. When you reset the trip meter A or B, the fuel consumption meter will also be reset.



- When the average fuel consumption meter is reset, the average fuel consumption is displayed as “- -.-” until a set distance has been traveled.

NOTE: When the trip meter exceeds 9999.9, the trip meter will return to 0.0 and start counting again.

Average fuel consumption meter ②

- This meter displays the fuel consumption for the distance traveled for both TRIP A and TRIP B. Displays are in the following ranges.
 - MPG US and IMP display range: 0.1 – 99.9
 - km/L display range: 0.1 – 99.9
 - L/100 km display range: 2.0 – 99.9
- To reset average fuel consumption, reset the trip meter. When the trip meter is displaying 0.0, average fuel consumption is displayed as “- -.-”.

NOTE: The display shows estimated values, which may not be the same as actual values.

VOLTMETER / INSTRUMENT PANEL LIGHT BRIGHTNESS



Voltmeter ①

The voltmeter displays the battery voltage within the range of 10.0 to 16.0V.

NOTE:

- The displayed value may differ from the value of other instruments.
- If a voltage below 12.0V is frequently displayed, have the motorcycle inspected by an authorized Suzuki dealer.

Instrument panel light brightness ②

Set the meter to instrument panel light brightness. Pressing the SELECT switch (Up) will change the instrument panel light brightness in 6 steps. The brightness indicator indicates brightness from “” (min) to “” (max).


NOTE: When the MODE switch is pressed while adjusting instrument panel light brightness, the screen moves to drive mode selection; therefore, the instrument panel light brightness can no longer be adjusted. In this case, press the MODE switch again to cancel the drive mode selection, and then the instrument panel light brightness can be adjusted.

MULTIFUNCTION DISPLAY SETTING OF EACH ITEM

1. DISPLAY

The contents displayed while running are set using the following procedure.

1. From the “MENU” display, select a “DISPLAY” item and press the SELECT switch (Down) for about 2 seconds. “DISPLAY” starts blinking and moves to the “DISPLAY” setting screen.

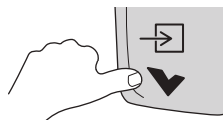


2. In the “DISPLAY” setting, either of 2 modes, “ROAD” or “LAP TIME”, can be selected. By pressing the SELECT switch (UP or Down), the arrow indicating the selection moves and the selected mode is highlighted.

DISPLAY **←EXIT**
→✓ROAD
LAP TIME

10:59 AM

 3. To confirm the selection, press the SELECT switch (Down) for about 2 seconds. When confirmed, the check mark “✓” moves to the confirmed mode.



NOTE: By pressing the SELECT switch (Up) for about 2 seconds during mode selection in the “DISPLAY” setting, the selection is completed and the screen returns to the “MENU” display.

LAP TIME mode

In the “LAP TIME” mode, the number of laps during running is measured. The number of laps can be measured up to 99 times. One lap is indicated from 00:00.00 to 59:59.99.


Starting lap time measurement

The lap time measurement has Manual-start and Auto-start.

Press the SELECT switch (Up) to switch between Manual-start and Auto-start.

Manual-Start

Press the lap time counter switch on the left handlebar to start the measurement.

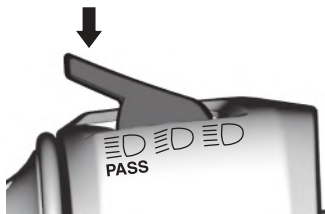

When the count starts, “M START” on the screen changes to “LAP01”.

M START 00:00.00

L -- --:--. --

L -- --:--. --

10:59 AM



LAP01 00:01.23

L -- --:--. --

L -- --:--. --

10:59 AM

Auto-Start

When the sensor detects the motorcycle speed more than 5 km/h (3 mph), the measurement is started.

When the count starts, “A START” on the screen changes to “LAP01”.

A START 00:00.00

L -- --:--. --

L -- --:--. --

10:59 AM



LAP01 00:01.23


L -- --:--. --

L -- --:--. --


10:59 AM

Confirming the lap time

1. After the count started, press the lap time counter switch to confirm the lap time of LAP01.

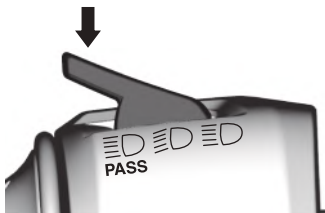

2. The lap time number blinks and the lap time is indicated for 5 seconds.

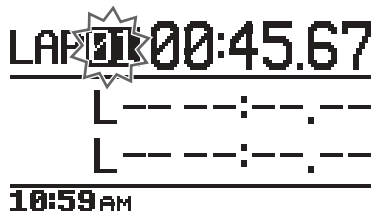

NOTE: Even while the lap time number is blinking, the lap time is continuously counted.

3. LAP01 is indicated in the 2nd line and the screen moves to the measurement of the next lap time (LAP02). Confirmed lap times are indicated up to 2 laps. The latest lap confirmed is always indicated in the 2nd line of the screen.

LAP02 00:50.00

L01 00:45.67
L-- --:--.--

10:59 AM


The screen can be changed to “BL” (BEST LAP) indication. By pressing the SELECT switch (Down), the 3rd line on the screen changes to “BL” indication.

LAP03 00:59.99

L02 00:50.00
BL01 00:45.67


10:59 AM

For LAP03 onward, the difference from the best time blinks in the 2nd line on the screen, and then comes on for about 5 seconds.

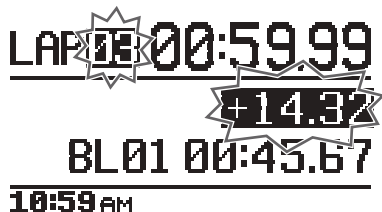

LAP 03 00:59.99
+14.32
BL01 00:45.67
10:59 AM


When the best time is updated, “BEST LAP” blinks, and then comes on for about 5 seconds.

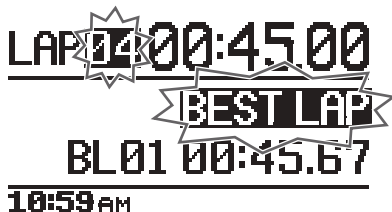

LAP 04 00:45.00
BEST LAP
BL01 00:45.67
10:59 AM

Stopping lap time measurement

After the count started, press the SELECT switch (Up) to stop the count.

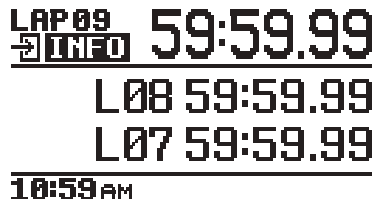

LAP 09 59:59.99
INFO
L08 59:59.99
L07 59:59.99
10:59 AM

 
NOTE: To restart the count, press the SELECT switch (Up) again.

Checking lap times (LAP INFO)

Check the recorded lap times.

While the count is stopped, press the SELECT switch (Down) for about 2 seconds, "INFO" starts blinking and the screen changes to "LAP INFO" indication.

LAP INFO 59:59.99
L08 59:59.99
L07 59:59.99
10:59 AM



Recorded lap times and best time are indicated. Press the SELECT switch (Up or Down) to check recorded lap times. The screen indicates 3 laps each time.

When 3 or more laps are recorded, arrow marks (▲,▼,▲,▼) appear while checking lap times. Arrow marks (▲,▼) indicate before/after the 3 laps or the next 3 laps. Arrow marks (▲,▼) indicate that the screen moves to the first one or the last one of the laps.

LAP INFO ← BACK
▲ 01 59:59.99
LAP TIME ▼ 02 59:59.99
03 59:59.99
BEST LAP 99 59:59.99
10:59 AM

 
To return to lap time measurement, press the SELECT switch (Up) for about 2 seconds. "BACK" starts blinking and the screen returns to count stop state.

Resetting lap times

To reset all the recorded lap times, take the following steps.


1. While the count is stopped, press the SELECT switch (Down) for about 2 seconds, "INFO" starts blinking and the screen changes to "LAP INFO" indication.

LAP 00 59:59.99
L08 59:59.99
L07 59:59.99
10:59 AM



2. By pressing the SELECT switch (Down) for about 2 seconds, "DELETE" appears on the screen.

 
LAP INFO BACK
01 59:59.99
LAP TIME 02 59:59.99
03 59:59.99
BEST LAP 99 59:59.99
DELETE YES NO
10:59 AM



3. Select "YES" and press the SELECT switch (Down) for about 2 seconds, and then "YES" starts blinking and all the lap times are reset, and the screen returns to the state it was in before the count started.

LAP INFO  **BACK**
LAP TIME 01 59:59.99
 02 59:59.99
 03 59:59.99
BEST LAP 99 59:59.99
DELETE  **YES** NO

 10:59 AM



NOTE: To cancel the resetting of lap times, press the SELECT switch (Down) and select "NO".

When lap time after LAP02 does not exist

After the count has started, press the SELECT switch (Up) to stop the count.

While the count is stopped, press the SELECT switch (Down) for about 2 seconds, and then "RESET" starts blinking and the lap time indication is reset to 00:00.00.

NOTE: After resetting lap times, press the SELECT switch (Up) for about 2 seconds to return to the "MENU" indication.

LAP01
→ RESET 00:45.67

L-- --:--.--
L-- --:--.--

 
10:59 AM



M START 00:00.00

L-- --:--.--
L-- --:--.--

10:59 AM




2. DATE&TIME

<Date / time adjustment>

Set the date and time using the following procedure.


1. From the “MENU” indication, select “DATE & TIME” and press the SELECT switch (Down) for about 2 seconds. “DATE & TIME” starts blinking and the display changes to the setting screen.

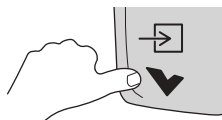

2. Press the SELECT switch (Up or Down) to select the year, month, day, hour, or minute indication. The selected item is highlighted.

DATE&TIME ⇐EXIT
⇒2020/ 12/ 25
10: 59_{AM} Y/M/D

 3. Press the SELECT switch (Down) for about 2 seconds to make arrow marks (▲,▼) appear above and below the indication.



4. Press the SELECT switch (Up or Down) to set the year, month, day, hour, and minute indications.

<Indication setting>

The order of the year, month, and day indications can be selected from the following 3 patterns.

- Y/M/D (Year, Month, Day)
- M/D/Y (Month, Day, Year)
- D/M/Y (Day, Month, Year)

5. Press the SELECT switch (Down) for about 2 seconds. The arrow marks (▲,▼) above and below the indication disappear and the setting is confirmed before returning to the setting screen.

NOTE:

- *When the SELECT switch (Up) is pressed for about 2 seconds while setting, the setting is terminated and the screen returns to the "MENU" indication.*
- *The setting is also terminated when the ignition switch is turned OFF while setting or the switch is not operated for 10 seconds. In this case, the setting at the time of termination is adopted.*
- *The year can be set from 2020 to 2099.*
- *When the battery terminals are disconnected and reconnected, the date and time are reset. In such case, set them again.*

3. RPM SET

 
When the set engine speed is reached, the engine rpm indicator lights (MAIN) and (SUB) come on or blink.

To set the engine speed, take the following steps.

1. From "MENU" indication, select "RPM SET" and press the SELECT switch (Down) for about 2 seconds. "RPM SET" starts blinking and the display moves to setting screen.



(GSX-S950)



2. By pressing the SELECT switch (Up or Down), the arrow indicating the selection moves and the selected item is highlighted.

```
RPM SET          EXIT
MODE  ←(○)→
MAIN   10000 rpm
SUB    1500 rpm
BRIGHT □□□□□
10:59 AM
```

NOTE: When "OFF" is selected in the "MODE" setting, "MAIN", "SUB", and "BRIGHT" cannot be selected. In this case, select LIGHT "○" or BLINK "◐◑" in the "MODE" setting. (➡ 2-62)

The setting screen has the following items 1 to 4.

1. MODE

Set the lighting (LIGHT, BLINK, OFF) of the engine rpm indicator light MAIN (white) LED and SUB (green, yellow) LED.

2. MAIN

Set the lighting timing of the MAIN (white) LED.

3. SUB

Set the lighting timing of SUB (green, yellow) LED.

4. BRIGHT

Set the brightness of the MAIN (white) LED.

 
NOTE:

- When the battery terminal is reconnected, be sure to set the engine rpm indicator light setting again.
- When the **SELECT** switch (Up) is pressed for about 2 seconds while setting, the setting is terminated and returns to the “MENU” indication. In this case, the setting at the time of termination is adopted.
- The setting is also terminated when the ignition switch is turned OFF or the switch is not operated for 10 seconds.

MODE (lighting mode) setting

Set the lighting mode of the engine rpm indicator lights using to the following procedure.

1. While “MODE” is selected, press the **SELECT** switch (Down) for about 2 seconds to move to the setting screen.



2. Press the SELECT switch (Up or Down) to select the lighting mode (LIGHT, BLINK, OFF) of the engine rpm indicator lights. The engine rpm indicator “⚡” is interlinked with the selection of LIGHT or BLINK.

```

RPM SET          ←EXIT
MODE  →<:O:>
MAIN   10000rpm
SUB    1500 rpm
BRIGHT □□□□□□
10:59AM
  
```

3. Press the SELECT switch (Down) for about 2 seconds to confirm the setting and return to the setting screen.


Indication patterns of the engine rpm indicator lights and engine rpm indicator “⚡” are shown below.

MODE	LIGHT “O”	BLINK “:O:”	OFF
MAIN LED	O	:O: Blink	—
SUB LED	O	O	—
Engine rpm indicator “⚡”	⚡	⚡	—

MAIN (engine rpm preset MAIN LED) setting

Set the preset rpm for the engine rpm indicator light (MAIN) using the following procedure.

 1. While "MAIN" is selected, press the SELECT switch (Down) for about 2 seconds to move to the setting screen.



2. Press the SELECT switch (Up or Down) to set the preset rpm. The setting range is from 4000 rpm to 11500 rpm in increments of 250 rpm. The tachometer indicates the preset rpm.


RPM SET	←EXIT
MODE	⊙○⊙
MAIN	→<10000>
SUB	1500
BRIGHT	□□□□□
10:59 AM	

3. Press the SELECT switch (Down) for about 2 seconds to confirm the setting and return to the setting screen.

SUB (engine rpm preset SUB LED) setting

Set the preset rpm for the engine rpm indicator light (SUB) using the following procedure.

 1. While "SUB" is selected, press the SELECT switch (Down) for about 2 seconds to move to the setting screen.



2. Press the SELECT switch (Up or Down) to select a preset rpm.

SUB LED preset rpm ranges are as follows:
250 rpm ↔ 500 rpm ↔ 1000 rpm ↔
1500 rpm ↔ 2000 rpm ↔ 2500 rpm
↔ 3000 rpm

```
RPM SET          EXIT
MODE             :O:
MAIN             10000
SUB              <1500>
BRIGHT          □□□□□
10:59AM
```

3. Press the SELECT switch (Down) for about 2 seconds to confirm the setting and return to the setting screen.

Example: When the MAIN LED is preset at 10000 rpm.

SUB LED preset rpm range	SUB LED		MAIN LED (White)
	(Green)	(Yellow)	
250	9500	9750	10000
500	9000	9500	10000
1000	8000	9000	10000
1500	7000	8500	10000
2000	6000	8000	10000
2500	5000	7500	10000
3000	4000	7000	10000


Example: When the engine rpm indicator light (MAIN LED) is set to 10000 rpm, and (SUB LED) is set to 500 rpm.

Engine rpm (r/min) and preset rpm	SUB LED		MAIN LED (White)	
	(Green)	(Yellow)		
Engine rpm < 9000	—	—	—	
$9000 \leq \text{Engine rpm} < 9500$	○	—	—	
$9500 \leq \text{Engine rpm} < 10000$	○	○	—	
$10000 \leq \text{Engine rpm}$	○	○	○	 Blink

BRIGHT (engine rpm indicator MAIN LED brightness)

Set the brightness of the engine rpm indicator light (MAIN).

1. While "BRIGHT" is selected, press the SELECT switch (Down) for about 2 seconds to move to the setting screen.

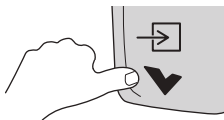

2. Press the SELECT switch (Up or Down) to set the brightness. The adjustment range is in 6 steps from "▣" (Lowest) to "▣▣▣▣▣▣" (Highest).

RPM SET	←EXIT
MODE	⌘○⌘
MAIN	10000
SUB	1500
BRIGHT	→<▣▣▣▣▣▣>
10:59 AM	


3. Press the SELECT switch (Down) for about 2 seconds to confirm the setting and return to the setting screen.

4. QS SET (Quick Shift) (GSX-S1000)

Set the MODE setting for “Quick Shift” to <OFF> or <ON> using the following procedure. Once the “Quick Shift” has been set, the throttle grip and clutch lever operations are not required in the shift change operation.

NOTE: For the riding with the “Quick Shift” used, refer to page 2-106.

1. From the “MENU” indication, select “QS SET” and press the SELECT switch (Down) for about 2 seconds. “QS SET” starts blinking and moves to the setting screen.

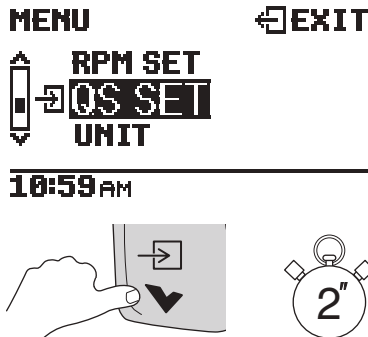

2. Press the SELECT switch (Up or Down) to select MODE.

MODE <OFF>

The “Quick Shift” is unavailable.

- Press the SELECT switch (Up) to select <OFF>.

QS SET **EXIT**
→ MODE <OFF>

10:59 AM

MODE <ON>

The “Quick Shift” is available.

- Press the SELECT switch (Down) to select <ON>.

QS SET **EXIT**
→ MODE <ON>

10:59 AM

When the <ON> is selected, the Quick Shift indicator “QS” ① comes on.



5. UNIT

Set the units of speed, distance, fuel consumption and water temperature using the following procedure.

1. From the "MENU" indication, select "UNIT" and press the SELECT switch (Down) for about 2 seconds. "UNIT" starts blinking and the display moves to the setting screen.

MENU

 **EXIT**

 **OS SET**
 **UNIT**
 **SERVICE**

10:59 AM

 
MENU

 **EXIT**

 **RPM SET**
 **UNIT**
 **SERVICE**

10:59 AM

(GSX-S950)



2. Press the SELECT switch (Up or Down) to select the units to be used. The selected item is highlighted.

```
UNIT          EXIT
✓km/h,km/L,°C
→ km/h,L/100km,°C
mph,MPG IMP,°C
mph,MPG US,°F


---


10:59AM
```

3. Press the SELECT switch (Down) for about 2 seconds. The check mark “✓” moves to the selected units. At the same time, the meter switches to the selected units.

```
UNIT          EXIT
km/h,km/L,°C
→ ✓km/h,L/100km,°C
mph,MPG IMP,°C
mph,MPG US,°F


---


10:59AM
```

NOTE:

- In the case of the km (km/h) specification meter, only (km/h, km/L, °C), (km/h, L/100km, °C) can be selected.
- When the SELECT switch (Up) is pressed for about 2 seconds while setting, the setting is terminated and the display returns to the “MENU” indication. In this case, the setting at the time of termination is adopted.

6. SERVICE

“Service Reminder” is a function that tells you when the next service is due by a date and distance indication and an indicator light.

WARNING

Continuing to ride the motorcycle without performing required maintenance can adversely affect the motorcycle and may lead to a crash.

Use the service reminder to remind you when it is time to have maintenance performed. Ask your Suzuki dealer to perform the service and to reset the service reminder.

NOTE: Consult your Suzuki dealer for the appropriate service reminder setting.

To check the date and distance that is set, select “SERVICE” from the “MENU” indication and press the SELECT switch (Down) for about 2 seconds. “SERVICE” starts blinking and moves to display the indication screen.


MENU

 **EXIT**



 UNIT
 **SERVICE**
DISPLAY

10:59 AM



<Before the service reminder indicator comes on>

- The set date is indicated.
- The remaining distance to the set distance is indicated.

SERVICE  **EXIT**
2020/12/25
1019 km

10:59 AM

<When the service reminder indicator comes on>


- The “!” and “” marks are indicated when the set date or distance has been reached.
- Regardless of which is reached first, distance or date, the distance is indicated with “-km” or “-mile” and the date is indicated with the set date.
- When the ignition switch is turned ON, you are notified that the service interval has been reached for 3 seconds.

SERVICE  **EXIT**
2020/12/25
!  **- km**

10:59 AM

<Opening advance notice screen>

When 1 month or 1000 km (600 mile) remains before the set date or distance, advance notice of the service interval (inspection date, remaining distance) is indicated for 3 seconds when the ignition switch is turned ON.

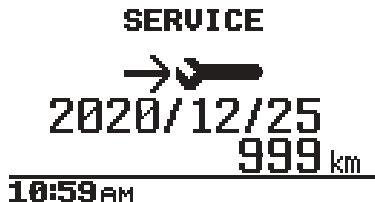

<Opening alarm screen>


If the service reminder indicator comes on, an alarm screen is indicated for 3 seconds when the ignition switch is turned ON.




RIDING ASSISTANCE SYSTEM SETTINGS

SUZUKI DRIVE MODE SELECTOR (SDMS) (GSX-S1000)

SDMS is a device that allows engine output characteristics to be chosen from A, B, or C drive modes to suit the rider's preferences, with a range of choices available for riding modes including high-speed cruising and congested roads.

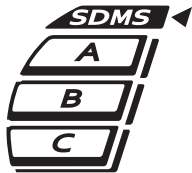

Drive Mode Characteristics

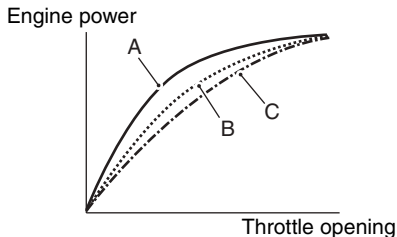

A-mode

A-mode provides sharp throttle response at all throttle openings to obtain maximum engine power.

B-mode

B-mode provides softer throttle response than A-mode up to middle throttle openings.


C-mode

C-mode provides softer throttle response than B-mode up to high throttle openings.


Mode setting

When the ignition switch is turned ON, the motorcycle will be in the drive mode that was selected the last time the ignition switch was turned OFF. Follow the procedure below to operate the Suzuki drive mode selector.

1. Press and hold the MODE switch ① for about 2 seconds to go into the mode selection state.

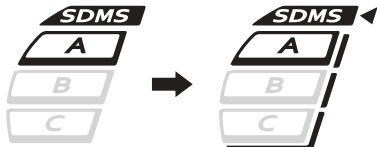

2. Close the throttle grip completely. Press the SELECT switch ② (Up or Down) to select a mode. By pressing the SELECT switch ② (Up), the indication changes in the order of C → B → A. By pressing the SELECT switch ② (Down), the indication changes in the order of A → B → C.

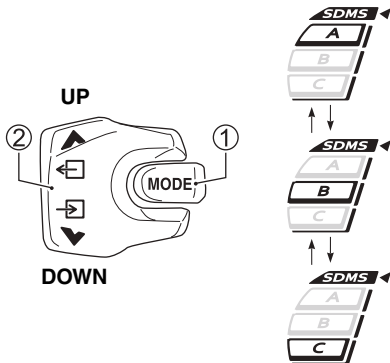

3. The Suzuki drive mode selector indicator indicates the selected mode. When the MODE switch ① is pressed, the mode selection state is canceled.

WARNING

Operating the SDMS while the motorcycle is traveling changes the engine speed and output, and may adversely affect riding stability.

Operate the SDMS only while the motorcycle is stopped.

NOTE:

- *Operating the Suzuki drive mode selector while riding with the throttle opened will change the engine speed because of the change in engine power characteristics.*
- *The Suzuki drive mode selector indicator blinks when the drive mode change operation has failed.*
- *When the mode is to be changed, do it with the throttle closed. When the throttle is opened, mode change is unavailable.*
- *If the mode cannot be switched, the indicator blinks when the SELECT switch ② (Up or Down) is pressed.*

TRACTION CONTROL SYSTEM

When the traction control system senses rear wheel spin during acceleration, it automatically controls engine power output to restore the gripping power of the rear tire. The traction control indicator light "TC" blinks when the traction control system is controlling engine power output.

WARNING

Relying too much on the traction control system can be hazardous.

The traction control system cannot provide control to limit rear wheel spin under certain conditions. The system cannot control rear wheel spin resulting from high speed cornering, excessive bank angle, braking operation or engine braking effect. Be sure to operate the motorcycle at an appropriate speed according to your riding skill, weather and road conditions.

WARNING

When using tires of other than the specified size, the traction control system will be unable to control engine power normally.

When replacing tires, be sure to use the specified tires.

NOTE:

- *When the traction control system is controlling engine power output, the engine sound and exhaust sound will change.*
- *When the front or rear tires do not stay in full contact with the road surface, such as when riding on a bumpy road, the traction control system will control engine power output.*
- *When the traction control system is controlling engine power output, the engine speed will not increase even if the throttle grip is operated to increase engine power. If this happens, close the throttle completely to restore the normal condition.*

(GSX-S1000)

The traction control system can be turned OFF or can be set to one of 5 sensitivity settings (Mode 1 to Mode 5).

The traction control system regulates the engine output so as to reduce the rear wheel's free spinning. The sensitivity level is the lowest in Mode 1 and is the highest in Mode 5.


(GSX-S950)

The traction control system can be turned OFF or can be set to one of 3 sensitivity settings (Mode 1 to Mode 3).

The traction control system regulates the engine output so as to reduce the rear wheel's free spinning. The sensitivity level is the lowest in Mode 1 and is the highest in Mode 3.

If "TC OFF" is selected, the engine output is not regulated even when the rear wheel spins freely.

NOTE: Before riding, check the setting mode on the traction control system indicator in the instrument panel.

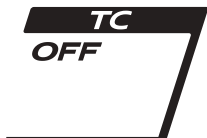

Mode setting

1. Press the MODE switch ① to go into the mode selection state.




 
 
 

2. Close the throttle grip completely. Press the SELECT switch ② (Up or Down) to select a mode.

(GSX-S1000)

- By pressing the SELECT switch ② (Up), the indication changes from Mode 5 to OFF.
- By pressing the SELECT switch ② (Down), the indication changes from OFF to Mode 5.

(GSX-S950)

- By pressing the SELECT switch ② (Up), the indication changes from Mode 3 to OFF.
- By pressing the SELECT switch ② (Down), the indication changes from OFF to Mode 3.
- If the MODE switch ① is pressed while selecting a mode, then the mode selection state is canceled.

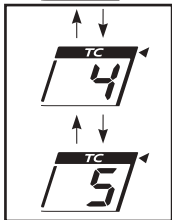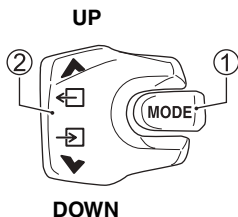

(GSX-S1000)

⚠ WARNING

Concentrating on the meters and switches while riding is dangerous.

If you must change the traction control system mode while riding, be sure to pay sufficient attention to the safety of the surroundings.



NOTE:

- Be sure to keep the throttle fully closed when changing the mode. If the change of mode is not possible because the throttle is not fully closed, the selected mode on the traction control system indicator blinks.
- If the mode cannot be changed, the indicator blinks when SELECT switch ② (Up or Down) is pressed.

IGNITION SWITCH

POSITIONS


There are 4 positions for the ignition switch; ON ①, OFF ②, LOCK ③ and P ④.

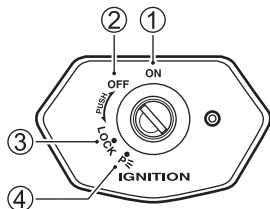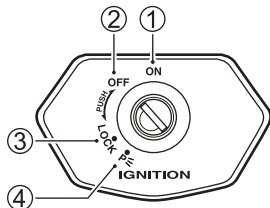

(Immobilizer equipped model)

NOTE:


- The key hole ① can be covered by turning the lid ②.

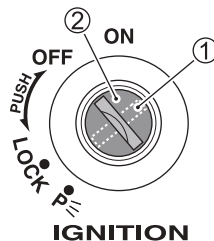

- Align the lid hole position with the key-hole position when inserting the key.



Align the lid hole position with the keyhole position when inserting the key.

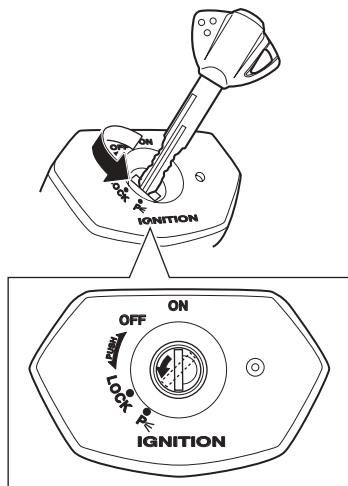

⚠ WARNING

Operating the key while the motorcycle is moving may result in a crash.

Operate the key only after stopping the motorcycle.

WARNING

Falls caused by impact or slipping may result in malfunctioning of the motorcycle. Motorcycle malfunctions may result in fires, or could result in injury from moving parts such as the rear wheel.

If the motorcycle falls, turn the ignition switch off immediately and stop all devices. As falling may damage parts that are not visible, have your motorcycle inspected by a Suzuki dealer.

NOTICE

Operating the ignition switch while the motorcycle is running will stop the engine operating smoothly and may negatively affect the engine and the catalytic converter.

Do not operate the ignition switch while the motorcycle is running.

OFF (“OFF” position)

- The engine stops.
- The lights turn off.
- The key can be removed.

ON (“ON” position)

- The engine can start and the motorcycle is able to be ridden.
- The following lights turn on.
 - Headlight
 - Taillight
 - Position light
 - License plate light
- The key cannot be removed.

LOCK (“LOCK” position)

- The handlebars lock.
- The lights do not come on.
- The key can be removed.

To prevent theft, lock the handlebars when leaving the motorcycle. We recommend also using a chain lock.

<Locking>

1. Turn the handlebars all the way to the left.
2. While pushing the key in, turn it from OFF to LOCK.
3. Pull the key out.

NOTE:

- *Move the handlebars to the left and right, and check that they are locked firmly.*
- *If the handlebars are difficult to lock, turn the key while moving them slightly to the right.*

<Unlocking>

Insert the key and while pushing it in, turn it from LOCK to OFF.

NOTE:

- *Before riding, move the handlebars to the right and left, and check that they turn the same amount in both directions.*
- *The ignition switch key hole features a lid that covers it.*
- *If the lid hole is misaligned, align the lid hole to the key hole.*

“P” (PARKING) position

When parking the motorcycle, lock the steering and turn the key to the “P” position. The key can now be removed and the position light, license plate light and taillight will remain lit and the steering will be locked. This position is for night time roadside parking to increase visibility.

WARNING


Turning the ignition switch to the “P” (PARKING) or “LOCK” position while the motorcycle is moving can be hazardous. Moving the motorcycle while the steering is locked can be hazardous. You could lose your balance and fall, or you could drop the motorcycle.

Stop the motorcycle and place it on the side stand before locking the steering. Never attempt to move the motorcycle when the steering is locked.

IMMOBILIZER (if equipped)

Compares whether the ID of the key inserted is one that has been registered in the motorcycle ECM, and determines whether or not to start the engine.

When the ignition switch ① is turned ON, the ECM ② directs the controller contained in the key ③ to transmit its ID ④. (At this time, the number of times the indicator blinks indicates the number of keys registered to the motorcycle ⑥) In response, the key sends its ID ⑤, and if the ECM deems the ID to be correct, the engine can be started, and the indicator lights for 2 seconds ⑦.

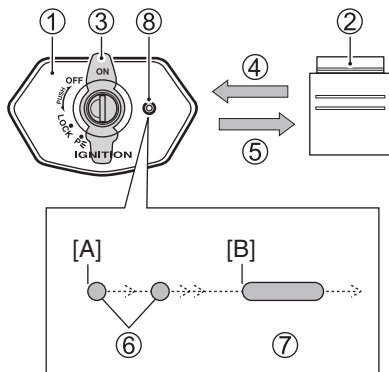

[A] Ignition switch is turned ON

[B] Engine can be started

⑧ Immobilizer indicator

NOTE:


- *If the indicator continues to blink without stopping, then the key is wrong or there is a transmission error. Turn the ignition switch OFF, and redo the operation.*
 - *Initially 2 keys are registered to the motorcycle. 2 additional keys can be registered. The number of times the indicator blinks indicates the number of keys registered to the motorcycle.*
 - *If both keys are lost, 2 blank keys and the ECM must be replaced. Be sure to store the spare key in a safe place.*
 - *When inserting the key, bringing the spare key for this motorcycle or an immobilizer-compatible key from another motorcycle close to the immobilizer antenna may cause the immobilizer system to stop functioning normally. Do not attach 2 or more immobilizer-compatible keys to a key holder.*
- *Metal items, magnetic items, and items that transmit radio signals have a detrimental effect on immobilizer transmission. Accordingly, do not attach the immobilizer to a key holder or put it near keys.*

HANDLEBAR SWITCHES

DIMMER SWITCH / HEADLIGHT FLASHER SWITCH / LAP TIME COUNTER SWITCH

Dimmer switch

Changes the headlight between high-beam and low-beam.

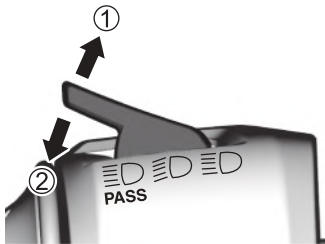

- ① High-beam
- ② Headlight flasher / Lap time counter

High-beam “”

Push the switch away from you to change to high-beam.

Low-beam “”

Pull the switch toward you to change to low-beam.

Headlight Flasher Switch / Lap Time Counter Switch

“” position

This position has two functions;

- Press the switch to flash the headlight high beam.
- Use the switch for lap time measurement. Refer to the INSTRUMENT PANEL section for details.

NOTE: For more detailed information on LAP TIME, see page 2-48.

NOTICE

The heat of the headlight may melt the lens or damage objects.

Do not leave objects in front of the headlight or taillight, or cover the headlight or taillight with a cloth, etc.

NOTICE

If tape is applied to the headlight, the location where the tape has been applied may melt due to heat from the light.

Do not apply tape to the headlight.

NOTE: Set the headlight to low-beam if there are oncoming vehicles or vehicles traveling ahead of you.

MODE SWITCH

The MODE switch operates the following functions:

- Suzuki drive mode selector (SDMS)
( 2-75)
- Traction control system operation
( 2-78)

HORN SWITCH

While the switch is pressed, the horn sounds.

TURN SIGNAL LIGHT SWITCH “”

Use as a signal when turning right or left, or when changing lanes.

Right turn “”

Set the switch to the “” side to make the right turn signal light blink. Push the switch in to cancel turn signal operation.

Left turn “”

Set the switch to the “” side to make the left turn signal light blink. Push the switch in to cancel turn signal operation.

WARNING

Leaving the turn signal on may cause others to misunderstand your intended direction of travel, and cause crashes.

The turn signal switch does not turn off automatically. After use, be sure to push the switch in to cancel turn signal operation.

ENGINE STOP SWITCH / ELECTRIC STARTER SWITCH

Engine Stop Switch

Stop the engine immediately in emergency situations such as a fall. Placing the engine stop switch in the “” (STOP) position stops the engine. Normally, leave it in the “” position.

“” position

Electric circuits related to the engine are connected.

- The engine can be started and can run.

“” position

Electric circuits related to the engine are not connected.

- The engine stops.
- The engine cannot be started.

NOTICE

Changing the engine stop switch from  to  or from  to  to  while riding may damage to the engine or the catalytic converter (if equipped).

Do not use the engine stop switch except in an emergency.

NOTE: When the engine stop switch has been used to stop the engine, be sure to turn the ignition switch OFF. Leaving the ignition switch ON may cause the battery to run down.

Electric Starter Switch “”

Pressing the electric starter switch causes the starter motor to turn over and starts the engine.

For details, see “STARTING THE ENGINE” on page 2-94

NOTE:

- *The engine cannot start when the engine stop switch is in the “” position.*
- *The motorcycle is equipped with Easy Start functionality, so when you press the electric starter switch the starter motor will keep turning over for a few seconds even if you let the starter switch go. After a few seconds the engine starts, and the starter motor stops.*

HAZARD WARNING SWITCH “”

The hazard warning switch is used in emergency situations, such as when a malfunction has occurred. Moving the switch to the right will blink all turn signals.

NOTE: Do not use the hazard warning switch except for in emergencies. Using it when the engine is stopped may cause the battery to run down.

STARTING THE ENGINE

STARTING PROCEDURE

Use the following procedure to start the engine.

1. Make sure that the transmission is in neutral.
2. Check that the engine stop switch is set to "Q".
3. Set the ignition switch to ON.
4. Check that the malfunction indicator light has gone out.
5. With the throttle grip closed, press the electric starter switch "S". See "SUZUKI EASY START SYSTEM" on page 2-97.
6. Before riding, make sure that the side stand is fully up. See "SIDE STAND / IGNITION INTERLOCK SYSTEM" on page 2-99.

NOTE: This motorcycle has a starter interlock system for the ignition and starter circuit. The engine can only be started if:

- *The transmission is in neutral,*
or
- *The transmission is in gear, the side stand is fully up, and the clutch is pulled in.*

NOTE: This motorcycle features the Suzuki Easy Start System, allowing you to start the engine with a single push of the electric starter switch. For details, see "SUZUKI EASY START SYSTEM" on page 2-97.

When the Engine is Hard to Start:

Open the throttle approximately 1/8 turn and press the electric starter switch "S".

WARNING

Exhaust gas contains carbon monoxide, a dangerous gas that is difficult to detect because it is colorless and odorless. Breathing carbon monoxide can cause death or severe injury.

Never start the engine or let it run indoors or where there is little or no ventilation.

NOTICE

Continuously turning the starter motor for 5 seconds or more consumes a large amount of power and may cause the battery to run down.

Do not push and hold the electric starter switch for 5 seconds or more or use the Suzuki Easy Start System to turn the starter motor over continuously.

NOTICE

After starting the engine, opening the throttle or riding the motorcycle with the oil pressure warning indicator light turned on, may adversely affect the engine.

Make sure that the oil pressure warning indicator light has turned off before opening the throttle or riding the motorcycle.

NOTICE

If you start the engine with the gear position indicator and neutral indicator providing incorrect indications, engine damage can occur.

Before starting the engine, check whether the gear position indicator and neutral indicator are providing the indications described below. If they are not providing the indications described below, have your motorcycle inspected promptly by a Suzuki dealer.

- **When the gear position indicator shows N, the neutral indicator is lit.**
- **When the gear position indicator shows one of (1, 2, 3, 4, 5, 6), the neutral indicator turns off.**

NOTE: When starting the engine, you must pull in the clutch if the gear is in any position other than neutral.

NOTE: When the motorcycle falls over, a system stops the engine. The master warning indicator light also comes on. To restart the engine, after righting the motorcycle, temporarily turn the ignition switch OFF, then turn it on again. When the malfunction indicator light goes off the engine can be started again.

NOTICE

If you hold the electric starter switch down while the malfunction indicator is lit, the battery may run down.

Do not hold the electric starter switch down while the malfunction indicator is lit.

SUZUKI EASY START SYSTEM

You can start the engine with a single push of the electric starter switch. The starter motor continues to turn over after you take your hand off the switch, and stops after a few seconds or after the engine starts.

- If the gear position is neutral you can start the engine without pulling in the clutch.
- If the gear position is anything except neutral you must pull in the clutch to start the engine.

In some cases the engine may not start due to the position of the side stand and the gear. For details see "SIDE STAND / IGNITION INTERLOCK SYSTEM" on page 2-99.

NOTE: Depending on the condition of the battery, the engine might not start easily by Suzuki Easy Start System. If the engine is difficult to start, squeeze the clutch lever with the transmission in neutral and continue pressing the electric starter switch to start the engine. If the engine fails to start, the battery will most likely lose power. In this case, charge or change the battery.

Proper Warm up

In the following circumstances, run the engine for a period of several tens of seconds to several minutes to warm it up before riding.

- When you have not used the motorcycle for an extended period
- In extremely low temperatures (as a guide, -10°C (14°F) or less) in cold regions

In any other circumstances, out of consideration for the environment, begin riding promptly after starting the engine.

NOTICE

Immediately after starting the engine, revving the engine, sudden acceleration, or abrupt braking may cause the engine to malfunction.

Run the engine for a period of several tens of seconds to several minutes to warm it up before beginning travel.

NOTICE

Leaving the engine running for an extended period without riding, in order to charge the battery, etc., may cause the engine to overheat. Overheating may damage engine parts and cause the exhaust pipe to change color.

Stop the engine if you do not intend to begin riding promptly.

SIDE STAND / IGNITION INTERLOCK SYSTEM

The motorcycle has a system to prevent riders from forgetting to stow the side stand and then traveling with it down.

The system operates as follows.

<When the side stand is down>

- The engine cannot be started when the motorcycle is in gear. (The engine can be started if the motorcycle is in neutral)
- Placing the motorcycle in gear while the engine is running stops the engine.

<When the side stand is fully up>

Moving the side stand down while the engine is running and the motorcycle is in gear stops the engine.

WARNING

If you move the side stand down while riding the motorcycle, the engine will stop, which may cause a crash.

Never move the side stand down while riding the motorcycle.

NOTE:


- *If side stand is not completely up the engine stops when you shift gears from neutral to any other gear.*
- *Lubricate the side stand if it does not operate smoothly.*

REFUELING


REFUELING PROCEDURE

Use the following procedure to refill with gasoline.

1. Open the fuel tank cap key cover.
2. Insert the key and turn it to the right to unlock.

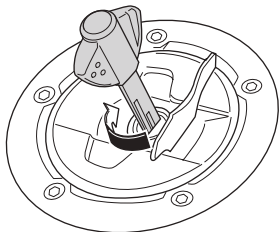


3. Open the cap.

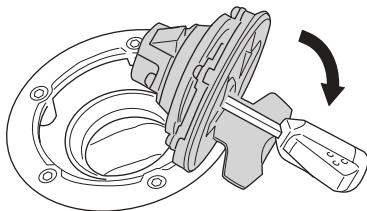

4. Refill with gasoline.
Since gasoline may leak from the cap, do not fill any higher than the lower edge ① of the inlet.

**Specified fuel: Unleaded premium
gasoline**

**Fuel tank capacity: 19.0 L
(5.0/4.2 US/Imp. gal)**

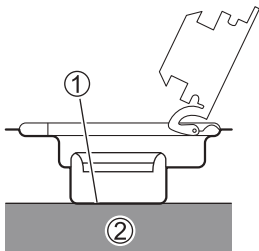

② Fuel

5. Push down the cap, then turn the key to the left and remove it.
The key cannot be removed if the cap is not locked.

WARNING

Gasoline is very flammable and may cause fires if handled incorrectly.

- When refilling with gasoline, stop the engine and do not bring flame into proximity.
- Be sure to refill outdoors.
- Before opening the fuel tank cap, touch a metal section of the motorcycle body or gasoline pump to eliminate static electricity from your body. If you are statically charged the static may discharge with a spark, causing the gasoline to catch fire.
- Refill with gasoline yourself, away from other people.
- After refilling, close the fuel tank cap firmly until it makes a clicking sound.
- Wipe away any spilled gasoline with a cloth.

NOTICE

If the engine develops some trouble like lack of acceleration or insufficient power, the cause may be due to the fuel the motorcycle uses.

In such case, try changing to a different gas station. If the situation is not improved by changing, consult your Suzuki dealer.

NOTICE


Spilled gasoline containing alcohol can damage the painted surfaces of your motorcycle.

Be careful not to spill any fuel when filling the fuel tank. Wipe spilled gasoline up immediately.

SHIFTING GEARS

DESCRIPTION

This motorcycle has a 6-speed transmission, with neutral located between 1st and 2nd gear.

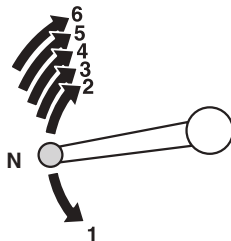

NOTE:

- When the transmission is in neutral, the green indicator light on the instrument panel will be lit. However, even though the light is illuminated, cautiously and slowly release the clutch lever to make sure that the transmission is positively in neutral.
- When the “Quick Shift” is set to MODE <ON>, the clutch lever operation is not required in the shift change operation after starting the motorcycle. For more detailed information on the “Quick Shift”, see page 2-68, 2-106. (GSX-S1000)

(Canada)

The table below shows the approximate speed range for each gear.

Shifting up schedule

Gear position	km/h	mph
1st → 2nd	32	20
2nd → 3rd	52	32
3rd → 4th	62	39
4th → 5th	71	44
5th → 6th	79	49

Shifting down schedule

Gear position	km/h	mph
6th → 5th	71	44
5th → 4th	62	39
4th → 3rd	52	32
3rd → 2nd	32	20
2nd → 1st	19	12

Disengage the clutch when the motorcycle speed drops below 15 km/h (9 mph).

GEARSHIFT PROCEDURE

The transmission is designed to allow the engine to operate smoothly in its normal operating speed range. When riding, shift gears to match the conditions. Do not slip the clutch to adjust motorcycle speed as doing so causes wear on the clutch. When reducing speed, shift gears down to match the engine speed.

1. Before starting off, stow the side stand.
2. Squeeze the clutch lever and operate the gearshift lever to change gears into 1st gear and move off smoothly.
3. Change gears according to motorcycle speed.

Return the throttle grip temporarily and squeeze in the clutch lever completely before changing gears.

Operate the gearshift lever lightly with the toes, moving it firmly until you feel the lever click.

WARNING

Downshifting when engine speed is too high can:

- **cause the rear wheel to skid and lose traction due to increased engine braking, resulting in a crash; or**
- **force the engine to overrev in the lower gear, resulting in engine damage.**

Reduce speed before downshifting.

WARNING

Downshifting while the motorcycle is leaned over in a corner may cause rear wheel skid and loss of control.

Reduce your speed and downshift before entering a corner.

NOTICE

Holding the motorcycle stopped with throttle and clutch lever operation on inclines can damage the motorcycle's clutch.

Use the brakes when stopping the motorcycle on inclines.

NOTICE

When the engine becomes abnormally hot, the clutch may not engage well.

If the engine becomes very hot and the clutch is not engaging well, stop the motorcycle in a safe place and let the engine cool.

NOTICE

Incorrect gearshift operation or riding with your foot on the gearshift lever may cause damage to the engine.

- Do not perform the gear change operation with the clutch lever not firmly squeezed.
- Do not apply excessive force when using the gearshift lever.
- Do not ride with your foot on the gearshift lever.

NOTE:


- *When changing gears, move the lever firmly until you feel the lever click.*
- *Do not increase engine speed excessively. Doing so will negatively affect engine life.*
- *Do not ride at an excessive speed.*
- *If something appears strange while riding, have the motorcycle checked immediately by a Suzuki dealer.*
- *Take care when riding to ensure that engine speed does not enter the red zone.*
- *It is easy to enter the red zone when revving the engine or accelerating suddenly in 1st or 2nd gear, so particular care is required in such situations.*
- *If engine speed enters the red zone, close the throttle promptly to reduce engine speed.*
- *When the gear position changes to neutral while riding, the engine speed limiter functions to protect the engine and power systems, limiting engine speed.*

What is “Quick Shift” (GSX-S1000)

The “Quick Shift” is a function that assists the shift change operation during motorcycle riding.

Once the “Quick Shift” has been set on the instrument panel display, the shift change operation is available without using the throttle grip or clutch lever during riding.

When the motorcycle starts moving from the stopping status, or is stopped with the gear engaged, it is required for you to use the clutch lever to perform the shift change operation.

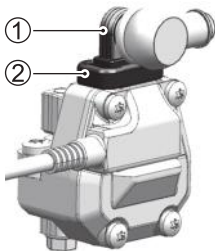

- ① Gearshift sensor lever
- ② Boot

NOTICE

Failure to observe the following operational rules may result in damage to gearshift sensor and related components.

- Do not disassemble gearshift sensor or boot.
- Do not use organic solvents such as part cleaners or gasoline on gearshift sensor and related components.
- Do not subject gearshift sensor and surrounding areas to high-pressure washing.

NOTICE

When any of the parts related to the gear shifting mechanism, are changed or modified, the “Quick Shift” might not operate correctly. Also, unlike the automatic transmission, the “Quick Shift” does not perform the shift change operation automatically. Operating the system in low gears with very high RPM may place a high load on the units such as the transmission.

Perform the shift change operation yourself according to the engine or motorcycle speed.

“Quick Shift” operation procedure (GSX-S1000)

1. Set the MODE setting of “QS SET” (Quick Shift) to <ON> on the instrument panel display. For details, see “4. QS SET (Quick Shift) (GSX-S1000)” on page 2-68
2. Squeeze the clutch lever to shift the gear to the 1st position.

NOTE: Even when the “Quick Shift” has been set, the gear shift lever operation procedure is not changed from that before the setting. If the shift change is to be performed regardless of the setting of “Quick Shift”, move the gear shift lever securely until the end of its travel.

3. When the shift change operation is to be performed after the motorcycle starts moving, do not use the clutch lever, but move the gear shift lever.
- When the shift change operation is to be performed, the motorcycle adjusts the engine speed according to the situation at that time, so the throttle grip operation is not required.
 - The “Quick Shift” is activated when the engine speed exceeds 2000 r/min.
 - When the shift change operation is to be performed, move the gear shift lever until you feel it at the end of its travel.
 - When the Quick Shift indicator blinks, the “Quick Shift” is not available.

NOTE: “Quick Shift” may not operate when the ambient temperature is low. If this happens, start the engine and allow the engine to warm before trying again. If “Quick Shift” still does not operate, contact your Suzuki dealer.

NOTICE

When the shift change operation is performed in the following cases, without using the clutch lever, the engine or drive system might be damaged. In the following cases, use the clutch lever.

- The “Quick Shift” has been set to <OFF>.
- The engine speed is 2000 r/min or less.

NOTE: During riding, the Quick Shift indicator blinks in the following cases.

- The shift change operation is performed at the engine speed of 2000 r/min or less.*
 - The shift change operation is performed with the clutch lever squeezed.*
 - The shift down operation is performed with the gear shifted to the 1st position or the shift up operation is performed with the gear shifted to the 6th position.*
4. When the motorcycle is to be stopped, stop it with the clutch lever squeezed.

NOTE:

- Even when the shift change operation is performed continuously using the “Quick Shift”, the shift change operation should be done correctly step by step.*
- When the shift change operation is performed without clutch lever squeezed and with the throttle opening angle kept constant, the “Quick Shift” operation can be smoothly performed.*

Issues that Require Dealer Maintenance

Contact your Suzuki dealer whenever the following issues occur.

- “Quick Shift” does not operate when the engine is warm.
- Gearshift sensor lever is sticking.
- Torn boot

BRAKE LEVER


DESCRIPTION

The front brake is applied by squeezing the brake lever gently toward the throttle grip. This motorcycle is equipped with a disk brake system and excessive pressure is not required to slow the machine down properly. The brake light will be lit when the lever is squeezed inward.


The space between the brake lever and grip can be adjusted to 5 settings.

ADJUSTMENT

1. Push the brake lever forward and rotate the adjuster ① to the desired position.
2. Align the numbers on the adjuster with the "Alignment mark" ②.

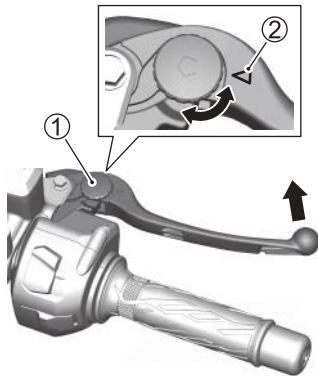

(GSX-S1000)

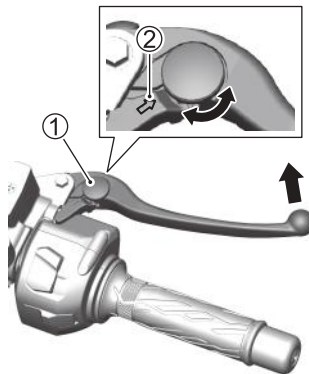

(GSX-S950)

NOTE:

- *Adjust by aligning the protuberances on the lever with the indentations on the adjuster.*
- *The adjuster is set to the 3rd position at the factory.*

⚠ WARNING


Adjusting the brake lever position while riding may result in a crash.

Adjust the brake lever position only while stopped.

REAR BRAKE PEDAL

DESCRIPTION

Stepping on the rear brake pedal ① applies the rear brake. The brake light comes on at the same time.

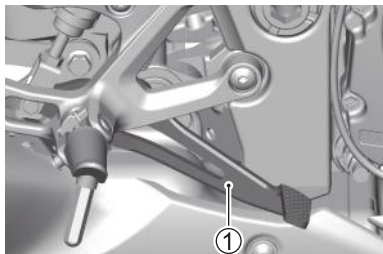


SEAT

FRONT SEAT

Removal

1. Remove the rear seat. (☞ 2-115)
2. Remove the bolt ①.

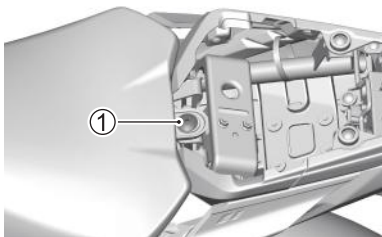

3. Raise the rear end of the seat and slide it backward.

Installation

Slide the seat hooks into the seat hook retainers and tighten the bolt securely.



⚠ WARNING


Failure to install the seat properly could allow the seat to move and cause loss of rider control.

Fasten the seat securely in its proper position.

REAR SEAT AND SEAT LOCK


Removal

1. To remove the rear seat, insert the ignition key into the seat lock and turn it clockwise.
2. Raise the front end of the seat and slide it forward.

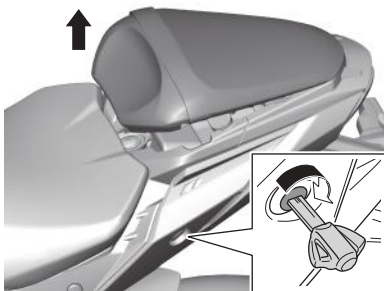

Installation

1. Slide the seat hooks into the seat hook retainers.
2. Push down firmly until the seat snaps into the locked position.

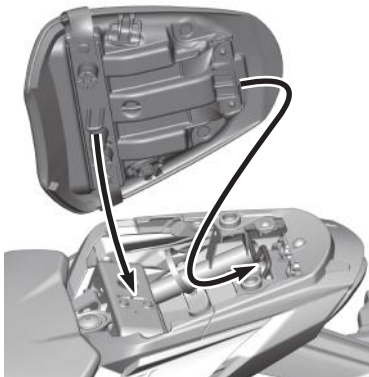

NOTE:

- *Lift up the seat gently and check that it is locked.*
- *Care is required, because if the seat is locked with the key placed underneath it, you will be unable to retrieve the key.*

⚠ WARNING

If the seat is not attached correctly it may move, interfering with riding.

Lock the seat firmly in the correct position.

HELMET HOLDERS

There are helmet holders underneath the rear seat. To use them, remove the seat, hook your helmet to the helmet holder and refit the seat.




⚠ WARNING

Riding with a helmet fastened to the helmet holder can interfere with rider control.

Never carry a helmet fastened to the helmet holder. Fix the helmet securely atop the seat if you must carry it.

LUGGAGE STRAPS


The luggage straps are folded under the rear seat. Extract the straps from the hooks and reinstall the seat with the straps out. Hook bands to the straps to fix luggage on the seat.

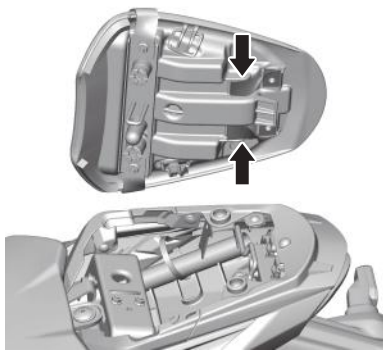

DOCUMENT HOLDER

A document holder is available when the rear seat is removed.

Place the owner's manual ① in a plastic bag and store it here.

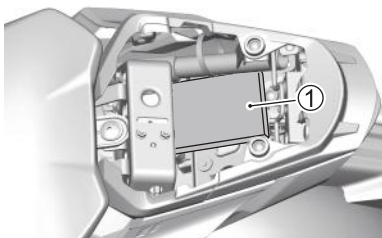

SIDE STAND

The side stand is used when parking the motorcycle. This motorcycle is equipped with a side stand.

To place the motorcycle on the side stand, place your right foot on the end of the side stand and push down firmly until the stand pivots fully through its arc and comes to rest against its stop.

For details on the side stand / ignition interlock system, see page 2-99.



WARNING

Riding with the side stand incompletely retracted can result in a crash when you turn left.

Check operation of the side stand / ignition interlock system before riding. Always retract the side stand completely before starting off.

NOTE: When parking the motorcycle, choose a surface that is as hard and flat as possible. If you cannot avoid parking on a slope, stop the motorcycle with the front facing up the slope, and place it in 1st gear to lock the tires in place.

SUSPENSION ADJUSTMENT

DESCRIPTION

The standard settings for both the front (GSX-S1000) and rear suspensions are selected to meet various riding conditions such as low to high motorcycle speed and light to heavy load on the motorcycle. The suspension settings can be adjusted and fine-tuned according to your preference.

NOTICE

Turning adjusters by force can damage the suspensions.

Do not turn adjusters beyond their natural limits.

FRONT SUSPENSION (GSX-S1000)

WARNING

Unequal suspension adjustment can cause poor handling and instability.

Adjust the right and left front forks to the same setting.

NOTICE

When a dirty front fork is adjusted as it is, oil leakage might occur due to a sticking adjuster or seal damage.


Before adjustment, wash the dirt completely off from the front fork.

Spring Pre-load Adjustment




To adjust the spring pre-load, turn the adjuster ① clockwise or counterclockwise.

- Turning the adjuster clockwise will increase the spring pre-load.
- Turning the adjuster counterclockwise will decrease the spring pre-load.

NOTE: Adjust both the right and left adjusters to the same position.

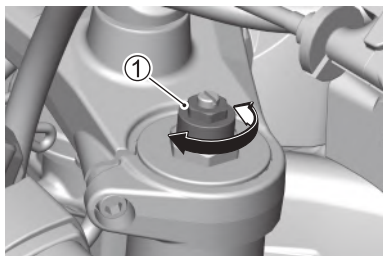

 There are 5 grooved lines on the side of the adjuster for reference. Position 0.5 provides the minimum spring pre-load and position 5.5 provides the maximum pre-load. This motorcycle is delivered from the factory with its adjuster set on position 2.5.

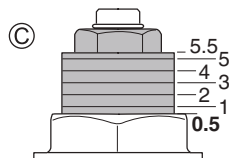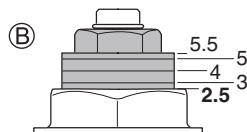

- Ⓐ Position 5.5
- Ⓑ Position 2.5
- Ⓒ Position 0.5

Damping Force Adjustment



The rebound and compression damping force can be individually adjusted by turning the respective adjusters.

The rebound damping force adjusters ② are located at the top of the front suspension. The compression damping force adjusters ③ are located at the bottom of the front suspension.

To adjust the damping force, set the adjuster to the standard setting first and then adjust the adjuster to the desired position.

NOTE:

- Do not loosen the adjuster base ④, or front fork oil will ooze through the adjuster base.
- Adjust both the right and left to the same position.

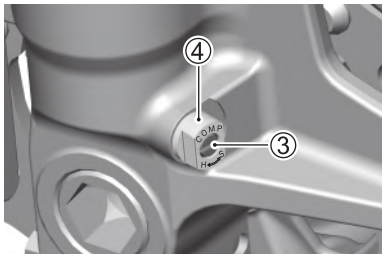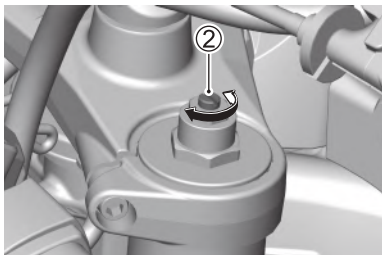

<Rebound damping force standard setting>

To set the rebound damping force adjuster to the standard position, turn the adjuster clockwise until it stops and then turn it counterclockwise 8 clicks.

- Turn the adjuster clockwise from the standard position to stiffen the damping force.
- Turn the adjuster counterclockwise from the standard position to soften the damping force.

The damping force should be adjusted gradually, 1 click at a time, to fine-tune the suspension.

<Compression damping force standard setting>

To set the compression damping force adjuster to the standard position, turn the adjuster clockwise until it stops and then turn it counterclockwise 2 turns.

- Turn the adjuster clockwise from the standard position to stiffen the damping force.
- Turn the adjuster counterclockwise from the standard position to soften the damping force.

The damping force should be adjusted gradually, 1/8 turn at a time, to fine-tune the suspension.

REAR SUSPENSION

WARNING



This unit contains high-pressure nitrogen gas.

Mishandling can cause explosion.

- Keep away from fire and heat.
- Read owner's manual for more information.

NOTE: Ask your Suzuki dealer to dispose of the rear suspension unit.

NOTICE

Forcing the adjuster to turn may damage the suspension.

Do not rotate the adjuster beyond the limit.

NOTICE

Adjusting the rear shock absorber while it is dirty may cause sand to enter the adjuster, or make the oil leak by damaging the oil seal.


Wash before adjusting to remove sand and other dirt sufficiently.

Spring Pre-load Adjustment

The rear suspension spring pre-load is adjustable to compensate for the rider, load, riding style and road conditions. To adjust the rear suspension spring pre-load, turn the adjuster ①. The spring pre-load is adjustable to 7 positions.

To change the spring pre-load setting, place the motorcycle on the side stand. Twist the spring tension ring to the desired position with the adjuster provided in the tool kit. Position 1 provides the softest spring tension and position 7 provides the stiffest.

This motorcycle is delivered from the factory with its adjuster set on position 3.

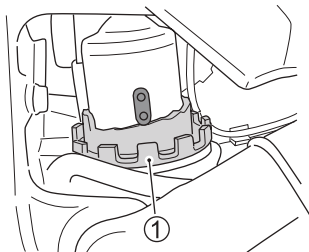


Damping Force Adjustment

The rebound damping force adjuster ② is located at the bottom of the rear suspension damper unit. To adjust the damping force, set the adjuster to the standard setting first and then adjust it to the desired position.

To set the rebound damping force adjuster to the standard position, turn the adjuster clockwise until it stops and then turn it counterclockwise 1 turn.

- Turn the adjuster clockwise from the standard position to stiffen the damping force.
- Turn the adjuster counterclockwise from the standard position to soften the damping force.

The damping force should be adjusted gradually, 1/8 turn at a time, to fine-tune the suspension.

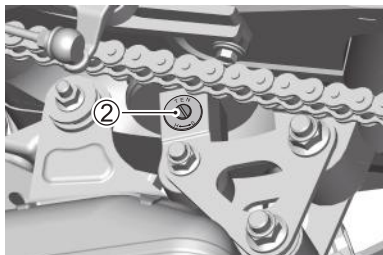

INSPECTION AND MAINTENANCE

INSPECTION BEFORE RIDING	3-10
TOOLS	3-13
FUEL TANK	3-14
LUBRICATION	3-18
BATTERY	3-20
SPARK PLUG	3-24
AIR CLEANER	3-25
ENGINE OIL	3-30
ENGINE COOLANT	3-42
ENGINE IDLE SPEED	3-48
FUEL HOSE	3-48
DRIVE CHAIN	3-49
CLUTCH	3-54
BRAKES	3-56
GEARSHIFT LEVER	3-65
TIRES	3-68
SIDE STAND / IGNITION INTERLOCK SYSTEM	3-75
FRONT WHEEL	3-76
REAR WHEEL	3-82
LIGHTING SYSTEM	3-86
HEADLIGHT BEAM	3-90
FUSES	3-91
DIAGNOSTIC CONNECTOR	3-98

INSPECTION AND MAINTENANCE

DESCRIPTION

Regular inspection and maintenance are essential to riding your motorcycle safely, and to ensuring that it lasts a long time. The following simple inspections and maintenance tasks that are normally carried out frequently.

Carry out periodic inspections even when you do not use the motorcycle for an extended period. Inspect your motorcycle carefully when you begin using it again after an extended period of non-use.

Follow the guidelines in the chart. The intervals between periodic services in kilometers, miles and months are shown. At the end of each interval, be sure to perform the maintenance listed.

WARNING

Improper maintenance or failure to perform recommended maintenance can lead to a crash.

Keep your motorcycle in good condition. Ask your Suzuki dealer or a qualified mechanic to perform the maintenance items marked with an asterisk (*). You may perform the unmarked maintenance items by referring to the instructions in this section, if you have mechanical experience. If you are not sure how to do any of the jobs, ask your Suzuki dealer to do the maintenance.

WARNING

Inspection with the engine running is dangerous, as your hands or clothing may become caught in moving engine parts, resulting in serious injury.

Turn the engine off when inspecting anything other than the lights, engine stop switch, and throttle.

WARNING

Exhaust gas contains carbon monoxide, a dangerous gas that is difficult to detect because it is colorless and odorless. Breathing carbon monoxide can cause death or severe injury.

Never start the engine or let it run indoors or where there is little or no ventilation.

WARNING

For inspections while riding, maintain sufficient awareness of the traffic situation in the vicinity.

Reduce speed to less than normal, and perform the inspection in an area where there is little traffic.

WARNING

Performing maintenance beyond your competence without specialist knowledge may cause crashes or breakdowns.

For safety, only perform maintenance that is within your knowledge and area of competence. Consult a Suzuki dealer regarding anything difficult.

WARNING

Because of the presence of gasoline and flammable oils, there is a risk of fire if there are any ignition sources in close proximity when performing inspection and maintenance.

Do not smoke or bring a flame close to the motorcycle when performing maintenance.

CAUTION

The muffler and the engine become hot when the engine is running. Touching them before they cool down may cause burns.

When performing maintenance on parts close to the muffler or engine, wait until they have cooled down sufficiently to touch before starting maintenance.

NOTICE

Performing maintenance with your motorcycle in an unstable location may result in the motorcycle falling over during the process.

Perform maintenance in a location with a flat solid surface.

NOTICE

Servicing electrical parts with the ignition switch in the “ON” position can damage the electrical parts when the electrical circuit is shorted.

Turn off the ignition switch before servicing electrical parts to avoid short-circuit damage.

NOTICE

Poorly-made replacement parts can cause your motorcycle to wear more quickly and may shorten its useful life.

When replacing parts on your vehicle, use only genuine Suzuki replacement parts or their equivalent.

NOTE:

- *The MAINTENANCE CHART specifies the minimum requirements for maintenance. If you use your motorcycle under severe conditions, perform maintenance more often than shown in the chart. If you have any questions regarding maintenance intervals, consult your Suzuki dealer or a qualified mechanic.*
- *Recycle or properly dispose of used oil.*

MAINTENANCE CHART

Interval: This interval should be judged by number of months or odometer reading, whichever comes first.

Item	Interval	months	2	12	24	36	48
		km	1000	6000	12000	18000	24000
		miles	600	3750	7500	11250	15000
Air cleaner element (🔧 3-25)			–			R	
* Exhaust pipe bolts and muffler bolts			T	–	T	–	T
* Exhaust control valve				–		–	
* Valve clearance			–	–	–	–	
* Spark plugs			–		R		R
Fuel hose (🔧 3-48)			–				
			*Replace every 4 years				
* Evaporative emission control system (if equipped)			–	–		–	
Engine oil (🔧 3-30)			R	R	R	R	R
Engine oil filter (🔧 3-30)			R	–	–	R	–
* PAIR (air supply) system			–	–		–	
* Throttle bore cleaning			–	–		–	
* Throttle valve synchronization			–	–		–	
* Engine coolant (🔧 3-42)	"SUZUKI SUPER LONG LIFE COOLANT" (Blue)		Replace every 4 years or 48000 km (30000 miles)				
	"SUZUKI LONG LIFE COOLANT" (Green) or an engine coolant other than "SUZUKI SUPER LONG LIFE COOLANT" (Blue)		–	–	R	–	R
Radiator hose (🔧 3-47)			–				

Item	Interval	months	2	12	24	36	48
		km	1000	6000	12000	18000	24000
		miles	600	3750	7500	11250	15000
Clutch cable play (🔧 3-54)		–					
Drive chain (🔧 3-49)							
		Clean and lubricate every 1000 km (600 miles)					
* Brakes (🔧 3-56)							
Brake hose (🔧 3-56)		–					
		*Replace every 4 years					
Brake fluid (🔧 3-57)		–					
		*Replace every 2 years					
Tires (🔧 3-68)		–					
* Steering			–		–	–	
* Front forks		–	–		–	–	
* Rear suspension		–	–		–	–	
* Chassis bolts and nuts		T	T	T	T	T	T
Lubrication (🔧 3-18)		Lubricate every 1000 km (600 miles)					

NOTE: I= Inspect and clean, adjust, replace or lubricate as necessary;
R= Replace; T= Tighten

(For Europe and Oceania countries)

Item	Interval	months	2	12	24	36	48
		km	1000	12000	24000	36000	48000
		miles	600	7500	15000	22500	30000
Air cleaner element (🔧 3-25)			–	I	I	R	I
* Exhaust pipe bolts and muffler bolts			T	T	T	T	T
* Exhaust control valve			I	–	I	–	I
* Valve clearance		Inspect every 24000 km (15000 miles)					
* Spark plugs			–	R	R	R	R
Fuel hose (🔧 3-48)			–	I	I	I	I
			*Replace every 4 years				
* Evaporative emission control system (if equipped)			–	–	I	–	I
Engine oil (🔧 3-30)			R	R	R	R	R
Engine oil filter (🔧 3-30)			R	–	R	–	R
* PAIR (air supply) system			–	–	I	–	I
* Throttle bore cleaning			–	I	I	I	I
* Throttle valve synchronization			–	I	I	I	I
* Engine coolant (🔧 3-42)	"SUZUKI SUPER LONG LIFE COOLANT" (Blue)		–	–	–	–	R
	"SUZUKI LONG LIFE COOLANT" (Green) or an engine coolant other than "SUZUKI SUPER LONG LIFE COOLANT" (Blue)		–	–	R	–	R
Radiator hose (🔧 3-47)			–	I	I	I	I

Item	Interval	months	2	12	24	36	48
		km	1000	12000	24000	36000	48000
		miles	600	7500	15000	22500	30000
Clutch cable play (☞ 3-54)		–					
Drive chain (☞ 3-49)							
		Clean and lubricate every 1000 km (600 miles)					
* Brakes (☞ 3-56)							
Brake hose (☞ 3-56)		–					
		*Replace every 4 years					
Brake fluid (☞ 3-57)		Inspect every year or 6000 km (3750 miles) *Replace every 2 years					
Tires (☞ 3-68)		–					
* Steering							
* Front forks		–					
* Rear suspension		–					
* Chassis bolts and nuts		T	T	T	T	T	T
Lubrication (☞ 3-18)		Lubricate every 1000 km (600 miles)					

NOTE: *I and Inspect= Inspect and clean, adjust, replace or lubricate as necessary;
R= Replace; T= Tighten*

INSPECTION BEFORE RIDING

Check the condition of the motorcycle to help make sure that you do not have mechanical problems or get stranded somewhere when you ride. Be sure your motorcycle is in good condition for the personal safety of the rider, passenger, and protection of the motorcycle.

WARNING

If you operate this motorcycle with improper tires or improper or uneven tire pressure, you may lose control of the motorcycle. This will increase your risk of a crash.

Always use tires of the size and type specified in this owner's manual. Always maintain proper tire pressure as described in the INSPECTION AND MAINTENANCE section.

WARNING

Failure to inspect your motorcycle before riding and to properly maintain your motorcycle increases the chances of a crash or equipment damage.

Always inspect your motorcycle each time you use it to make sure it is in safe operating condition. Refer to the **INSPECTION AND MAINTENANCE** section in this owner's manual.

WARNING

Checking maintenance items when the engine is running can be hazardous. You could be severely injured if your hands or clothing get caught in moving engine parts.

Shut the engine off when performing maintenance checks, except when checking the lights, engine stop switch, and throttle.

WHAT TO CHECK	CHECK FOR:
Steering	• Smoothness • No restriction of movement • No play or looseness
Throttle	Smooth operation and positive return of the throttle grip to the closed position
Clutch ( 3-54)	• Correct lever play • Smooth and progressive action
Brakes ( 2-111, 2-113, 3-56)	• Proper pedal and lever operation • Fluid level in the reservoir to be above "LOWER" line • Correct pedal and lever play • No "sponginess" • No fluid leakage • Brake pads not worn down to the limit line
Suspension ( 2-119)	Smooth movement
Fuel ( 2-37)	Enough fuel for the planned distance of operation
Drive chain ( 3-49)	• Correct tension or slack • Adequate lubrication • No excessive wear or damage

WHAT TO CHECK	CHECK FOR:
Tires ( 3-68)	• Correct pressure • Adequate tread depth • No cracks or cuts
Engine oil ( 3-30)	Correct level
Cooling system ( 3-42)	• Proper coolant level • No coolant leakage
Lighting ( 2-24, 2-89)	Operation of all lights and indicators
Horn ( 2-90)	Correct function
Engine stop switch ( 2-92)	Correct function
Side stand / Ignition interlock system ( 2-99)	Proper operation

 
TOOLS

LIST

A tool kit is supplied and located under the rear seat.

After using the toolkit, install it using the following procedure.

1. Put the tools in the case in the direction as shown in the illustration.



2. Store the tool kit in the direction as shown in the illustration, and fix it with a band.




FUEL TANK


LIFTING

Lift up the fuel tank using the following procedure.


1. Place the motorcycle on the level ground.
2. Remove the front and rear seat by referring to the SEAT section. (☞ 2-114)
3. Remove the bolt. Unhook the hooks and remove the right and left frame body covers ① by sliding the covers forward.

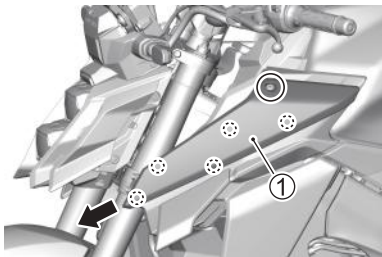


4. Remove the bolt and fasteners. Unhook the hooks and remove the right and left frame body covers assembly ② by sliding the covers forward.

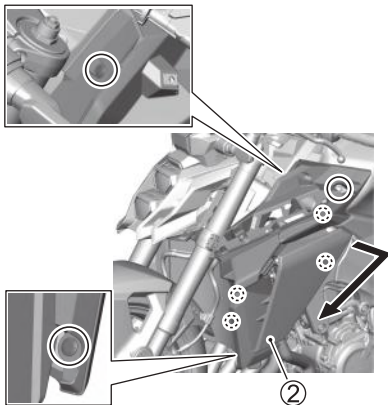


5. Remove the bolt and fasteners. The frame covers have fasteners behind the cover at the places marked with rectangles. Unhook the hooks and remove the right and left frame covers ③.

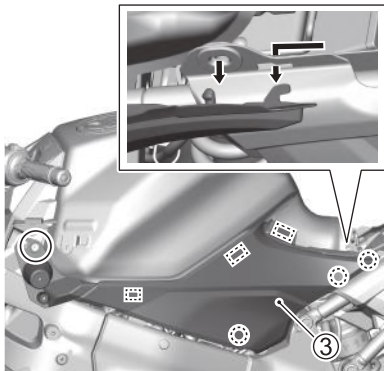


6. Remove the right and left bolts and fasteners. Unhook the hooks and pull up the fuel tank upper cover ④.

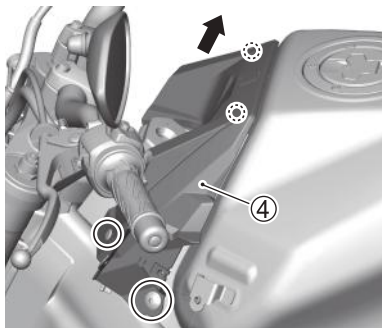


7. Unhook the hooks and remove the fuel tank lower cover assembly ⑤.

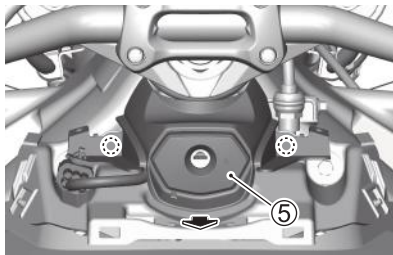

8. Remove the fuel tank fitting bolts.

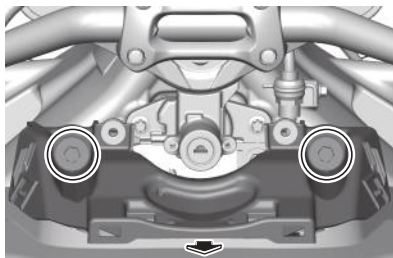

9. Lift the front end of the fuel tank and prop it up as shown above. Put the circle end of the prop stay on to the steering stem nut.

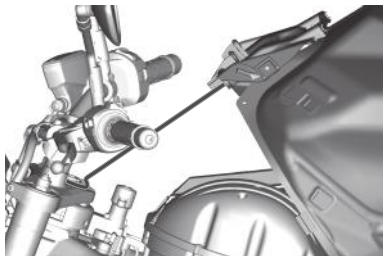

NOTE: A prop stay is available at your Suzuki dealer. The prop stay part number is 44560-23H00.


WARNING

If you lift up the fuel tank when it is full, fuel can seep out from the fuel tank cap, creating a fire hazard.


Reduce the fuel level to less than 1/4 full before lifting up the fuel tank. The fuel indicator on the instrument panel will blink or remain lit when the fuel level is less than 1/4 full.

REMOVING

1. Lift the fuel tank by referring to the FUEL TANK LIFTING section. (☞ 3-14)
2. Disconnect the hoses ① and coupler ②.
3. Pull the retainer ③.
4. Disconnect the fuel feed hose joint ④ from the fuel pipe.

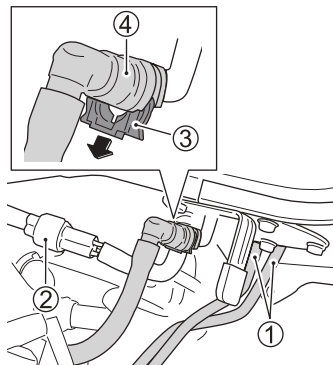

5. Remove the bolt and nut.

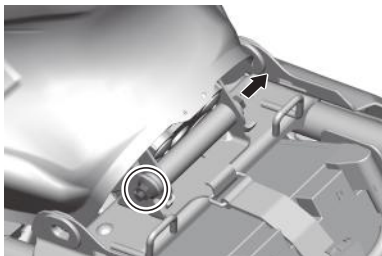

6. Remove the fuel tank.

LUBRICATION

LUBRICATION POINTS



Proper lubrication is important for smooth operation and long life of each working part of your motorcycle and also for safe riding. It is good practice to lubricate the motorcycle after a long rough ride and after getting it wet in the rain or after washing it.

NOTICE

Lubricating electrical switches can damage the switches.

Do not apply grease or oil to electrical switches.

Major lubrication points are indicated below.

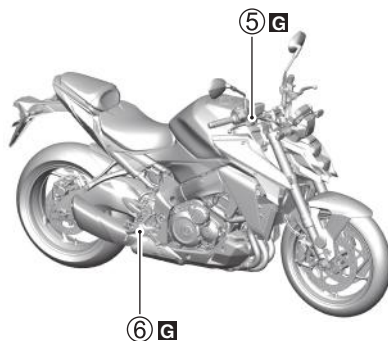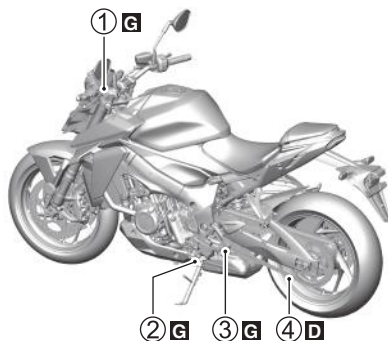

G Grease

D Drive chain lubricant

① Clutch lever pivot

② Side stand pivot and spring hook

③ Gearshift lever pivot and footrest pivot

④ Drive chain

⑤ Brake lever pivot

⑥ Brake pedal pivot and footrest pivot


BATTERY

DESCRIPTION

The battery is a sealed-type battery and requires no maintenance. Have your dealer check the battery's state of charge periodically.

The crossed-out wheeled bin symbol (A) located on the battery label indicates that a used battery should be collected separately from ordinary household waste.

The chemical symbol of "Pb" (B) indicates the battery contains more than 0.004% lead.

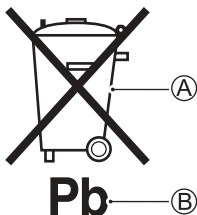

By ensuring the used battery is disposed of or recycled correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of the battery. The recycling of materials will help to conserve natural resources. For more detailed information about disposing or recycling of the used battery, consult your Suzuki dealer.

NOTE:

- *For charging a sealed-type battery, use a battery charger applicable to a sealed-type battery.*
- *If you cannot charge the battery, consult your authorized Suzuki dealer.*
- *Select the same type MF battery when replacing the battery.*
- *Recharge the battery once a month if the motorcycle is not used for a long time.*

WARNING

The battery contains dilute sulfuric acid, which may cause blindness or severe burns.

Do not tip the battery when removing it. When working close to the battery, wear gloves and appropriate protective equipment to protect the eyes. If sulfuric acid enters your eyes, wash them immediately in copious amounts of water for at least 15 minutes and then consult a doctor. If you ingest sulfuric acid, drink copious amounts of water immediately and then consult a doctor. If sulfuric acid comes into contact with your skin or clothes, remove your clothes and wash them immediately in copious amounts of water. Store in a location out of the reach of children.

WARNING

Battery posts, terminals, and related accessories contain lead and lead compounds. Lead is harmful to your health if it gets into your blood stream.

Wash hands after handling any parts containing lead.

WARNING

Batteries produce flammable hydrogen gas which can explode if exposed to flames or sparks.

Keep flames and sparks away from the battery. Never smoke when working near the battery.

WARNING

Wiping the battery with a dry cloth can cause a static electricity spark, which can start a fire.

Wipe the battery with a damp cloth to avoid static electricity build up.

NOTICE


Exceeding the maximum charging rate for the battery can shorten its life.

Never exceed the maximum charging rate for the battery. Consult a Suzuki dealer if anything is unclear.

REMOVING

To remove the battery, follow the procedure below:


1. Support the motorcycle on the side stand.
2. Set the ignition switch to OFF.
3. Remove the front and rear seat by referring to the SEAT section. (➡ 2-114)
4. Disconnect the negative (-) terminal ①.
5. Disconnect the positive (+) terminal ②.
6. Remove the band ③.
7. Remove the battery ④.

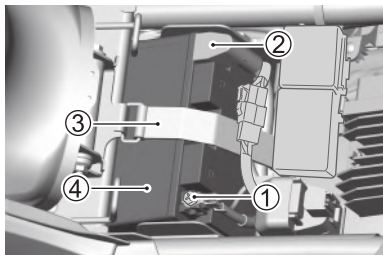

NOTICE

If the battery terminals come into contact with the frame when removing or installing the battery, it may cause a short circuit.

When handling the battery, be careful not to bring the battery terminals too close to the frame.

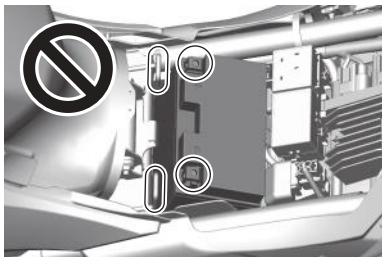

8. Wipe any white powder adhering to the terminal section away with warm water. If there is severe corrosion, buff it off with sandpaper.

NOTE:

- When removing battery cables, be sure to set the ignition switch to OFF and remove the negative (–) side first. When attaching battery cables, attach the positive (+) side first.
- Tighten so that there is no slackness in the terminal section, and attach the positive (+) terminal cover firmly.
- When replacing the battery, consult a Suzuki dealer.

INSTALLATION

To install the battery:

1. After cleaning, apply a thin layer of grease to the terminal section, install the battery in the reverse order of removal.
2. Connect the battery terminals securely and reinstall the cap.

NOTE: Be sure to reset the engine rpm indicator in the instrument panel when the battery terminals are reconnected.

NOTICE

Reversing the battery lead wires can damage the charging system and the battery.

Always attach the red lead to the (+) positive terminal and the black (or black with white tracer) lead to the (-) negative terminal.

SPARK PLUG

DESCRIPTION

For the spark plug check or replacement procedure, consult with your Suzuki dealer or a qualified mechanic.

AIR CLEANER

DESCRIPTION

The air cleaner element must be kept clean to provide good engine power and gas mileage. If you use your motorcycle under normal low-stress conditions, you should service the air cleaner at the intervals specified. If you ride in dusty, wet or muddy conditions, you will need to inspect the air cleaner element much more frequently.

Use the following procedure to remove the element and inspect it.

WARNING

Operating the engine without the air cleaner element in place can be hazardous. A flame can spit back from the engine to the air intake box without the air cleaner element to stop it. Severe engine damage can also occur if dirt enters the engine due to running the engine without the air cleaner element.

Never run the engine without the air cleaner element in place.

NOTICE


Failure to inspect the air cleaner element frequently if the vehicle is used in dusty, wet, or muddy conditions can damage your motorcycle. The air cleaner element can become clogged under these conditions, and engine damage may result.

Always inspect the air cleaner element after riding in severe conditions. Replace the element as necessary. If water gets in the air cleaner case, immediately clean the element and the inside of the case.


AIR CLEANER ELEMENT

Removing


1. Lift up the fuel tank. See “FUEL TANK” on page 3-14.
2. Remove the band ①. Remove the ECM ② from the air cleaner.

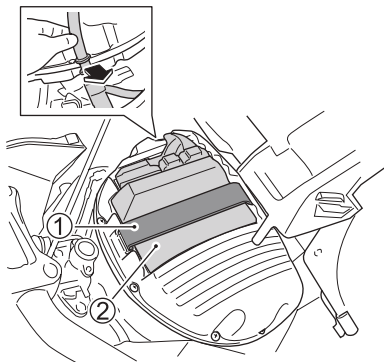


3. Remove the 10 screws and remove the air cleaner cap ③.

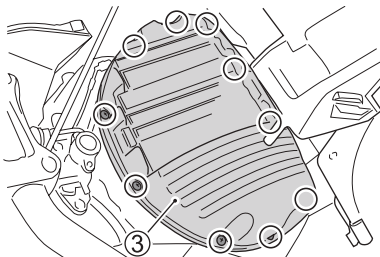

4. Remove the screws and air cleaner element ④.

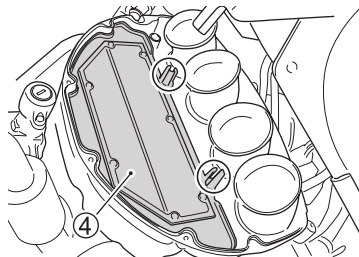

5. Inspect the air cleaner element condition. Replace the air cleaner element periodically.

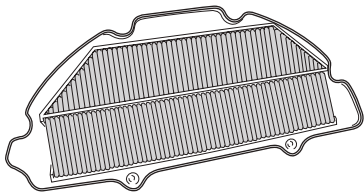

NOTICE

Compressed air can damage the air cleaner element.

Do not blow the air cleaner element with compressed air.

Installation

1. Reinstall the air cleaner element in reverse order of removal.

NOTICE

A torn air cleaner element will allow dirt to enter the engine and can damage the engine.

Replace the air cleaner element with a new one if it is torn. Carefully examine the air cleaner element for tears during cleaning.

NOTICE

Failure to position the air cleaner element properly can allow dirt to bypass the air cleaner element. This will cause engine damage.

Be sure to properly install the air cleaner element.


2. Reinstall the fuel tank.

NOTE: Check that the fuel tank drain hose and breather hose are not bent before reinstalling the fuel tank.

AIR CLEANER DRAIN PLUG CLEANING

Removing

Every year, check to see if water or oil has accumulated in the air cleaner drain tube attached to the bottom of the air cleaner box. If dirt or water has accumulated, remove the air cleaner drain tube ① and then remove any accumulated dirt and water.

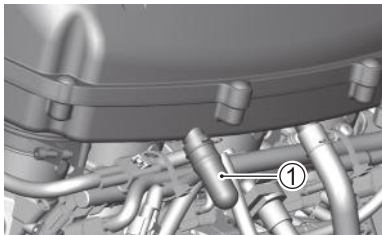

Installation

Attach the air cleaner drain tube firmly.

ENGINE OIL

DESCRIPTION

Engine life depends on oil amount and quality. Daily oil level checks and periodic changes are two of the most important maintenance items to be performed.

NOTE: Before adding, draining, or replacing engine oil, read cautions on the engine oil container and instructions in this section.

SELECTING THE ENGINE OIL

Suzuki recommends the use of SUZUKI Genuine Oil or Equivalent Engine Oil.

< SUZUKI Genuine Oil >

Standard Oil	SAE	JASO
ECSTAR R9000	10W-40	MA
ECSTAR R7000	10W-40	MA
ECSTAR R5000	10W-40	MA

< Equivalent Engine Oil >

Equivalent Engine Oil means engine oil that meets the following standards.


SAE	API	JASO
10W-40	SJ, SL, SM or SN	MA (MA1, MA2)

API: American Petroleum Institute

JASO: Japanese Automobile Standards Organization

SAE engine oil viscosity

If SAE 10W-40 engine oil is not available, select an alternative according to the following chart.

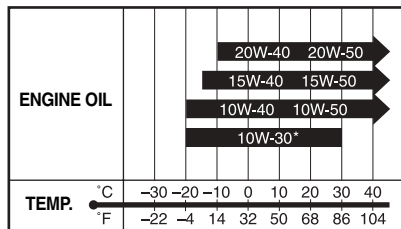

* USE ONLY SJ or SL.

NOTICE

Mixing oils of different makes and grades may alter the quality of the oil and cause a breakdown.

Do not mix oils or use low-quality oil.

Energy conserving

Suzuki does not recommend the use of “ENERGY CONSERVING” or “RESOURCE CONSERVING” oils. Some engine oils which have an API classification of SJ, SL, SM or SN have an “ENERGY CONSERVING” or “RESOURCE CONSERVING” indication in the API classification donut mark. These oils can negatively affect engine life and clutch performance.

API SJ, SL, SM or SN



Recommended

API SJ, SL or SM



API SN




Not recommended

JASO T903

The JASO T903 standard is an index to select engine oils for 4-stroke motorcycle and ATV engines. Motorcycle and ATV engines lubricate clutch and transmission gears with engine oil. JASO T903 specifies performance requirements for motorcycle and ATV clutches and transmissions.

There are two classes, MA (MA1, MA2) and MB. For example, the oil container shows the MA classification as follows.

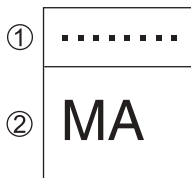

- ① Code number of oil sales company
- ② Oil classification


CHECKING THE ENGINE OIL LEVEL

Check the engine oil level as follows:

1. Place the motorcycle on level ground on the side stand.
2. Start the engine and allow it to idle for three minutes.
3. Stop the engine and wait three minutes.
4. Stand the motorcycle upright, and check whether the surface of the engine oil in the sight glass on the right side of the engine is between "F" (upper level) ① and "L" (lower level) ②.

If the oil is above the "F" (upper level) ① or below the "L" (lower level) ②, adjust the oil level to be between "F" and "L".

- If the oil is below the "L" (lower level) ②, add additional oil.
- If the oil is above the "F" (upper level) ①, drain oil to adjust the level. Consult a Suzuki dealer for information on how to drain oil.

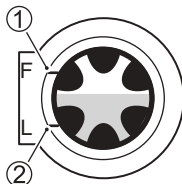

CAUTION

The muffler and the engine become hot when the engine is running and after it has stopped. Touching them before they cool may cause burns.

When performing maintenance on nearby parts, wait until the muffler and engine have cooled down sufficiently to touch before starting maintenance.

NOTICE


Operating the motorcycle with too little or too much oil can damage the engine.

Place the motorcycle on level ground. Check the oil level in the engine oil inspection window before each use of the vehicle. Be sure the engine oil level is always above the “L” (low) line and not higher than the “F” (full) line.

ADD THE ENGINE OIL

Follow the following procedure to add additional engine oil.

1. Idle the engine for three minutes in a flat area, and then stop the engine.
2. Wait three minutes, then remove the oil filler cap ③.

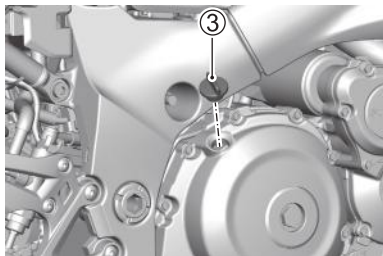

3. Hold the motorcycle upright, and add oil so that the surface of the engine oil is between “F” (upper level) ① and “L” (lower level) ②.
4. Attach the cap ③ firmly.

WARNING

Children and pets may be harmed by swallowing new or used oil.

Keep new and used oil and used oil filters away from children and pets.

WARNING

Repeated, prolonged contact with used engine oil has caused skin cancer in animal tests. Brief contact with oil may irritate skin.

To minimize your exposure to used oil, wear a long-sleeve shirt and moisture-proof gloves (such as dishwashing gloves) when changing oil. If oil contacts your skin, wash thoroughly with soap and water. Launder any clothing or rags if wet with oil. Recycle or properly dispose of used oil and filters.

NOTICE

If any dirt enters from the oil filler opening, it may damage the engine.


Check that there is no dust, mud, or foreign matter adhering to the oil container, and ensure that foreign material does not enter via the oil filler opening.

NOTE: Wipe up any spilled oil completely.

CHANGING THE ENGINE OIL AND FILTER

Change the engine oil and oil filter at the scheduled times. The engine should always be warm when the oil is changed so the oil will drain easily. The procedure is as follows:

1. Place the motorcycle on the side stand.
2. Remove the oil filler cap ③.
3. Remove the drain plug ④ and gasket ⑤ from the bottom of the engine and drain the engine oil into a drain pan.

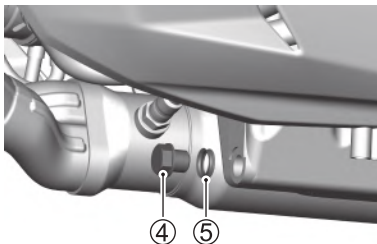

⚠ CAUTION

Hot engine oil and exhaust pipes can burn you.

Wait until the oil drain plug and exhaust pipes are cool enough to touch with bare hands before draining oil.

NOTICE


Turning the engine while draining the engine oil will cause a reduced coating of parts and adversely affect the engine.

Do not use the electric starter switch during engine oil replacement.



NOTE:

- *Recycle or properly dispose of used oil.*
- *Before starting the work, check that there is not any dust, mud, or foreign object inside the oil container or on the oil filter mounting surface.*

4. Remove the bolts and remove the left under cowling ⑥.

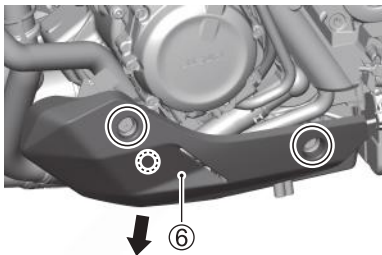


5. Turn the oil filter ⑦ counterclockwise and remove it with a Suzuki “cap type” oil filter wrench or a “strap type” filter wrench of the proper size.

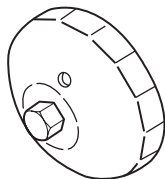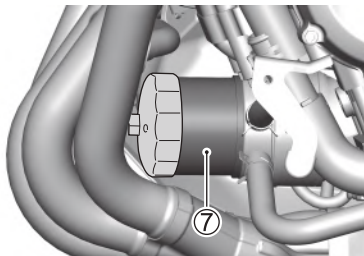


Available from Suzuki dealer
Oil filter wrench (Part No. 09915-40620)

6. Wipe off the mounting surface ⑧ on the engine where the new filter will be seated with a clean rag.

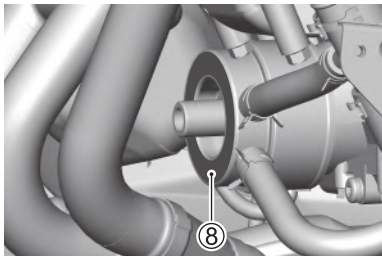

7. Smear a little engine oil around the rubber gasket ⑨ of the new oil filter.

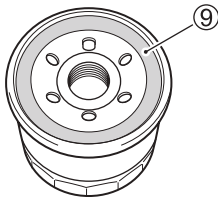

8. Screw the new filter on by hand until the filter gasket contacts the mounting surface (small resistance will be felt).

NOTICE


Failure to use an oil filter with the correct design and thread specifications can damage your motorcycle's engine.

Be sure to use a genuine Suzuki oil filter or an equivalent one designed for your motorcycle.

NOTE: To tighten the oil filter properly, it is important to accurately identify the position at which the filter gasket first contacts the mounting surface.

9. Mark the top dead center position on the “cap type” filter wrench or on the oil filter. Use an oil filter wrench to tighten the filter 2 turns or to specified torque.

Oil filter tightening torque:
20 N·m (2.0 kgf-m, 14.5 lbf-ft)

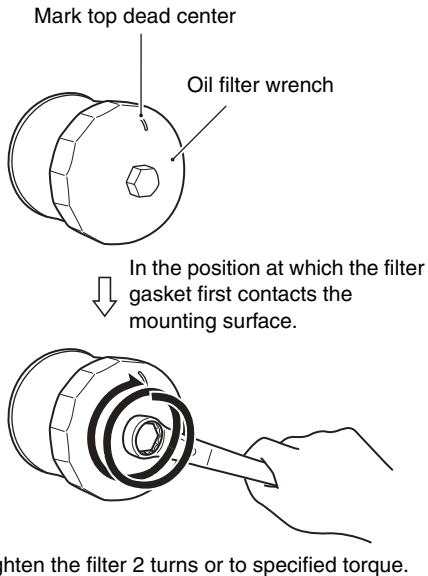

10. Replace the drain plug gasket ⑤ with a new one. Reinstall the drain plug ④ and gasket ⑤. Tighten the plug securely with a torque wrench. Pour 3200 ml (3.4/2.8 US/Imp. qt) of new engine oil through the filler hole and install the filler cap. Be sure to always use the specified engine oil described in the “SELECTING THE ENGINE OIL” section on page 3-30.

Drain plug tightening torque:
23 N·m (2.3 kgf-m, 16.5 lbf-ft)

NOTE: About 2800 ml (3.0/2.5 US/Imp. qt) of oil will be required when changing oil only.

NOTICE

Engine damage may occur if you use oil that does not meet Suzuki's specifications.

Be sure to use the oil specified in the SELECTING THE ENGINE OIL section.

11. Start the engine (while the motorcycle is outside on level ground) and allow it to idle for three minutes.
12. Turn the engine off and wait approximately three minutes. Recheck the oil level in the engine oil inspection window while holding the motorcycle upright. If it is lower than the “L” line, add oil until the oil level is between the “L” line and the “F” line. Inspect the area around the drain plug and oil filter for leaks.

NOTE: If you do not have a proper oil filter wrench, have your Suzuki dealer perform this service.

ENGINE COOLANT

DESCRIPTION

Coolant must be changed regularly. Replace it at appropriate intervals according to the maintenance schedule. Consult a Suzuki dealer regarding coolant replacement.

ABOUT THE ENGINE COOLANT

Engine coolant performs as a rust inhibitor and water pump lubricant as well as an anti-freeze solution. Therefore engine coolant should always be used even though the atmospheric temperature in your area does not go down to the freezing point.

Use "SUZUKI SUPER LONG LIFE COOLANT" or "SUZUKI LONG LIFE COOLANT". If "SUZUKI SUPER LONG LIFE COOLANT" and "SUZUKI LONG LIFE COOLANT" are not available, use a glycol-based antifreeze compatible with an aluminum radiator mixed with distilled water only at the ratio of 50:50.

Solution capacity (total): 2750 ml
(2.9/2.4 US/Imp. qt)

50%	Water	1375 ml (1.5/1.2 US/Imp. qt)
	Coolant	1375 ml (1.5/1.2 US/Imp. qt)

Suzuki super long life coolant (Blue)

“SUZUKI SUPER LONG LIFE COOLANT” is pre-mixed to the proper ratio. Add only “SUZUKI SUPER LONG LIFE COOLANT” if the coolant level drops. It is not necessary to dilute “SUZUKI SUPER LONG LIFE COOLANT” when replacing coolant.

WARNING

Making a mistake when handling coolant may negatively affect both your body and the motorcycle.

Before beginning, read the cautions written on the container carefully. Consult a Suzuki dealer if anything is unclear.


NOTE:

- *Before working with coolant, read cautions on the coolant container and instructions in this section.*
- *A 50% mixture will protect the cooling system from freezing at temperatures above -31°C (-24°F). If the motorcycle is to be exposed to temperature below -31°C (-24°F), this mixing ratio should be increased up to 55% ($-40^{\circ}\text{C}/-40^{\circ}\text{F}$) or 60% ($-55^{\circ}\text{C}/-67^{\circ}\text{F}$) coolant. The mixing ratio should not exceed 60% coolant.*

CHECKING THE COOLANT LEVEL

When the engine is cold, carry out an inspection according to the following procedure.

1. Park on a level surface using the side stand.
2. Hold the motorcycle upright, and check that the coolant level is between “F” (upper level) ① and “L” (lower level) ②.

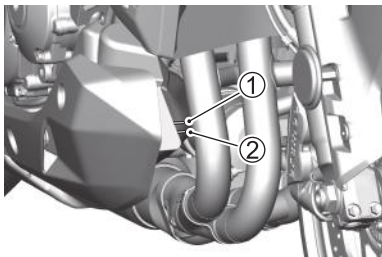


NOTE:

- A marked decrease in coolant may indicate leaks in the radiator body or hoses. Have your motorcycle inspected by a Suzuki dealer.
- If the engine coolant reservoir is empty, check the radiator coolant level.
- Replenish with coolant. Do not use well water or natural water.
- Consult a Suzuki dealer regarding coolant replacement.


TO ADD SPECIFIED ENGINE COOLANT

To add specified engine coolant:


1. Place the motorcycle on the side stand.
2. Remove the bolts. Pull the right under cowling ① downward to unhook the hook. Remove overflow hose from the right under cowling.

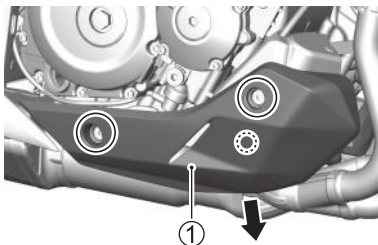

3. Remove the bolts and fasteners. Remove the overflow hose from the under cover and remove the under cover ②.

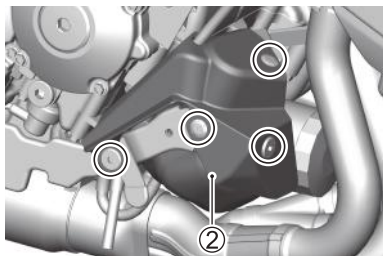

4. Remove the filler cap ③.
5. Add specified engine coolant through the filler hole until it reaches the "F" line ④ with the motorcycle held upright. Refer to the ENGINE COOLANT section. (➡ 3-42)

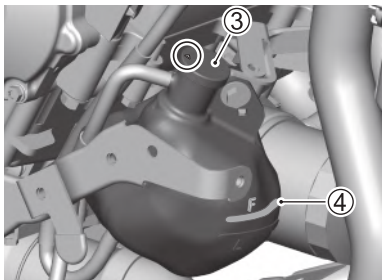

NOTE:

- Adding only water will dilute the engine coolant and reduce its effectiveness.
- Add specified engine coolant. When installing the filler cap, face the triangle mark to the reservoir tank hose side.

⚠ WARNING

Engine coolant is harmful or fatal if swallowed or inhaled. The solution can be poisonous to animals.

Do not drink antifreeze or coolant solution. If swallowed, do not induce vomiting. Immediately contact a poison control center or a physician. Avoid inhaling mist or hot vapors; if inhaled, go to fresh air. If coolant gets in the eyes, flush eyes with water and seek medical attention. Wash thoroughly after handling. Keep out of the reach of children and animals.

WARNING

Removing the radiator cap when the engine is hot may cause the coolant to spray out, causing burns.

Replenish coolant by removing the reservoir tank cap. Do not remove the radiator cap.

NOTICE

Spilled engine coolant can damage the painted surfaces of your motorcycle.

Be careful not to spill any fluid when filling the radiator. Wipe spilled engine coolant up immediately.

RADIATOR HOSE INSPECTION

Inspect the radiator hoses for cracks, damage or engine coolant leakage. If any issues are found, ask your Suzuki dealer to replace the radiator hose with a new one.

ENGINE IDLE SPEED

INSPECTION


Inspect the engine idle speed. The engine idle speed should be 1050 – 1250 r/min when the engine is warm.

NOTE: If the engine idle speed is not within the specified range, ask your Suzuki dealer or a qualified mechanic to inspect and repair the motorcycle.

FUEL HOSE

INSPECTION

Inspect the fuel hose ① for damage and fuel leakage. If any issues are found, the fuel hose must be replaced.

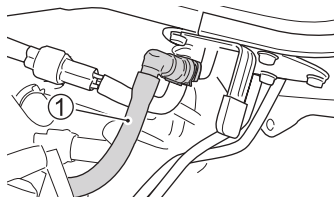

DRIVE CHAIN

DESCRIPTION

This motorcycle has a master link type drive chain. We recommend that you take your motorcycle to an authorized Suzuki dealer if the drive chain needs replacing.

The condition and adjustment of the drive chain should be checked each day before you ride. Always follow the guidelines for inspecting and servicing the chain.

WARNING

Riding with the chain in poor condition or improperly adjusted can lead to a crash.

Inspect, adjust, and maintain the chain properly before each ride, according to the instructions in this section.

INSPECTING THE DRIVE CHAIN

When inspecting the chain, look for the following:

- Loose pins
- Damaged rollers
- Dry or rusted links
- Kinked or binding links
- Excessive wear
- Improper chain adjustment

If you find anything wrong with the drive chain condition or adjustment, correct the problem if you know how.

If necessary, consult your authorized Suzuki dealer.

Damage to the drive chain means that the sprockets may also be damaged. Inspect the sprockets for the following:

- Excessively worn teeth
- Broken or damaged teeth
- Loose sprocket mounting nuts

If you find any of these issues with your sprocket, consult your Suzuki dealer.

WARNING

Improperly installing a replacement chain, or using a joint-clip type chain, can be hazardous. An incompletely riveted master link, or a joint-clip type master link, may come apart and cause a crash or severe engine damage.

Do not use a joint-clip type chain. Chain replacement requires a special riveting tool and a high-quality, non-joint-clip type chain. Ask an authorized Suzuki dealer or a qualified mechanic to perform this work.

DRIVE CHAIN CLEANING AND OILING

Clean and oil the drive chain using the following procedure.

1. Remove dirt and dust from the drive chain. Be careful not to damage the seal rings.
2. For cleaning, use a dedicated sealed chain cleaner or water or neutral detergent and a soft brush. Even a soft brush may harm the seals, so be careful not to damage the seal rings.

NOTICE

Cleaning the drive chain improperly can damage seal rings and ruin the drive chain.

- **Do not use a volatile solvent such as paint thinner, kerosene, or gasoline.**
- **Do not use a high pressure cleaner to clean the drive chain.**
- **Do not use a wire brush to clean the drive chain.**

3. Wipe off water and neutral detergent.
4. Lubricate with a motorcycle sealed drive chain lubricant or high viscosity oil (#80 – 90).

NOTICE


Some drive chain lubricant contains solvents and additives which could damage the seal rings in the drive chain.

Use sealed drive chain lubricant, which is specifically intended for use with sealed drive chains.

5. Lubricate both front and back plates of the drive chain.
6. Wipe off excess lubricant after lubricating all around the drive chain.

DRIVE CHAIN ADJUSTMENT

Inspect the drive chain slack before each use of the motorcycle. Place the motorcycle on the side stand. The drive chain should be adjusted for 20 – 30 mm (0.8 – 1.2 in) of slack, as shown.

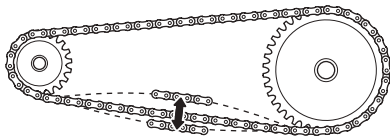

20 – 30 mm
(0.8 – 1.2 in)

⚠ WARNING

Too much chain slack can cause the chain to come off the sprockets, resulting in a crash or serious damage to the motorcycle.

Inspect and adjust the drive chain slack before each use.


⚠ CAUTION

A hot muffler can burn you. The muffler will be hot enough to burn you for some time after stopping the engine.

Wait until the muffler cools before adjusting the drive chain.

To adjust the drive chain, follow the procedure below:

1. Place the motorcycle on the side stand.
2. Loosen the axle nut ①.

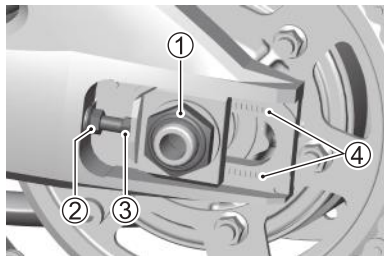

3. Loosen the right and left lock nuts ②.
4. Turn the right and left adjuster bolts ③ until the chain has 20 – 30 mm (0.8 – 1.2 in) of slack halfway between the engine sprocket and rear sprocket.

5. At the same time that the chain is being adjusted, the rear sprocket must be kept in perfect alignment with the front sprocket. To assist you in performing this procedure, there are reference marks ④ on the swingarm and each chain adjuster which are to be aligned with each other and to be used as a reference from one side to the other.
6. Tighten the axle nut ① securely.
7. Recheck the chain slack after tightening and readjust if necessary.
8. Tighten the right and left lock nuts ②.

Rear axle nut tightening torque:
100 N·m (10.0 kgf-m, 72.5 lbf-ft)

Chain adjuster lock nut tightening torque:
22 N·m (2.2 kgf-m, 16.0 lbf-ft)

NOTE: Do not adjust the drive chain beyond the adjustable range ④. Replace the drive chain before the drive chain exceeds the limit.


CLUTCH

CLUTCH CABLE PLAY ADJUSTMENT

At each maintenance interval, adjust the clutch cable play with the clutch cable adjuster. The cable play should be 10 – 15 mm (0.4 – 0.6 in) as measured at the clutch lever end before the clutch begins to disengage. If you find that the amount of clutch cable play is incorrect, adjust it in the following way:


(GSX-S1000)

Turn the clutch cable adjuster ① to provide the specified play.

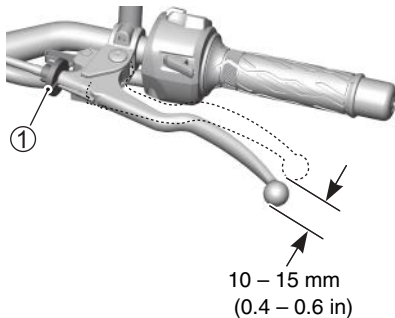

(GSX-S950)

1. Remove the boots ①.
2. Loosen the lock nut ②.
3. Turn the clutch cable adjuster ③ to provide the specified play.
4. Tighten the lock nut ② after finishing adjustment.
5. Reinstall the boots ①.

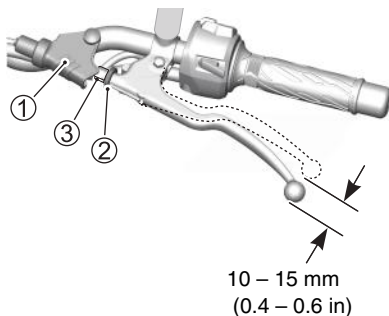

NOTE: In the case that the clutch cable play adjustment is not successfully performed using the above procedure, consult with your Suzuki dealer.

BRAKES

DESCRIPTION

This motorcycle has front and rear disk brakes.

WARNING

Failure to properly inspect and maintain your motorcycle's brake systems can increase your chance of a crash.

Be sure to inspect the brakes before each use according to the INSPECTION BEFORE RIDING section. Always maintain your brakes according to the MAINTENANCE SCHEDULE.


NOTE: Operating in mud, water, sand, or other extreme conditions can cause accelerated brake wear. If you operate your motorcycle under these conditions, the brakes must be inspected more often than recommended in the MAINTENANCE SCHEDULE.

BRAKE HOSE INSPECTION


Inspect the brake hoses and hose joints for cracks, damage, or brake fluid leakage. If any issues are found, ask your Suzuki dealer to replace the brake hose with a new one.

BRAKE FLUID


Check the brake fluid level in both the front and rear brake fluid reservoirs. If the level in either reservoir is below the lower mark ①, inspect for brake pad wear and leaks.

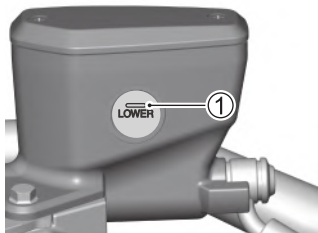

FRONT (GSX-S1000)

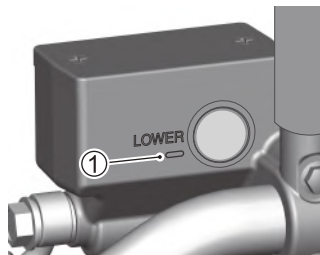

FRONT (GSX-S950)

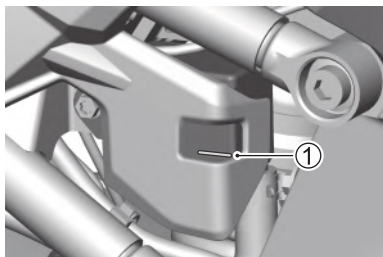

REAR

WARNING

Brake fluid will gradually absorb moisture through the brake hoses. Brake fluid with high water content lowers the boiling point and can cause brake system (including ABS) malfunction due to corrosion of brake components. Boiling brake fluid or brake system (including ABS) malfunction could result in a crash.

Replace the brake fluid every two years to maintain braking performance.

WARNING

A marked decrease in brake fluid may indicate leaks in the brake system. If there is insufficient brake fluid the brakes may not function fully, which may result in a crash.

Have your motorcycle inspected by a Suzuki dealer.

WARNING

The use of any fluid except DOT4 brake fluid from a sealed container can damage the brake system and lead to a crash.

Clean filler cap before removing. Use only DOT4 brake fluid from a sealed container. Never use or mix with different types of brake fluid.

WARNING

If dirt enters the reservoir tank it may cause the brake system to malfunction.

When adding brake fluid, clean around the filler cap before you open it.

WARNING

Brake fluid is harmful or fatal if swallowed, and harmful if it comes in contact with skin or eyes. The solution can be poisonous to animals.

If brake fluid is swallowed, do not induce vomiting. Immediately contact a poison control center or a physician. If brake fluid gets in the eyes, flush them with water and seek medical attention. Wash thoroughly after handling. Keep out of the reach of children and animals.

NOTICE

Spilled brake fluid can damage painted surfaces and plastic parts.

Be careful not to spill any fluid when filling the brake fluid reservoir. Wipe spilled fluid up immediately.

BRAKE PADS

Inspect the front and rear brake pads to see if they are worn down to the grooved wear limit line ①. If a front or rear pad is worn to the grooved wear limit line, both front or both rear pads must be replaced with new ones.


After replacing either the front or rear brake pads, the brake lever or pedal must be pumped several times. This will extend the pads to their proper position.

New brake pads work with different strength when applied, so ride carefully.


NOTE: Do not squeeze / depress the brake lever / pedal when the pads are not in their positions. It is difficult to push the pistons back and brake fluid leakage may result.




FRONT (GSX-S1000)

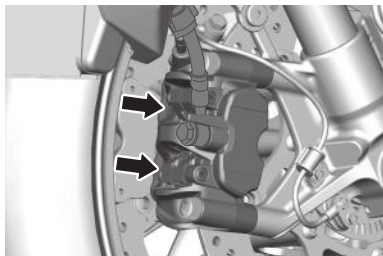


FRONT (GSX-S950)

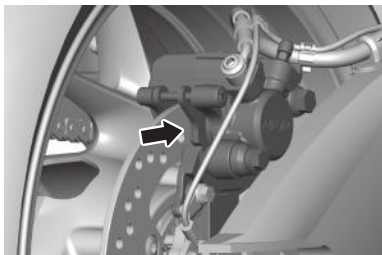


REAR (GSX-S1000)

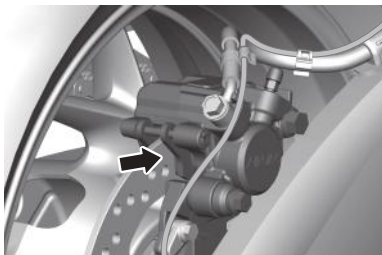


REAR (GSX-S950)

 

FRONT (GSX-S1000)

 

FRONT (GSX-S950)

 

REAR

WARNING

Failure to inspect and maintain the brake pads and replace them when recommended can increase your chance of having a crash.

If you need to replace brake pads, have your Suzuki dealer do this work. Inspect and maintain the brake pads as recommended.

WARNING

Replacing only one of the two brake pads can result in uneven braking action and can increase your chance of having a crash.

Always replace both pads together.

WARNING

If you ride this motorcycle after brake system repair or brake pad replacement without pumping the brake lever / pedal, you may get poor braking performance, which could result in a crash.


After brake system repair or brake pad replacement, pump the brake lever / pedal several times until brake pads are pressed against the brake disks and proper lever / pedal stroke and firm feel are restored.

REAR BRAKE PEDAL ADJUSTMENT

The rear brake pedal position must be properly adjusted at all times or the disk brake pads will rub against the disk causing damage to the pads and to the disk surface.

Adjust the brake pedal position in the following manner:

1. Loosen the lock nut ①, and turn the push rod ② to locate the pedal 50 – 60 mm (2.0 – 2.4 in) below the top face of the footrest.

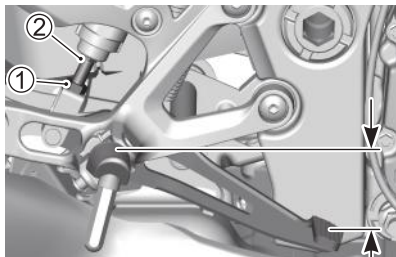

50 – 60 mm
(2.0 – 2.4 in)

2. Retighten the lock nut ① to secure the push rod ② in the proper position.


NOTICE

An incorrectly adjusted brake pedal may force brake pads to continuously rub against the disk, causing damage to the pads and disk.


Follow the steps in this section to adjust the brake pedal properly.

REAR BRAKE LIGHT SWITCH

Check that the brake light lights when the rear brake pedal is depressed approximately 10 mm (0.4 in). Adjust the rear brake light switch if the light lights too early or late.

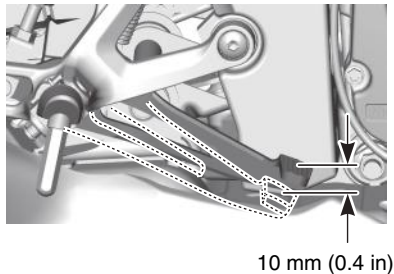

Fix the rear brake light switch body ① with your finger so that it does not rotate, and then rotate the nut ② to adjust it. Rotating the nut as shown in “A” makes the brake light lights earlier. Rotating as shown in “B” makes the light lights later.

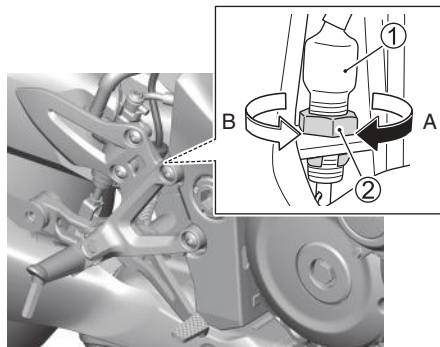

NOTICE

Rotating the rear brake light switch when making adjustments may cause the wiring to disconnect.

Rotate the adjuster so that the rear brake light switch body does not rotate.

GEARSHIFT LEVER


DESCRIPTION

If it is difficult to change gears when riding, the gearshift lever height may not be right for your body. We recommend adjusting the height to suit your body.


GEARSHIFT LEVER ADJUSTMENT

The height of the gearshift lever can be adjusted using the following procedure.

1. Rotate lock nut ① and ② forward (↓) to loosen them, and rotate the rod ③.

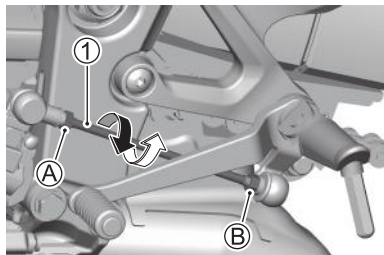


(GSX-S1000)

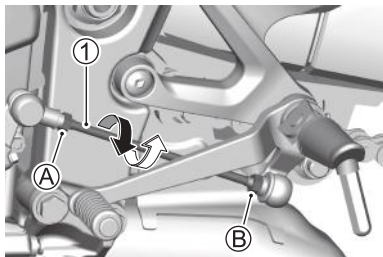


(GSX-S950)

2. Rotate the rod forward (↓) to lower the pedal position, and in the opposite direction (↑) to raise it.

3. Locate the gearshift lever 50 – 60 mm (2.0 – 2.4 in) below the top face of the footrest.

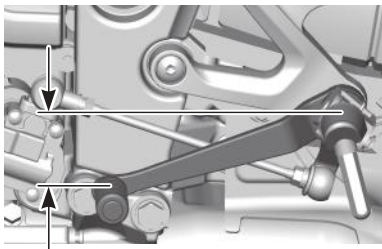

50 – 60 mm (2.0 – 2.4 in)
(GSX-S1000)

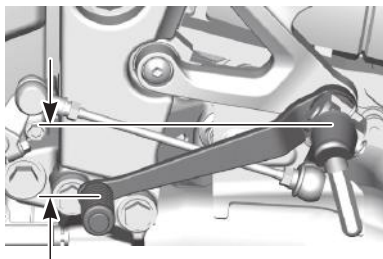

50 – 60 mm (2.0 – 2.4 in)
(GSX-S950)


4. After adjusting, rotate lock nut ① and ② in the opposite direction of step1 (↑) to tighten them.

NOTE: After adjusting, tighten the lock nuts firmly.

TIRES

DESCRIPTION

Check that there are no cracks or damage in the contact surface or sides of the tires. Additionally, check that there are no nails, stones, or other foreign bodies piercing or embedded in the tires.

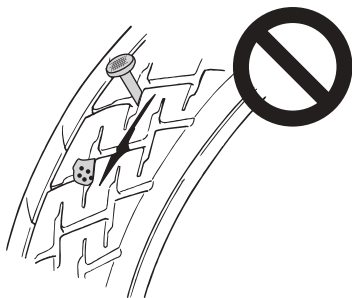

Also, check that there is no unusual wear on the contact surface of the tires. Consult a Suzuki dealer regarding any unusual wear.



When changing tires, be sure to use the designated tires below.

	FRONT	REAR
SIZE	120/70ZR17M/C (58W)	190/50ZR17M/C (73W)
TYPE	DUNLOP Roadsport2 P	DUNLOP Roadsport2 P

WARNING

Using non-designated tires may negatively affect the safe operation of your motorcycle.

Be sure to use the designated tires.

WARNING

An improperly repaired, installed, or balanced tire can cause loss of control and a crash, or can wear out sooner.

- **Ask your Suzuki dealer or a qualified mechanic to perform tire repair, replacement, and balancing because proper tools and experience are required.**
- **Install tires according to the rotation direction shown by arrows on the side-wall of each tire.**

WARNING

The tires on your motorcycle form the crucial link between your motorcycle and the road. Failure to take the precautions below may result in a crash due to tire failure.

- Check tire condition and pressure before each ride, and adjust pressure if necessary.
- Avoid overloading your motorcycle.
- Replace a tire when worn to the specified limit, or if you find damage such as cuts or cracks.
- Always use the size and type of tires specified in this owner's manual.
- Balance the wheel after tire installation.
- Read this section of the owner's manual carefully.

WARNING

Failure to perform break-in of the tires could cause tire slip and loss of control, which could result in a crash.

Use extra care when riding on new tires. Perform proper break-in of the tires referring to the **BREAK-IN** section of this manual and avoid hard acceleration, hard cornering, and hard braking for the first 100 miles (160 km).

NOTE: As new tires slip easily, do not lean the motorcycle too far. Keep the angle of lean gentle while breaking in the tires.

TIRE PRESSURE AND LOADING

For safe riding, read the owner's manual for information on tire pressures and selecting tires to use.

Tires heat up when the motorcycle is traveling, increasing the air pressure. Accordingly, use the tire gauge when the tires are cool, before riding, and check to see if the tires are at the specified pressure. Adjust to the appropriate pressure if the value is outside the specified range. Overloading your tires can lead to tire failure and loss of vehicle control.



Check tire pressure each day before you ride, and be sure the pressure is correct for the vehicle load according to the chart below.

Cold tire inflation pressure

TIRE \ LOAD	SOLO RIDING	DUAL RIDING
FRONT	250 kPa 2.50 kgf/cm ² 36 psi	250 kPa 2.50 kgf/cm ² 36 psi
REAR	290 kPa 2.90 kgf/cm ² 42 psi	290 kPa 2.90 kgf/cm ² 42 psi



Under-inflated tires make smooth cornering difficult, and can result in rapid tire wear. Over-inflated tires cause a smaller amount of tire to be in contact with the road, which can contribute to skidding and loss of control.

NOTE: When you detect drops in tire pressure, check the tire for nails or other punctures, or a damaged wheel rim. Tubeless tires sometimes lose pressure gradually when punctured.

TIRE CONDITION AND TYPE

Tire condition and tire type affect motorcycle performance. Cuts or cracks in the tires can lead to tire failure and loss of motorcycle control. Worn tires are susceptible to puncture failures and subsequent loss of motorcycle control. Tire wear also affects the tire profile, changing motorcycle handling characteristics.

Check the condition of your tires each day before you ride. Replace tires if tires show visual evidence of damage, such as cracks or cuts, or if tread depth is less than 1.6 mm (0.06 in) front, 2.0 mm (0.08 in) rear. The “ Δ ” mark indicates the place where the wear bars are molded into the tire. When the wear bars contact the road, it indicates that the tire wear limit has been reached.

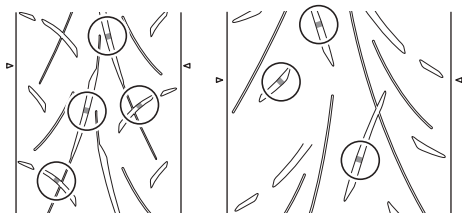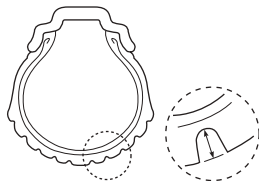

FRONT

REAR

WARNING

Failure to follow the instructions below for tubeless tires may result in a crash due to tire failure. Tubeless tires require different service procedures than tube tires.

- Tubeless tires require an air-tight seal between the tire bead and wheel rim. Special tire irons and rim protectors or a specialized tire mounting machine must be used for removing and installing tires to prevent tire or rim damage which could result in an air leak.
- Repair punctures in tubeless tires by removing the tire and applying an internal patch.


- Do not use an external repair plug to repair a puncture since the plug may work loose as a result of the cornering forces experienced by a motorcycle tire.
- After repairing a tire, do not exceed 80 km/h (50 mph) for the first 24 hours, and do not exceed 130 km/h (80 mph) thereafter. This is to avoid excessive heat build-up which could result in a tire repair failure and tire deflation.
- Replace the tire if it is punctured in the sidewall area, or if a puncture in the tread area is larger than 6 mm (3/16 in). These punctures cannot be repaired adequately.

SIDE STAND / IGNITION INTERLOCK SYSTEM

INSPECTION

Check the side stand / ignition interlock system for proper operation as follows:

1. Sit on the motorcycle in the normal riding position, with the side stand up.
2. Shift into first gear, hold the clutch in, and start the engine.
3. While continuing to hold the clutch in, move the side stand to the down position.

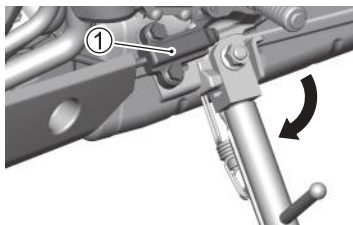

① Side stand / ignition interlock switch

If the engine stops running when the side stand is moved to the down position, then the side stand / ignition interlock system is working properly. If the engine continues to run with the side stand down and the transmission in gear, then the side stand / ignition interlock system is not working properly. Have your motorcycle inspected by an authorized Suzuki dealer or a qualified service mechanic.

WARNING


If the side stand / ignition interlock system is not working properly, it is possible to ride the motorcycle with the side stand in the down position. This may interfere with rider control during a left turn and could cause a crash.

Check the side stand / ignition interlock system for proper operation before riding. Check that the side stand is returned to its full up position before starting off.


FRONT WHEEL

REMOVING

1. Place the motorcycle on the side stand.
2. Remove the front wheel speed sensor by removing the mounting bolt ①.

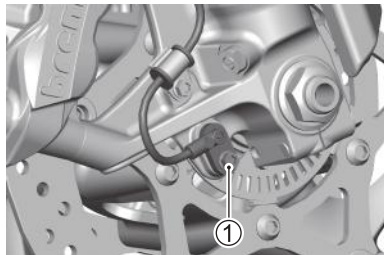


(GSX-S1000)

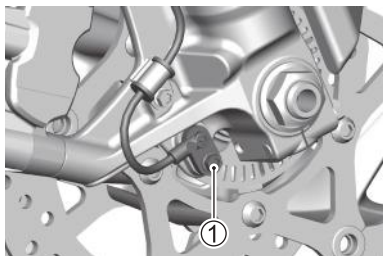


(GSX-S950)

3. Remove both brake calipers from the front forks by removing the mounting bolts ② on each of the calipers.

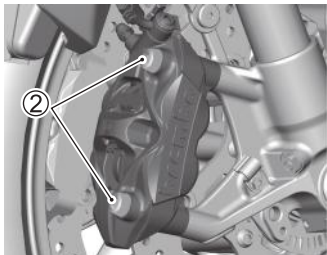


(GSX-S1000)

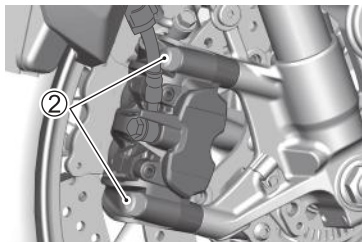


(GSX-S950)

NOTE: *Never squeeze the brake lever with the caliper removed. It is very difficult to force the pads back into the caliper assembly and brake fluid leakage may result.*

4. Remove the axle nut ③.
5. Loosen the axle holder bolts ④.

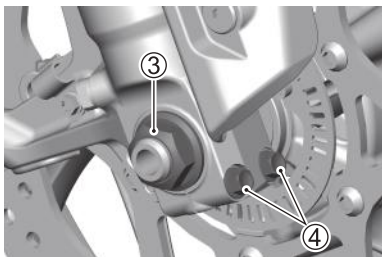

6. Loosen the axle holder bolts ⑤.

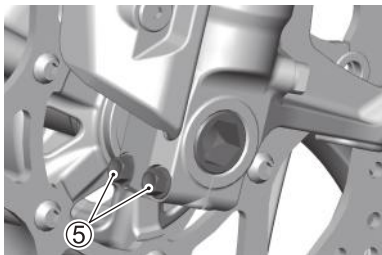


7. Place an accessory service stand or equivalent under the swingarm to help stabilize the rear end.
8. Carefully position a jack under the exhaust pipe and raise it until the front wheel is slightly off the ground.

NOTICE


Improper jacking may cause damage to the fairing or oil filter.

Do not place the jack under the lower part of the fairing or the oil filter when jacking up the motorcycle.


9. Draw out the axle shaft ⑥.

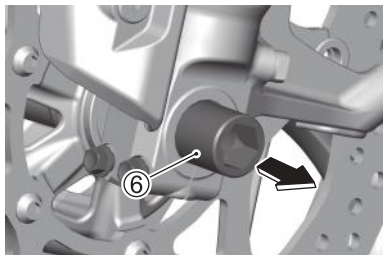

10. Slide the front wheel forward ⑦.

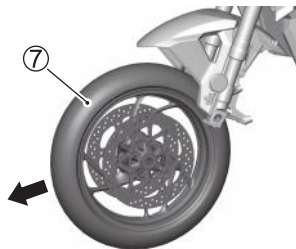


11. Put the new wheel in place and insert the axle shaft.
12. Remove the jack and service stand.
13. Hold the shaft and tighten the axle nut ③ to the specified torque.
14. Tighten the axle holder bolts ④ to the specified torque.

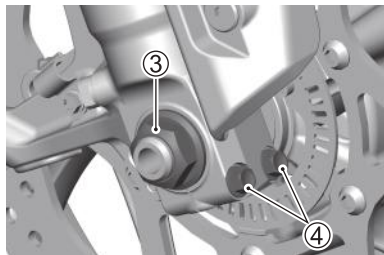

15. Move the steering up and down several times to seat the axle shaft.

16. Tighten the axle holder bolts ⑤ to the specified torque.

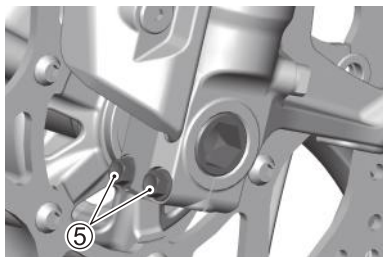

17. Reinstall the brake calipers and speed sensor.
18. After installing the wheel, apply the brake several times to restore the proper lever stroke.

Front axle nut tightening torque:
100 N·m (10.0 kgf-m, 72.5 lbf-ft)

Front axle holder bolt
tightening torque:
23 N·m (2.3 kgf-m, 16.5 lbf-ft)

Front brake caliper mounting bolt
tightening torque:
39 N·m (3.9 kgf-m, 28.0 lbf-ft)

Front wheel speed sensor mounting bolt
tightening torque:
10 N·m (1.0 kgf-m, 7.0 lbf-ft)

WARNING

Failure to extend brake pads after installing the wheel can cause poor braking performance and may result in a crash.

Before riding, “pump” the brake lever repeatedly until brake pads are pressed against the brake disks and proper lever stroke and firm feel are restored. Also check that the wheel rotates freely.

WARNING

If the bolts and nuts are not properly tightened, the wheel can come off, causing a crash.

Be sure to tighten the bolts and nuts to the specified torque. If you do not have a torque wrench or do not know how to use one, ask your authorized Suzuki dealer to check the bolts and nuts.

WARNING

Installing the front wheel in the reverse direction can be hazardous. The tire for this motorcycle is directional. Therefore, the motorcycle may have unusual handling if the wheel is installed incorrectly.

Install the front wheel so that the tire rotates in the specified direction, as indicated by the arrow on the sidewall of the tire.

REAR WHEEL

REMOVING

CAUTION

A hot muffler can burn you.

Wait until the muffler cools before removing the axle nut.


NOTICE

Removing the rear wheel without use of an accessory stand can result in your motorcycle falling over and being damaged.


Do not attempt roadside removal of the rear wheel. Only remove the rear wheel at a properly equipped servicing facility using an accessory service stand.

1. Place the motorcycle on the side stand.
2. Remove the rear wheel speed sensor by removing the mounting bolt ①.


NOTE: If the swingarm interferes and the mounting bolt ① cannot be removed, adjust the position of the rear wheel. Refer to the **DRIVE CHAIN ADJUSTMENT** section (➡ 3-52).

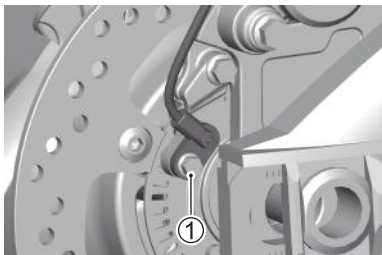

3. Remove the axle nut ②.
4. Place an accessory service stand or an equivalent stand under the swingarm to lift the rear wheel slightly off the ground.
5. Loosen the right and left lock nuts ③. Turn the right and left chain adjuster bolts ④ clockwise.

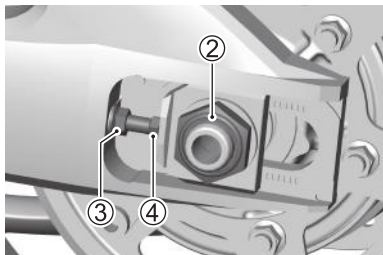


6. Draw out the axle shaft ⑤.

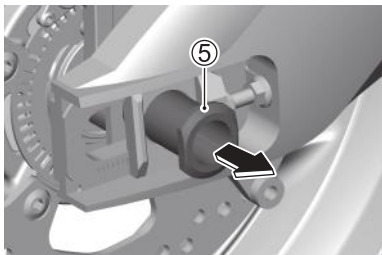


7. With the wheel moved forward, remove the chain ⑥ from the sprocket ⑦.



8. Remove the rear brake caliper assembly ⑧.

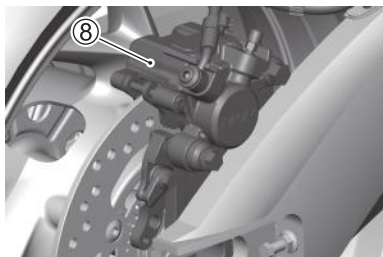


(GSX-S1000)

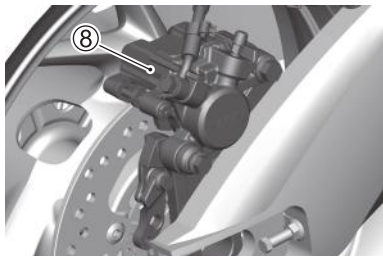

(GSX-S950)

9. Pull the rear wheel assembly ⑨ rearward.

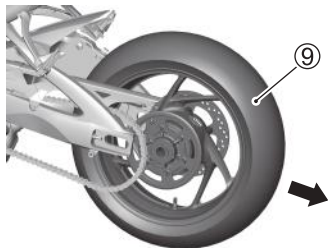

NOTE: Never depress the rear brake pedal with the rear wheel removed. It is very difficult to force the pads back into the caliper assembly.

10. To replace the wheel, reverse the complete sequence listed.
11. Adjust the drive chain slack.
12. After installing the wheel, apply the brake several times and then check that the wheel rotates freely.

Rear axle nut tightening torque:
100 N·m (10.0 kgf-m, 72.5 lbf-ft)

Chain adjuster lock nut tightening torque:
22 N·m (2.2 kgf-m, 16.0 lbf-ft)

Rear wheel speed sensor mounting bolt tightening torque:
10 N·m (1.0 kgf-m, 7.0 lbf-ft)

WARNING

Failure to adjust the drive chain and failure to torque bolts and nuts properly could lead to a crash.

- After installing the rear wheel, adjust the drive chain as described in the **DRIVE CHAIN ADJUSTMENT** section ( 3-52).
- Torque bolts and nuts to the proper specifications. If you are not sure of the proper procedure, have your authorized Suzuki dealer or a qualified mechanic do this.

WARNING

Failure to extend brake pads after installing the wheel can cause poor braking performance and may result in a crash.

Before riding, “pump” the brake pedal repeatedly until brake pads are pressed against the brake disks and proper pedal stroke and firm feel are restored. Also check that the wheel rotates freely.

LIGHTING SYSTEM

This motorcycle is equipped with LED lighting. Because LED lights have been integrated into light assemblies, replacement of only the LED lights is not available. If any of the LED lights cannot be turned on, consult with your Suzuki dealer.

LIGHT BULB REPLACEMENT

The wattage rating of each bulb is shown in the following chart. When replacing a burned-out bulb, always use the same wattage rating according to the following chart.

License plate light	12V 5W
Front turn signal light (GSX-S950)	12V 21W × 2
Rear turn signal light (GSX-S950)	12V 21W × 2

NOTICE


Failure to use a light bulb with the correct wattage rating can overload the electrical system of your motorcycle or cause the bulb to burn out sooner.

Use only the light bulbs shown in the chart as replacement bulbs.


License plate light

To replace the license plate light bulb, follow these steps:

1. Remove the screws ① and take off the cover with the lens.

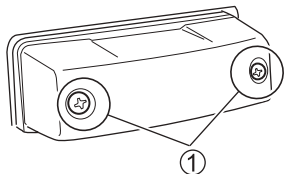

2. Pull off the bulb from the socket.
3. To replace the license plate light, reverse the above steps.

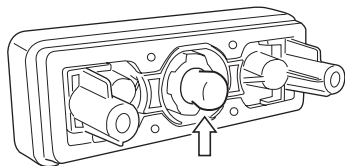


Front and rear turn signal light (GSX-S950)


To replace the front and rear turn signal light bulb, follow these directions.

1. Remove the screw and take off the lens

①.

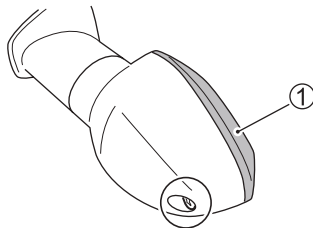

2. Push in on the bulb ②, twisting it to the left, and pull it out.

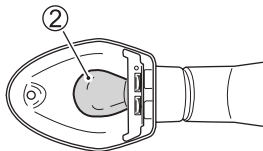

3. To fit the replacement bulb, push it in and twist it to the right while pushing.
4. Reinstall the lens.

NOTICE

Overtightening the screws when reinstalling the lens may cause the lens to crack.

Tighten the screws only until they are snug.

HEADLIGHT BEAM

DESCRIPTION



The headlight beam can be adjusted both up and down or right and left if necessary.

To adjust the beam up and down:



Turn the adjuster ① clockwise or counter-clockwise.

To adjust the beam right and left:

Turn the adjuster ② clockwise or counter-clockwise.

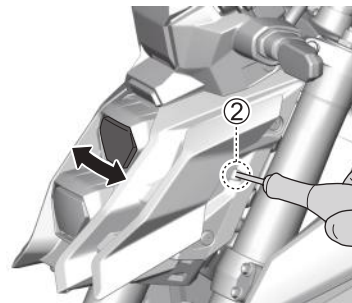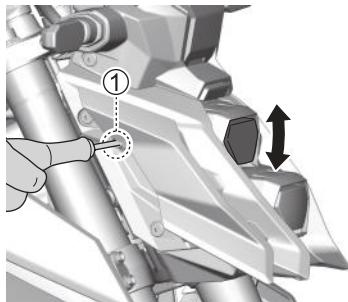

Low-beam

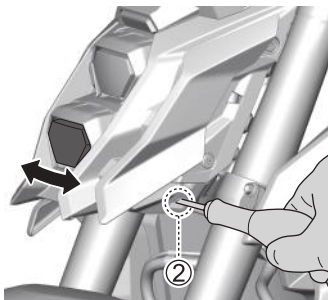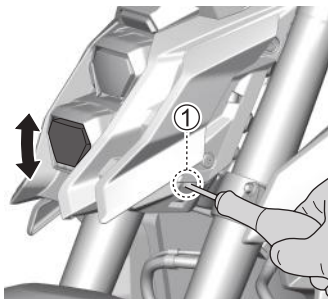

High-beam

FUSES

DESCRIPTION

If something electrical on your motorcycle stops working, the first thing you should check for is a blown fuse. The electrical circuits on the motorcycle are protected from overload by fuses in the circuits.

! WARNING

Replacing a fuse with a fuse that has an incorrect amperage rating or substitute, e.g. aluminum foil or wire, may cause serious damage to the electrical system and possibly fire. Always replace a blown fuse with a fuse of the same amperage rating.

If the new fuse blows in a short time, the electrical problem may not be fixed. Have your motorcycle inspected immediately by your Suzuki dealer.

NOTICE

Installing electrical items such as lights, gauges, etc., that are not suitable for the motorcycle may cause fuses to blow or may run down the battery.

Use genuine Suzuki parts when attaching electrical items.

NOTICE

Spraying water or wiping forcefully around fuses when washing the motorcycle may cause water to enter the wiring, causing corrosion or short circuiting.




Do not spray water or wipe forcefully in the area around fuses.

MAIN FUSE

The main fuse is located under the front seat.

Inspect the main fuses using the following procedure.

1. Set the ignition switch to OFF.
2. Remove the front and rear seat by referring to the SEAT section. (➡ 2-114)
3. Remove the starter relay box cover, pull out the fuse ①, and inspect it.
4. If a fuse is blown, check the reason, and when you have remedied it, replace with a spare fuse ② of the specified amperage. If you are unable to ascertain the reason, have your motorcycle inspected by a Suzuki dealer.

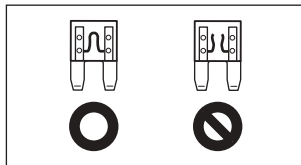
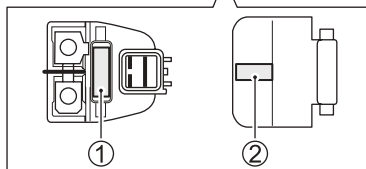
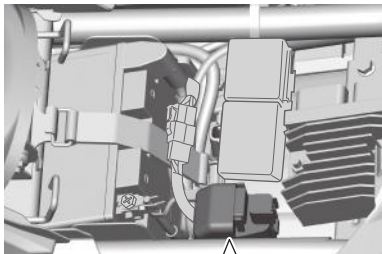


FUSES

The fuses are located under the front seat.


Inspect fuses using the following procedure.

1. Set the ignition switch to OFF.
2. Remove the front and rear seat by referring to the SEAT section. (👉 2-114)
3. Open the fuse box cover, pull out the fuses, and inspect them.
4. If a fuse is blown, check the reason, and when you have remedied it, replace with a spare fuse ③ of the specified amperage. If you are unable to ascertain the reason that the fuse has blown, have your motorcycle inspected by a Suzuki dealer.

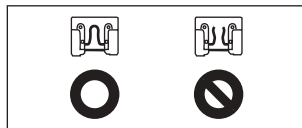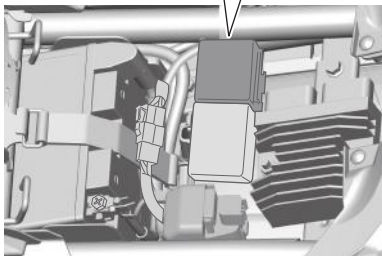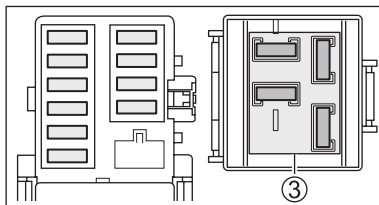

LIST

The following chart shows the main equipment that each fuse protects.

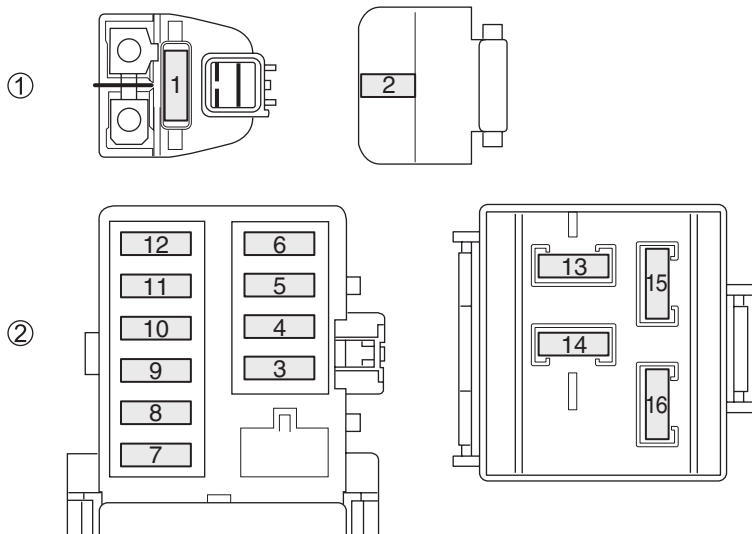


- ① Starter relay box
- ② Fuse box

Position	Label	Capacity	Protection parts
1	MAIN	30A	All electric circuits
2	SPARE	30A	—
3	HEAD-LO	10A	Head light (low-beam)
4	HEAD-HI	10A	• Head light (high-beam) • High-beam relay • Speedometer
5	FAN	15A	Cooling fan motor
6	FUEL	10A	• Speedometer • Fuel injector • Fuel pump • ECM
7	OPTION	3A	Option
8	IGNITION	10A	• Ignition coil • Starter relay • Cooling fan relay • Fuel pump relay • Solenoid • ECM • Side stand relay • Oxygen sensor • Immobilizer (if equipped) • ABS • Canister purge solenoid (if equipped)

Position	Label	Capacity	Protection parts
9	SIGNAL	10A	• Position light • Brake light / Taillight • License plate light • Turn signal light • Speedometer • Horn
10	PARK	10A	• Position light • Taillight • License plate light • Turn signal light
11	ABS-MOTOR	20A	ABS
12	ABS-VALVE	15A	ABS
13	SPARE	15A	—
14	SPARE	20A	—
15	SPARE	3A	—
16	SPARE	10A	—

DIAGNOSTIC CONNECTOR

The diagnostic connector ① is located under the seat.

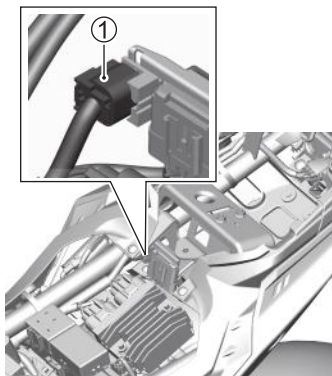

NOTE: The diagnostic connector is used by a Suzuki dealer or a qualified service mechanic.



TROUBLESHOOTING

DESCRIPTION	4-2
ENGINE DOES NOT START	4-2
IN CASE OF OVERHEATING	
(ENGINE COOLANT TEMPERATURE WARNING INDICATOR LIGHT COMES ON)	4-3
WHEN THE OIL PRESSURE INDICATOR IS DISPLAYED WHILE RIDING	
(OIL PRESSURE WARNING INDICATOR LIGHT COMES ON)	4-5
INDICATOR DISPLAYS	4-7
MOTORCYCLE CONDITION	4-8

TROUBLESHOOTING

DESCRIPTION

This troubleshooting guide is provided to help you find the cause of some common complaints.

Consult your Suzuki dealer if your motorcycle is experiencing any issues or you notice something seems wrong.

NOTICE

Making unsuitable repairs or adjustments may damage your motorcycle. In some cases damage may not be covered by the warranty.

Consult a Suzuki dealer if anything is unclear.

ENGINE DOES NOT START

Perform the following checks.


- Make sure you are using the correct starting procedure.
See “STARTING PROCEDURE” on page 2-94.
- Make sure the fuel tank has fuel.
See “REFUELING PROCEDURE” on page 2-100.
- Check if the malfunction indicator light comes on.
See “MALFUNCTION INDICATOR LIGHT” on page 2-28.
- Check if the immobilizer indicator light comes on.
See “IMMOBILIZER (if equipped)” on page 2-87.
- Check for loose battery terminals.
See “BATTERY” on page 3-20.
- Are any fuses blown?
See “FUSES” on page 3-91.

Consult your Suzuki dealer if you notice any failures/issues.

IN CASE OF OVERHEATING (ENGINE COOLANT TEMPERATURE WARNING INDICATOR LIGHT COMES ON)

NOTE: Overheating is a state in which all of the following conditions are satisfied.

- Engine coolant temperature warning indicator light ①: Lit
- Engine coolant temperature warning indicator symbol ②: Blinking
- Engine coolant temperature indicator ③: Display shows "HI"

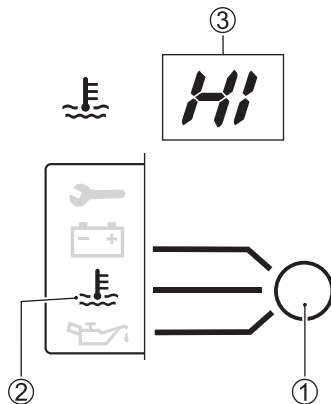

If the engine coolant temperature warning indicator light comes on, stop the motorcycle in a safe place, perform the following checks, and take any necessary action.

1. Turn the ignition switch to the "OFF" position to stop the engine.
2. Turn the ignition switch to the "ON" position to start the radiator fan and cool the engine.

If the radiator fan does not operate, do not start the engine. Consult your Suzuki dealer.

3. Once the engine has sufficiently cooled, check the coolant level and check hoses and such for leaks.
 - a. If you find any leaks, do not start the engine. Consult your Suzuki dealer.
 - b. Replenish the coolant if the coolant level is low and there are no leaks. If you have to use water instead of coolant, consult your Suzuki dealer as soon as possible to have the coolant checked and replaced.
4. If no issues are found, the motorcycle can be ridden once the engine coolant temperature warning indicator light goes off. Consult your Suzuki dealer for inspection as soon as possible.

NOTICE

Riding while the motorcycle is overheating can cause serious damage to the engine.

Do not ride the motorcycle if the engine coolant temperature warning indicator light comes on.

WHEN THE OIL PRESSURE INDICATOR IS DISPLAYED WHILE RIDING (OIL PRESSURE WARNING INDICATOR LIGHT COMES ON)

If the oil pressure warning indicator light comes on, stop the motorcycle in a safe place, perform the following checks, and take any necessary action.

1. Turn the ignition switch to the “OFF” position to stop the engine.
2. Check the engine oil level. See “CHECKING THE ENGINE OIL LEVEL” on page 3-34.
Replenish engine oil if the level is insufficient.

3. Start the engine.
 - a. You can ride the motorcycle once the oil pressure warning indicator light goes off.
 - b. If the oil pressure warning indicator light does not go off, stop the engine and consult your Suzuki dealer.
4. The engine may be damaged if the oil level has decreased. Consult your Suzuki dealer for inspection.

NOTICE

Riding with low engine oil pressure may cause serious damage to the engine.

Do not ride the motorcycle if the oil pressure warning indicator light comes on.

INDICATOR DISPLAYS

Consult a Suzuki dealer if the state of the indicator displays is as follows.

- The malfunction indicator light (on page 2-28) comes on or blinks
- The “FI” warning displays appear (on page 2-40)
- The check displays (on page 2-40) do not go out
- The ABS indicator light (on page 2-32) does not reset or come on again after resetting to its default state
- The neutral indicator light does not come on when the gear position indicator is in the “N” position (on page 2-27)
- The neutral indicator light comes on while the gear position indicator is displaying 1, 2, 3, 4, 5, or 6
- The TC indicator (on page 2-26) comes on
- The service reminder indicator (on page 2-38) comes on
- The engine coolant temperature warning indicator light is flashing or lit and does not turn off when the engine is cold (on page 2-35)
- The oil pressure warning indicator light comes on when the amount of engine oil is appropriate

MOTORCYCLE CONDITION

Consult a Suzuki dealer if the state of the motorcycle is as follows.

- The engine does not start
- You fall
- The motorcycle makes an unusual noise, or leaks fluid
- Engine performance drops off or is poor
- There is a marked decrease in brake fluid, or you need to replace the brake fluid or pads
- Brake performance is poor
- There is a marked decrease in coolant, or you need to replace the coolant
- You cannot ascertain why a fuse has blown
- The tires are extremely worn or you need to replace them



STORAGE PROCEDURE AND MOTORCYCLE CLEANING

STORAGE PROCEDURE	5-2
PROCEDURE FOR RETURNING TO SERVICE	5-5
CORROSION PREVENTION	5-5
MOTORCYCLE CLEANING	5-7
INSPECTION AFTER CLEANING	5-13

STORAGE PROCEDURE AND MOTORCYCLE CLEANING

STORAGE PROCEDURE


DESCRIPTION

When you do not intend to ride the motorcycle for a long time, it is important to perform maintenance before storage. Perform the maintenance shown below.

NOTE: Suzuki recommends that you trust this maintenance work to your Suzuki dealer.

MOTORCYCLE

Place the motorcycle on the side stand on a firm, flat surface where it will not fall over. For motorcycles equipped with a center stand, use the center stand for parking. Wash the motorcycle before storing, dry it, and then cover it with a body cover.

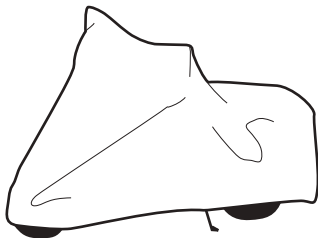

NOTE: Apply the body cover after the engine and muffler have cooled.

FUEL

1. Fill the fuel tank to the top with fuel mixed with the amount of gasoline stabilizer recommended by the stabilizer manufacturer.
2. Run the engine for a few minutes until the stabilized gasoline fills the fuel injection system.

ENGINE

1. Drain the engine oil completely and refill the crankcase with fresh engine oil all the way up to the filler hole.
2. Cover the air cleaner intake and the muffler outlet with oily rags to prevent humidity from entering.

NOTE: For the inside engine protection method, consult with your Suzuki dealer.

BATTERY

1. Remove the battery from the motorcycle by referring to the BATTERY section.
2. Clean the outside of the battery with a mild soap and remove corrosion from the terminals and wiring harness.
3. Store the battery in a room above freezing.

NOTE: Batteries lose electricity and self-discharge slowly, so remove the battery from the motorcycle, charge fully, and then store in a dark place in a room with good ventilation. When storing with the battery mounted on the motorcycle, disconnect the (-) terminal.

TIRES

Adjust tire pressure to the recommended pressure, and raise so that the front and rear wheels are off the ground.

NOTE: Consult a Suzuki dealer for information on how to raise the front and rear wheels off the ground.

EXTERNAL

- Spray all vinyl and rubber parts with rubber protectant.
- Spray unpainted surfaces with rust preventative.
- Coat painted surfaces with car wax.

MAINTENANCE DURING STORAGE

Once a month, recharge the battery. Refer to the BATTERY section for instructions. If you cannot charge the battery, consult your authorized Suzuki dealer.

PROCEDURE FOR RETURNING TO SERVICE

HOW TO RETURN TO SERVICE

1. Clean the entire motorcycle.
2. Remove the oily rags from the air cleaner intake and muffler outlet.
3. Drain all the engine oil. Install a new oil filter and fill the engine with fresh oil as outlined in this manual.
4. Reinstall the battery by referring to the BATTERY section.
5. Make sure that the motorcycle is properly lubricated.
6. Perform the INSPECTION BEFORE RIDING as listed in this manual.
7. Start the motorcycle as outlined in this manual.

CORROSION PREVENTION

IMPORTANT INFORMATION ABOUT CORROSION

Perform maintenance to prevent the motorcycle from rusting and extend its life.

The following can cause corrosion.

- Sea air, unpaved roads, road salt, moisture and accumulation of chemical substances.
- Damage to metal parts or painted surfaces caused by minor crashes, or by being struck by sand or stones, or other debris.

HOW TO HELP PREVENT CORROSION

- Wash your motorcycle frequently, at least once a month. Keep your motorcycle as clean and dry as possible.
 - Remove foreign material deposits. Foreign material such as road salt, chemicals, road oil or tar, tree sap, bird droppings and industrial fall-out may damage your motorcycle's finish. Remove these types of deposits as quickly as possible. If these deposits are difficult to wash off, an additional cleaner may be required. Follow the manufacturer's directions when using these special cleaners.
 - Repair finish damage as soon as possible. Carefully examine your motorcycle for damage to the painted surfaces. Should you find any chips or scratches in the paint, touch them up immediately to prevent corrosion from starting. If the chips or scratches have gone through to the bare metal, have a Suzuki dealer make the repair.
- Store your motorcycle in a dry, well-ventilated area. If you often wash your motorcycle in the garage or if you frequently park it inside when wet, your garage may be damp. The high humidity may cause or accelerate corrosion. A wet motorcycle may corrode even in a heated garage if the ventilation is poor.
 - Cover your motorcycle. Exposure to mid-day sun can cause the colors in paint, plastic parts, and instrument faces to fade. Covering your motorcycle with a high-quality, "breathable" motorcycle cover can help protect the finish from the harmful UV rays in sunlight, and can reduce the amount of dust and air pollution reaching the surface. Your Suzuki dealer can help you select the right cover for your motorcycle.

NOTE:

- *Wax all areas of the motorcycle before storage. This prevents rusting.*
- *Clean the motorcycle with cool water immediately after riding on road salt or riding along the coast. Be sure to use cool water because warm water can accelerate corrosion.*

MOTORCYCLE CLEANING

WASHING THE MOTORCYCLE

Washing the motorcycle helps to extend its life and keeps it in pristine condition. Waxing will also provide you with the opportunity to find any abnormalities and to prevent malfunctions. Wash the motorcycle when it is cold.

1. Remove dirt and mud from the motorcycle with cool running water. You may use a soft sponge or brush. Do not use hard materials which can scratch the paint.
2. Wash the entire motorcycle with a mild detergent or car wash soap using a sponge or soft cloth. The sponge or cloth should be frequently soaked in the soap solution.
3. Once the dirt has been completely removed, rinse off the detergent with running water.
4. After rinsing, wipe off the motorcycle with a wet chamois or cloth and allow it to dry in the shade.

5. Check carefully for damage to painted surfaces. If there is any damage, obtain “touch-up” paint and “touch-up” the damage following the procedure below:
- Clean all damaged spots and allow them to dry.
 - Stir the paint and “touch-up” the damaged spots lightly with a small brush.
 - Allow the paint to dry completely.

NOTE: The headlight lens can be fogged after washing the motorcycle or riding in the rain. Headlight fogging will be cleared gradually when the headlight is turned on. When clearing the headlight lens fogging, run the engine to avoid battery discharge.

NOTE: Avoid spraying or allowing water to flow over the following places:

- Ignition switch
- Spark plugs
- Fuel tank cap
- Fuel injection system
- Brake master cylinders

NOTICE

If water gets into the mufflers, air cleaner, or electrical parts during cleaning, it may cause failure to start or rust.

Be careful not to get water into the above parts during cleaning.

NOTICE

Applying high pressure water to the radiator can damage the cooling fins.

Be careful when washing around the radiator.

NOTICE

High pressure washers such as those found at coin-operated car washes have enough pressure to damage the parts of your motorcycle. It may cause rust, corrosion, and increased wear. Parts cleaner can also damage motorcycle parts.

Do not use high pressure washers to clean your motorcycle. Do not use parts cleaner on the throttle body and fuel injection sensors.

NOTICE

Cleaning your motorcycle with any alkaline or strong acid cleaner, gasoline, brake fluid, or any other solvent will damage the motorcycle parts.

Clean only with a soft cloth and warm water with mild detergent.

WHEELS

Aluminum wheels do not hold up well to dirt from salt. To preserve aluminum wheels in pristine condition, clean them regularly (approximately once per week).

1. Soak a sponge in neutral detergent and wash off any dirt.
2. Wash with sufficient water, then wipe off the water with a dry cloth.

NOTE: Aluminum wheels scratch easily, so do not rub or brush with polishing powder, hard brushes, or metal brushes.

PLASTIC PARTS

Plastic parts such as the headlight lens, speedometer display, and fairings, are easy to damage. When such parts are cleaned, wash them using water, after cleaning them using neutral detergent or soapy water, and wipe them with a soft cloth.

WARNING

Placing objects in the space behind the fairings can interfere with steering and can cause loss of control.

Do not carry any objects in the space behind the fairings.

NOTICE

Foreign substances can scratch or damage plastic parts such as the headlight lens, and speedometer display.

Do not allow the following substances to get on the plastic parts mentioned above;

- Wax compound
- Chemical supplies such as oil film removing agents or repellents
- Acidic or alkaline detergent
- Brake fluid, gasoline, or organic solvent, etc.

EXHAUST PIPES

Stainless steel exhaust pipes may be subject to burn marks caused by oil and other dirt.

- Using kitchen cleaner for stainless steel, wipe dirt off with a cloth or sponge, rinse with sufficient water, and then wipe dry with a dry cloth.
- When burn marks occur, scrub with a fine compound and then wipe off the dirt.

NOTE: Although exhaust heat may cause the exhaust pipe to change color, this will not cause functional problems.

NOTICE

The muffler and the engine become hot when the engine is running and stay hot after it has stopped. Touching them at this time may cause burns.

Do not touch the muffler or engine until they have cooled.

WAXING THE MOTORCYCLE

After washing the motorcycle, waxing and polishing are recommended to further protect and beautify the paint.

- Only use good quality waxes and polishes.
- When using waxes and polishes, observe the precautions specified by the manufacturers.

SPECIAL CARE FOR MATTE FINISH PAINT

Do not use polishing compounds or waxes that contain polishing compounds on surfaces which have a matte finish. Doing so will change the appearance of the matte finish.

Solid-type waxes may be difficult to remove from surfaces with a matte finish.

Friction while riding and excessive rubbing or polishing of a surface with a matte finish, will change its appearance.

INSPECTION AFTER CLEANING

DESCRIPTION

After drying the motorcycle, apply grease. To help extend your motorcycle's life, lubricate it according to the "LUBRICATION POINTS" section.

Follow the procedures in the "INSPECTION BEFORE RIDING" section to check your motorcycle for any issues that may have arisen during your last ride.

WARNING

Operating the motorcycle with wet brakes can be hazardous. Wet brakes may not provide as much stopping power as dry brakes. This could lead to a crash.

Test your brakes after washing the motorcycle, while riding at slow speed, and in a safe location. If necessary, apply the brakes several times to let friction dry out the linings.



CONSUMER INFORMATION

CATALYTIC CONVERTER	6-2
ON-BOARD MOTORCYCLE COMPUTER DATA INFORMATION	6-4
SERIAL NUMBER LOCATION	6-6

CONSUMER INFORMATION

CATALYTIC CONVERTER

DESCRIPTION

The muffler on this motorcycle contains a catalytic converter. This catalytic converter works to reduce the volume of toxic substances output in exhaust gases.

Inappropriate adjustment or erroneous handling may cause incomplete combustion (misfiring), resulting in the temperature of the catalytic converter rising to extreme levels. Take care, as this may damage the catalytic converter or other related parts.

Although the catalytic converter does not require any special inspections or maintenance, please perform specified engine inspections and maintenance.

NOTICE

Improper motorcycle operation can cause catalyst or other motorcycle damage.

To avoid damage to the catalyst or other related components, you should take the following precautions:

- While the motorcycle is in motion, do not operate the ignition switch or engine stop switch, or turn off the engine, except in an emergency.
- Do not try to start the engine by pushing the motorcycle or by coasting down a hill.
- Do not start the engine with the spark plug wire removed during diagnostic testing.

- Do not idle the engine unnecessarily or for long periods.
- Do not use all of the gasoline in the fuel tank.
- If engine performance deteriorates or is poor, have your motorcycle inspected at a Suzuki dealer.

ON-BOARD MOTORCYCLE COMPUTER DATA INFORMATION

DESCRIPTION

Your motorcycle is equipped with on-board computer systems, which monitor and control several aspects of motorcycle performance, including the following:

DATA TYPES

- Engine condition, such as engine speed.
- Transmission condition, such as gear position.
- Operating status, such as accelerator, brakes (including ABS), gear position.
- Information related to computer system failures of all kinds.

NOTE:

- *Data recorded differs depending on vehicle type.*
- *Voice data is not recorded.*
- *Depending on the conditions of use, data may not be recorded in some cases.*

DISCLOSURE OF DATA

Suzuki Motor Corporation and third parties contracted by Suzuki Motor Corporation may acquire and use data recorded by on-board computers to diagnose vehicle faults, conduct research, and development, and improve quality.

Suzuki Motor Corporation and third parties contracted by Suzuki Motor Corporation will not disclose or provide the information acquired to a third party other than in the following cases.

- When the user of the vehicle has consented.
- When required or allowed to do so based on laws and ordinances, a court injunction, or other legal force.
- When providing data that has been processed so that users and vehicles cannot be identified, for use by research institutes, etc., in statistical processing, etc.


SERIAL NUMBER LOCATION

DESCRIPTION

Record the frame and engine serial numbers in the next page for use in procedures such as creating vehicle registration documents. You also need these numbers to help your dealer when you order parts.

FRAME NUMBER

The frame number ① is stamped on the steering head as shown in the illustration.

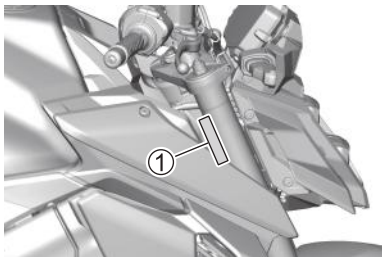

Write down the frame number here for your future reference.

Frame number:

ENGINE SERIAL NUMBER

The engine serial number ② is stamped on the crankcase assembly.



Write down the engine serial number here for your future reference.

Engine serial number:

KEY NUMBER

This motorcycle comes with two keys and an alphanumeric key number printed on a plate.

NOTE:

- *In addition to standard key functions, the keys of this motorcycle also have immobilizer functions.*
- *Damaging or losing these keys will cause you to incur significant expense, so please handle them with care.*
- *Please store the spare key carefully.*

SPECIFICATIONS

DIMENSIONS AND CURB MASS

Overall length	2115 mm (83.3 in)
Overall width	810 mm (31.9 in)
Overall height	1080 mm (42.5 in)
Wheelbase	1460 mm (57.5 in)
Ground clearance	140 mm (5.5 in)
Curb mass	214 kg (472 lbs)

ENGINE

Type	Four-stroke, liquid-cooled, DOHC
Number of cylinders	4
Bore	73.4 mm (2.890 in)
Stroke	59.0 mm (2.323 in)
Displacement	999 cm ³ (61.0 cu. in)
Compression ratio	12.2 : 1
Fuel system	Fuel injection
Air cleaner	Paper element
Starter system	Electric
Lubrication system	Wet sump

DRIVE TRAIN

Clutch	Wet multi-plate type
Transmission	6-speed constant mesh
Gearshift pattern	1-down, 5-up
Primary reduction ratio	1.553 (73/47)
Gear ratios, Low	2.562 (41/16)
2nd	2.052 (39/19)
3rd	1.714 (36/21)
4th	1.500 (36/24)
5th	1.360 (34/25)
Top	1.269 (33/26)
Final reduction ratio	2.588 (44/17)
Drive chain	RK 525GSH, 116 links

CHASSIS

Front suspension	Inverted telescopic, coil spring, oil damped
Rear suspension	Link type, coil spring, oil damped
Front fork stroke	120 mm (4.7 in)
Rear wheel travel	130 mm (5.1 in)
Caster	25°
Trail	100 mm (3.9 in)
Steering angle	31° (right and left)
Turning radius	3.1 m (10.2 ft)
Front brake	Disk brake, twin
Rear brake	Disk brake
Front tire size	120/70ZR17M/C (58W), tubeless
Rear tire size	190/50ZR17M/C (73W), tubeless

ELECTRICAL

Ignition type	Electronic ignition (Transistorized)
Spark plug	NGK CR9EIA-9 or DENSO IU27D
Battery	12V 36.0 kC(10 Ah)/10 HR
Generator	Three-phase A.C. generator
Main fuse	30A
Fuse	10/10/15/10/3/10/10/10A
ABS fuse	20/15A
Headlight	LED
Position light	LED
Brake light / Taillight	LED
Turn signal light	LED
	12V 21W × 4 ... GSX-S950
License plate light	12V 5W
Instrument panel light	LED
Neutral indicator light	LED
Hi beam indicator light	LED
Turn signal indicator light	LED
Oil pressure / engine coolant temperature / battery charge malfunction warning indicator light	LED
Malfunction indicator light	LED
Traction control indicator light	LED
ABS indicator light	LED
Engine rpm indicator light (MAIN/SUB)	LED
Immobilizer indicator light (if equipped)	LED
Master warning indicator light	LED

CAPACITIES

Fuel tank.....	19.0 L (5.0/4.2 US/Imp. gal)
Engine oil, oil change	2800 ml (3.0/2.5 US/Imp. qt)
With filter change.....	3200 ml (3.4/2.8 US/Imp. qt)
Coolant	2750 ml (2.9/2.4 US/Imp. qt)

INDEX

A

ABOUT THE BRAKES.....	1-18
ABS.....	1-18
ABS INDICATOR LIGHT	2-32
AIR CLEANER.....	3-25
AIR CLEANER ELEMENT	3-26
AVERAGE FUEL CONSUMPTION METER	2-44

B

BATTERY	3-20
BATTERY CHARGE MALFUNCTION WARNING INDICATOR SYMBOL.....	2-32
BRAKE FLUID	3-57
BRAKE LEVER.....	2-111
BRAKE PADS.....	3-60
BRAKES	3-56

C

CATALYTIC CONVERTER	6-2
CLOCK	2-40
CLUTCH	3-54
CORROSION PREVENTION	5-5

D

DIAGNOSIS DISPLAY	2-40
DIAGNOSTIC CONNECTOR	3-98
DOCUMENT HOLDER.....	2-118
DRIVE CHAIN	3-49
DRIVING RANGE METER	2-42

E

ELECTRIC STARTER SWITCH	2-93
ENGINE COOLANT.....	3-42
ENGINE COOLANT TEMPERATURE INDICATOR	2-35
ENGINE COOLANT TEMPERATURE INDICATOR SYMBOL	2-32
ENGINE DOES NOT START	4-2
ENGINE IDLE SPEED	3-48
ENGINE OIL	3-30
ENGINE OIL DRAIN PLUG	3-37
ENGINE OIL FILTER.....	3-37
ENGINE STOP SWITCH	2-92

F

FRONT SEAT	2-114
FRONT SUSPENSION.....	2-120
FRONT WHEEL	3-76
FUEL	1-22
FUEL HOSE	3-48
FUEL LEVEL INDICATOR	2-37
FUEL TANK.....	3-14
FUEL TANK CAP	2-100
FUSES.....	3-91

G

GEAR POSITION INDICATOR	2-36
GEARSHIFT LEVER	3-65

H

HANDLEBAR SWITCHES.....	2-14
HAZARD WARNING SWITCH	2-93
HEADLIGHT BEAM.....	3-90
HELMET HOLDERS.....	2-116
HI BEAM INDICATOR LIGHT.....	2-29
HORN SWITCH.....	2-90

I

IGNITION SWITCH.....	2-82
IN CASE OF OVERHEATING	4-3
INDICATOR DISPLAYS	4-7
INSPECTION AFTER CLEANING.....	5-13
INSPECTION BEFORE RIDING	3-10
INSTANTANEOUS FUEL CONSUMPTION METER	2-41
INSTRUMENT PANEL	2-24
INSTRUMENT PANEL LIGHT BRIGHTNESS	2-45

L

LCD	2-18
LIGHTING SYSTEM.....	3-86
LOCATION OF PARTS	2-2
LUBRICATION	3-18
LUGGAGE STRAPS	2-117

M

MAINTENANCE CHART	3-6
MALFUNCTION INDICATOR LIGHT	2-28
MASTER WARNING INDICATOR LIGHT	2-29
MODE SWITCH.....	2-90
MOTORCYCLE CLEANING.....	5-7
MOTORCYCLE CONDITION	4-8
MULTIFUNCTION DISPLAY	2-20, 2-38

N

NEUTRAL INDICATOR LIGHT	2-27
-------------------------------	------

O

ODOMETER	2-42
OIL PRESSURE INDICATOR	
SYMBOL	2-31
OIL PRESSURE / ENGINE COOLANT	
TEMPERATURE / BATTERY CHARGE	
MALFUNCTION WARNING INDICATOR	
LIGHT	2-30
ON-BOARD MOTORCYCLE COMPUTER	
DATA INFORMATION	6-4

P

PROCEDURE FOR RETURNING TO	
SERVICE	5-5

R

RADIATOR HOSE	3-47
REAR BRAKE LIGHT SWITCH	3-64
REAR BRAKE PEDAL	2-113
REAR SEAT AND SEAT LOCK	2-115
REAR SUSPENSION	2-124
REAR WHEEL	3-82
RED ZONE	2-34
REFUELING	2-100
RIDING PRECAUTIONS	1-13

S

SAFETY GUIDELINES	1-2
SEAT	2-114
SELECT SWITCH.....	2-20,2-22
SERIAL NUMBER LOCATION	6-6
SERVICE REMINDER INDICATOR	2-38
SHIFTING GEARS	2-102
SIDE STAND	2-118
SIDE STAND / IGNITION INTERLOCK SYSTEM	3-75
SPARK PLUG.....	3-24
SPEEDOMETER	2-34
STORAGE PROCEDURE	5-2
SUSPENSION ADJUSTMENT	2-119
SUZUKI DRIVE MODE SELECTOR (SDMS) (GSX-S1000)	2-75
SUZUKI EASY START SYSTEM	2-97

T

TACHOMETER	2-34
TIRES	3-68
TOOLS	3-13
TRACTION CONTROL INDICATOR LIGHT	2-26
TRACTION CONTROL SYSTEM.....	2-78
TRIP METER.....	2-43
TURN SIGNAL INDICATOR LIGHT	2-25
TURN SIGNAL LIGHT SWITCH.....	2-91

V

VOLTMETER.....	2-45
----------------	------

W

WHEN THE OIL PRESSURE INDICATOR IS DISPLAYED WHILE RIDING	4-5
--	-----



6-2-1 Someijai, Hamakita-ku, Hamamatsu, Shizuoka 434-0046, Japan

DECLARATION of CONFORMITY

[EN] English	Hereby, ASAHI DENSO CO., LTD. declares that the radio equipment type [SZ137] is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: http://en.ad-asahidenso.co.jp/euro-compliance/
[BG] Bulgarian	С настоящото ASAHI DENSO CO., LTD. декларира, че този тип радиосъоръжение [SZ137] е в съответствие с Директива 2014/53/ЕС. Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес: http://en.ad-asahidenso.co.jp/euro-compliance/
[CS] Czech	Tímto ASAHI DENSO CO., LTD. prohlašuje, že typ rádiového zařízení [SZ137] je v souladu se směrnici 2014/53/EU. Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese: http://en.ad-asahidenso.co.jp/euro-compliance/
[DA] Danish	Hiermed erklærer ASAHI DENSO CO., LTD., at radioudstyrtypen [SZ137] er i overensstemmelse med direktiv 2014/53/EU. EU-overensstemmelseserklæringen fulde tekst kan findes på følgende internetadresse: http://en.ad-asahidenso.co.jp/euro-compliance/
[DE] German	Hiermit erklärt ASAHI DENSO CO., LTD., dass der Funkanlagentyp [SZ137] der Richtlinie 2014/53/EU entspricht. Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar: http://en.ad-asahidenso.co.jp/euro-compliance/
[ET] Estonian	Käesolevaga deklareerib ASAHI DENSO CO., LTD., et käesolev raadioseadme tüüp [SZ137] vastab direktiivi 2014/53/EÜ nõuetele. ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil: http://en.ad-asahidenso.co.jp/euro-compliance/
[EL] Greek	Με την παρούσα ο/η ASAHI DENSO CO., LTD., δηλώνει ότι ο ραδιοεξοπλισμός [SZ137] πληροί την οδηγία 2014/53/ΕΕ. Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο: http://en.ad-asahidenso.co.jp/euro-compliance/
[ES] Spanish	Por la presente, ASAHI DENSO CO., LTD. declara que el tipo de equipo radioeléctrico [SZ137] es conforme con la Directiva 2014/53/UE. El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente: http://en.ad-asahidenso.co.jp/euro-compliance/
[FR] French	Le soussigné, ASAHI DENSO CO., LTD., déclare que l'équipement radioélectrique du type [SZ137] est conforme à la directive 2014/53/UE. Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante: http://en.ad-asahidenso.co.jp/euro-compliance/
[IT] Italian	Il fabbricante, ASAHI DENSO CO., LTD., dichiara che il tipo di apparecchiatura radio [SZ137] è conforme alla direttiva 2014/53/UE. Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet: http://en.ad-asahidenso.co.jp/euro-compliance/
[LV] Latvian	Ar šo ASAHI DENSO CO., LTD. deklarē, ka radioiekārtā [SZ137] atbilst Direktīvai 2014/53/ES. Pilns ES atbilstības deklarācijas teksts ir pieejams šādā internetā vietnē: http://en.ad-asahidenso.co.jp/euro-compliance/



6-2-1 Somejidi, Hamakita-ku, Hamamatsu, Shizuoka 434-0046, Japan

[LT] Lithuanian	AŠ, ASAHI DENSO CO., LTD., patvirtinu, kad radijo įrenginių tipas [SZ137] atitinka Direktyvą 2014/53/ES. Visas ES atitikties deklaracijos tekstas priimamas šiuo interneto adresu: http://en.ad-asahidenso.co.jp/euro-compliance/
[HR] Croatian	ASAHI DENSO CO., LTD. ovime izjavljuju da je radijska oprema tipa [SZ137] u skladu s Direktivom 2014/53/EU. Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi: http://en.ad-asahidenso.co.jp/euro-compliance/
[HU] Hungarian	ASAHI DENSO CO., LTD. igazolja, hogy a [SZ137] típusú rádióberendezés megfelel a 2014/53/EU irányelvnek. Az EU-megfelelősegi nyilatkozat teljes szövege elérhető a következő internetes címen: http://en.ad-asahidenso.co.jp/euro-compliance/
[MT] Maltese	B'dan, ASAHI DENSO CO., LTD., niddikjara li dan il-tip ta' tagħmir tar-radju [SZ137] huwa konformi ma'd-Direttiva 2014/53/UE. It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li ġej: http://en.ad-asahidenso.co.jp/euro-compliance/
[NL] Dutch	Hierbij verklaar ik, ASAHI DENSO CO., LTD., dat het type radioapparatuur [SZ137] conform is met Richtlijn 2014/53/UE. De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres: http://en.ad-asahidenso.co.jp/euro-compliance/
[PL] Polish	ASAHI DENSO CO., LTD. niniejszym oświadczam, że typ urządzenia radiowego [SZ137] jest zgodny z dyrektywą 2014/53/UE. Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym: http://en.ad-asahidenso.co.jp/euro-compliance/
[PT] Portuguese	O(a) abaixo assinado(a) ASAHI DENSO CO., LTD. declara que o presente tipo de equipamento de rádio [SZ137] está em conformidade com a Diretiva 2014/53/UE. O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet: http://en.ad-asahidenso.co.jp/euro-compliance/
[RO] Romanian	Prin prezenta, ASAHI DENSO CO., LTD. declară că tipul de echipamente radio [SZ137] este în conformitate cu Directiva 2014/53/UE. Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet: http://en.ad-asahidenso.co.jp/euro-compliance/
[SK] Slovak	ASAHI DENSO CO., LTD. týmto vyhlasuje, že rádiové zariadenie typu [SZ137] je v súlade so smernicou 2014/53/EÚ. Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese: http://en.ad-asahidenso.co.jp/euro-compliance/
[SL] Slovenian	ASAHI DENSO CO., LTD. potrjuje, da je tip radijske opreme [SZ137] skladen z Direktivo 2014/53/EU. Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu: http://en.ad-asahidenso.co.jp/euro-compliance/
[FI] Finnish	ASAHI DENSO CO., LTD. vakuuttaa, että radiolaitetyypin [SZ137] on direktiivin 2014/53/EU mukainen. EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa: http://en.ad-asahidenso.co.jp/euro-compliance/
[SV] Swedish	Härmed försäkrar ASAHI DENSO CO., LTD. att denna typ av radioutrustning [SZ137] överensstämmer med direktiv 2014/53/EU. Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress: http://en.ad-asahidenso.co.jp/euro-compliance/

Note) Frequency band(s) in which the radio equipment operates : 119-135 KHz operating at 134.2KHz

Maximum radio frequency power transmitted in the frequency band(s) : 38.9 dBpV/m @ 10m

Country	Importers name	Registered trade name or registered trade mark	TEL FAX	Postal address
GERMANY	SUZUKI DEUTSCHLAND GMBH	SUZUKI DEUTSCHLAND GMBH	49-6251-5700-380 49-6251-5700-389	SUZUKI-ALLEE 7, 64625 BENSHEIM, GERMANY
FRANCE	SUZUKI FRANCE S.A.S.	SUZUKI FRANCE S.A.S.	33-1-3482-1400 33-1-3482-8076	8, AVENUE DES FRERES LUMIERE, 78190 TRAPPES, FRANCE
ITALY	SUZUKI ITALIA S.P.A.	SUZUKI ITALIA S.P.A.	39-011-9213713 39-011-9213748	C.SO FRATELLI KENNEDY 12 10070 ROBASSOMERO (TO) ITALY
U.K.	SUZUKI GB PLC	SUZUKI GB PLC	44-1908-336600 44-1908-336704	STEINBECK CRESCENT, SNELSHALL WEST, MILTON KEYNES MK4 4AE, U.K.
SPAIN	SUZUKI MOTOR IBERICA S.A.U	SUZUKI MOTOR IBERICA S.A.U	34-91-151-9500 34-91-151-9599	CALLE CARLOS SAINZ 35-POLIGONO, CIUDAD DEL AUTOMOVIL, 28914, LEGANES, MADRID SPAIN
AUSTRIA	SUZUKI AUSTRIA AUTOMOBIL HANDELS GESELLSCHAFT M.B.H.	SUZUKI AUSTRIA AUTOMOBIL HANDELS GESELLSCHAFT M.B.H.	43-662-2155-353 43-662-2155-900	MUNCHNER BUNDESSTRASSE 160 A-5020 SALZBURG, AUSTRIA
HUNGARY	MAGYAR SUZUKI CORPORATION LTD.	MAGYAR SUZUKI CORPORATION LTD.	36-23-803-990 36-23-803-951	H-2040 BUDAORS KELETI UTCA 2, HUNGARY
FINLAND	SUZUKI DEUTSCHLAND GMBH, FINNISH BRANCH	SUZUKI DEUTSCHLAND GMBH, FINNISH BRANCH	358 10 321 2000	RAJAMAANKAARI 5, FI-02970, ESPOO, FINLAND
POLAND	SUZUKI MOTOR POLAND SP. Z O.O.	SUZUKI MOTOR POLAND SP. Z O.O.	48-22-329-4104 48-22-329-4150	UL. POLCZYNSKA 10, 01-378 WARSAW, POLAND
NETHERLANDS	B.V. NIMAG	B.V. NIMAG	31-347-349-749 31-347-349-700	LANGE DREEF 12 4130 EB VIANEN THE NETHERLANDS
SWEDEN	KGK MOTOR AB	KGK MOTOR AB	46-892-3000 46-892-3345	HAMMARBACKEN 8, SE-191 81 SOLLENTUNA, SWEDEN
DENMARK	C. REINHARDT A/S	C. REINHARDT A/S	45-4483-0910 45-4468-0399	INDUSTRI-PARKEN 21, DK-2750 BALLERUP, DENMARK
SWITZERLAND	SUZUKI AUTOMOBILE SCHWEIZ AG	SUZUKI AUTOMOBILE SCHWEIZ AG	41-62-788-87-90 41-62-788-87-91	EMIL-FREY-STRASSE, 5745 SAFENWIL, SWITZERLAND
BELGIUM	MOTEO TWO WHEELS BELUX NV.	MOTEO TWO WHEELS BELUX NV.	32-3-4500411 32-3-4500440	SATENROZEN 8, B-2550 KONTICH, BELGIUM
PORTUGAL	MOTEO PORTUGAL, S.A.	MOTEO PORTUGAL, S.A.	351-234-300760 351-234-300761	R. JOAO FRANCISCO DO CASAL APARTADO 3072 3801-101 AVEIRO, PORTUGAL
NORWAY	ERLING SANDE AS	ERLING SANDE AS	47-32-98-93-00 47-31-30-92-09	DRÅPEN 12, DRAMMEN, NORWAY
GREECE	SFAKIANAKIS S.A.	SFAKIANAKIS S.A.	30-210-349-9000 30-210-347-6191	5-7, SIDIROKASTROU STR & PIDNAS STR, 118 55 ATHENS, GREECE
CYPRUS	A.TRICOMITIS MOTORS LIMITED	A.TRICOMITIS MOTORS LIMITED	357-24-819700 357-24-637727	P. O. BOX 40459, 35 SPYROU KYPRIANOY, TRICOMITIS BUILDING, LARNACA, 6013 CY, CYPRUS
IRELAND	PRIORY CYCLE & MOTORCYCLE MANUFACTURING LTD.	PRIORY CYCLE & MOTORCYCLE MANUFACTURING LTD.	353-1-8307300 353-1-8307380	75-77 BOYNE ROAD, DUBLIN INDUSTRIAL ESTATE DUBLIN 11, IRELAND
ICELAND	SUZUKI UMBODID EHF	SUZUKI UMBODID EHF	354-568-5100 354-588-8211	SKEIFAN 17, 108 REYKJAVIK, ICELAND
MALTA	INDUSTRIAL MOTORS LTD.	INDUSTRIAL MOTORS LTD.	356-20-160000	1, ANTONIO BOSIO STREET MSDA, MSD1341 MALTA



ASAHI DENSO CO.,LTD

6-2-1 Somejidai, Hamakita-ku, Hamamatsu, Shizuoka, 434-0046 JAPAN

Importers name : AUTO International


Model No. SZ137

Frequency Range : 119-135kHz operating at 134.2kHz

RF Power Output : 38.9dBuV/m [@10m]

© UA.TR.052

מספר אישור אלחוטי של משרד התקשורת הוא 51-70019
אסור להחליף את האנטנה המקורית של המכשיר ולא
לעשות בו כל שינוי טכני אחר

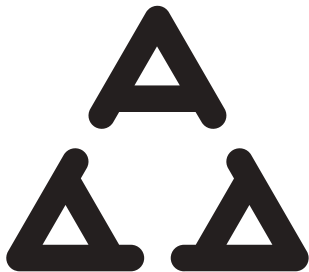

H 005 19



TRA

REGISTERED No:

ER73541/19

DEALER No:

DA83368/19



Продукты	Контроллер иммобилайзера
Модель	SZ137U
Производитель	ASAHI DENSO CO.,LTD. AD
Страна происхождения	Япония
Адрес	6-2-1 Somejidai, Hamakita-ku, Shizuoka 434-0046, Япония
Телефон	(+81)53-586-7383
Факс	(+81)53-584-1589

Дата производства указана на этикетке продукта.

Импортеры	ООО «СУЗУКИ МОТОР РУС»
Телефон	+7 (495) 780-9071
Факс	+7 (495) 780-9072
Адрес	129323, Россия, Москва, ул. Снежная, 26



The manufacturer Name ASAHI DENSO CO.,LTD

Address of the manufacturer 6-2-1 Somejidai, Hamakita-ku,
Hamamatsu, Shizuoka, 434-0046 Japan

Brand Name SUZUKI

Product Description Immobilizer

Model Name SZ137

TRC type approval's number. TRC/36/6515/2020

AGRÉÉ PAR L'ANRT MAROC

Numéro d'agrément :MR 21935 ANRT 2019

Date d'agrément :27/12/2019

低功率電波輻射性電機管理辦法

第十二條

經型式認證合格之低功率射頻電機，非經許可，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。

第十四條

低功率射頻電機之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。

前項合法通信，指依電信法規定作業之無線電通信。

低功率射頻電機須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

ประเทศไทย
เครื่อง ไตรศมนาคมและอุปกรณ์นี้
มีความสอดคล้องตามข้อกำหนดของ
กทช.